

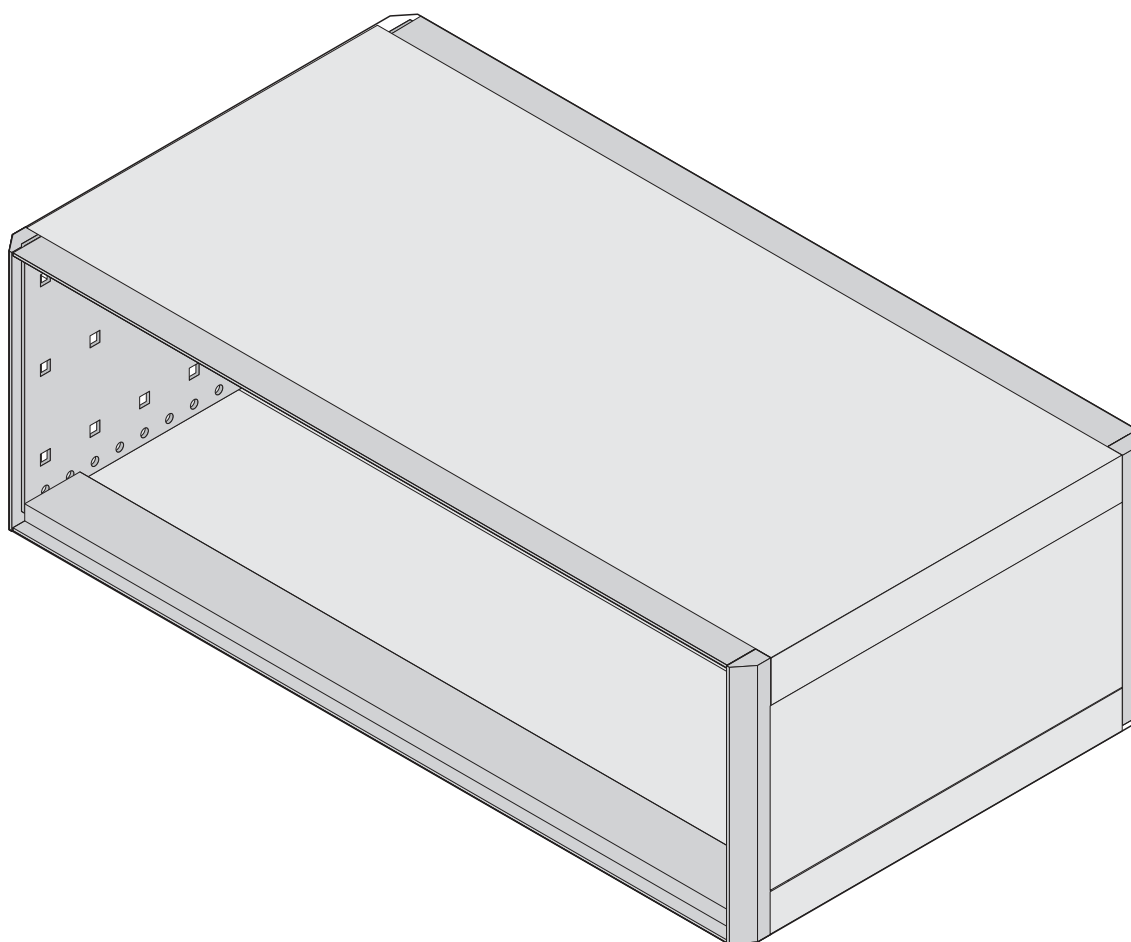
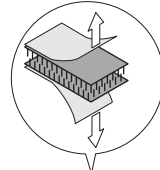
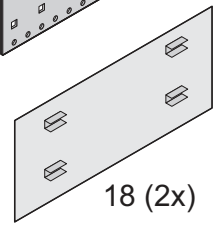
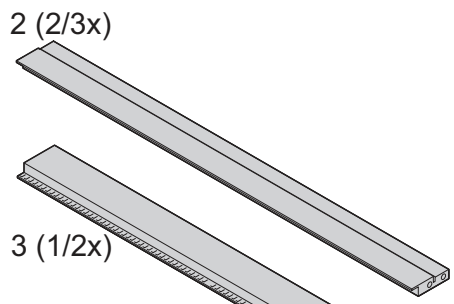


Benutzeranleitung
ratiopacPRO
ratiopacPRO-air

User Manual
ratiopacPRO
ratiopacPRO-air

Instructions utilisateur
ratiopacPRO
ratiopacPRO-air




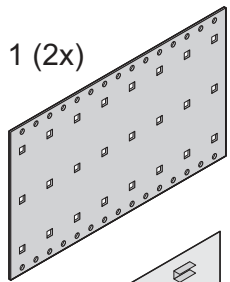


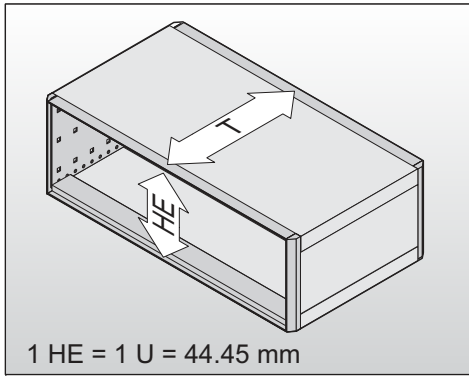

- Torx 20
M4 x 10
9 (8x)
- Torx 20
M4 x 14
10 (8x)
- Torx 20
M4 x 8
17 (8x)


ratiopac PRO

ratiopac PRO-air

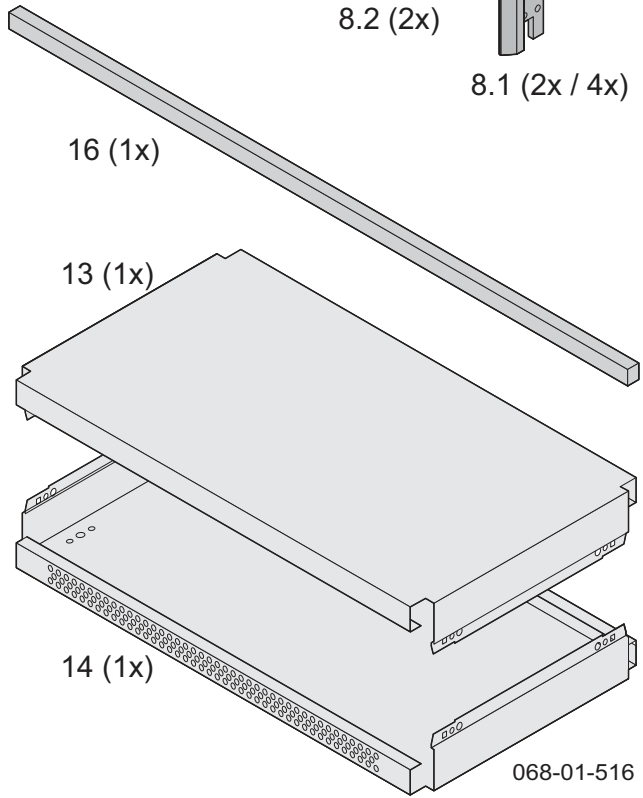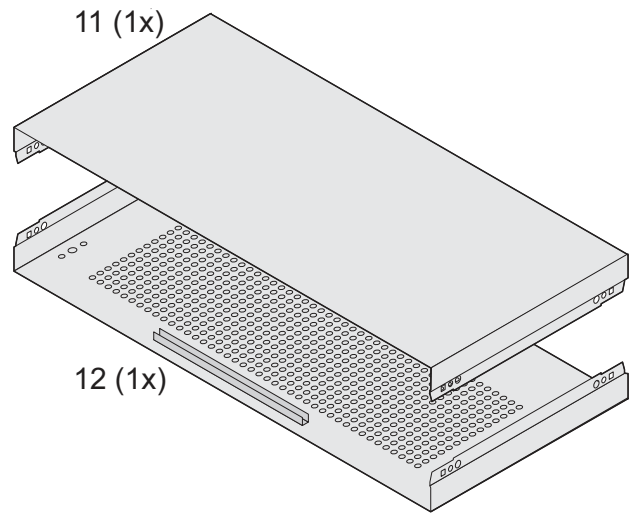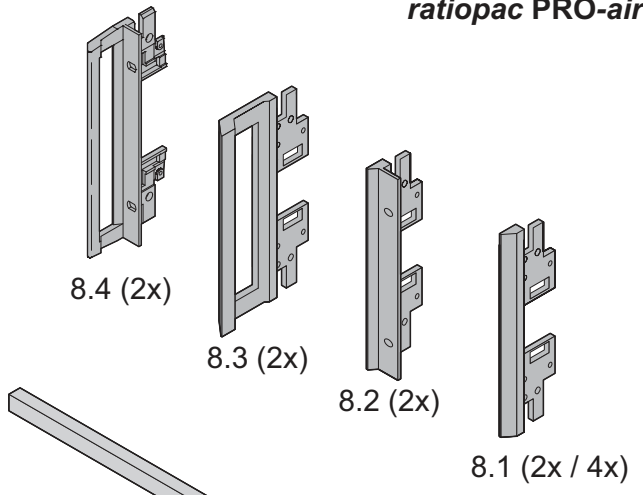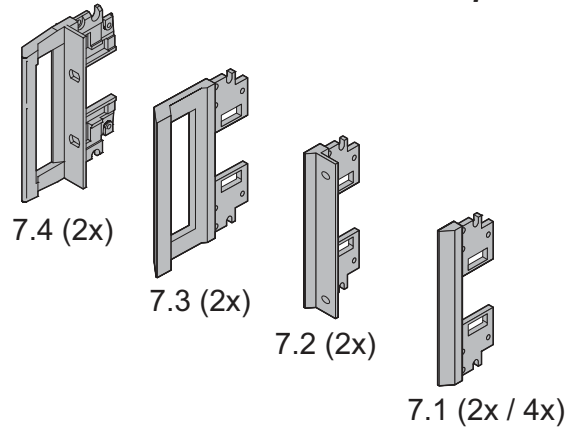

068-01-516

Demontage
Disassembly
Démontage

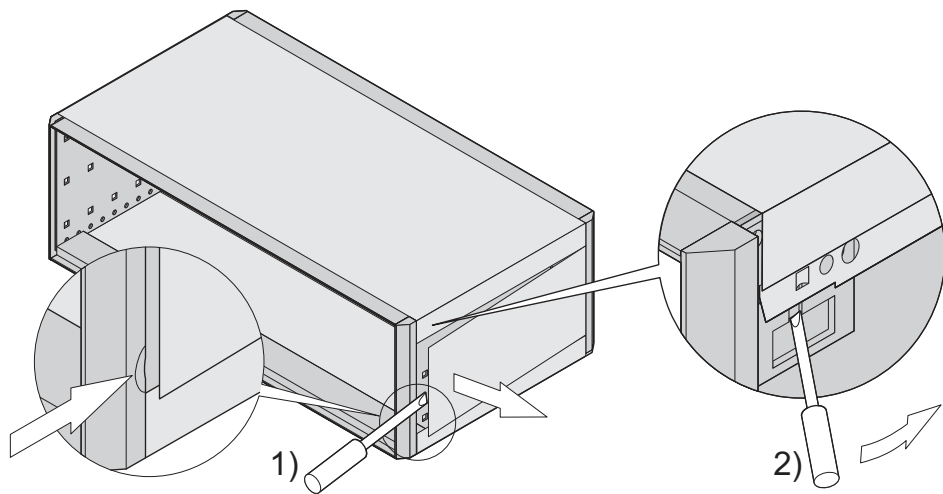

A





3 HE / U

4 HE / U

5 HE / U

6 HE / U

ratiopacPRO

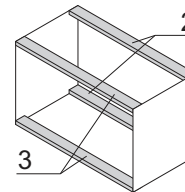
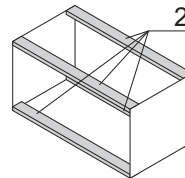
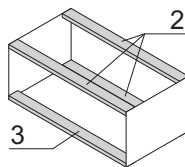
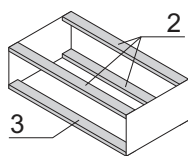


ratiopacPRO-air



4 HE / U

5 HE / U

7 HE / U

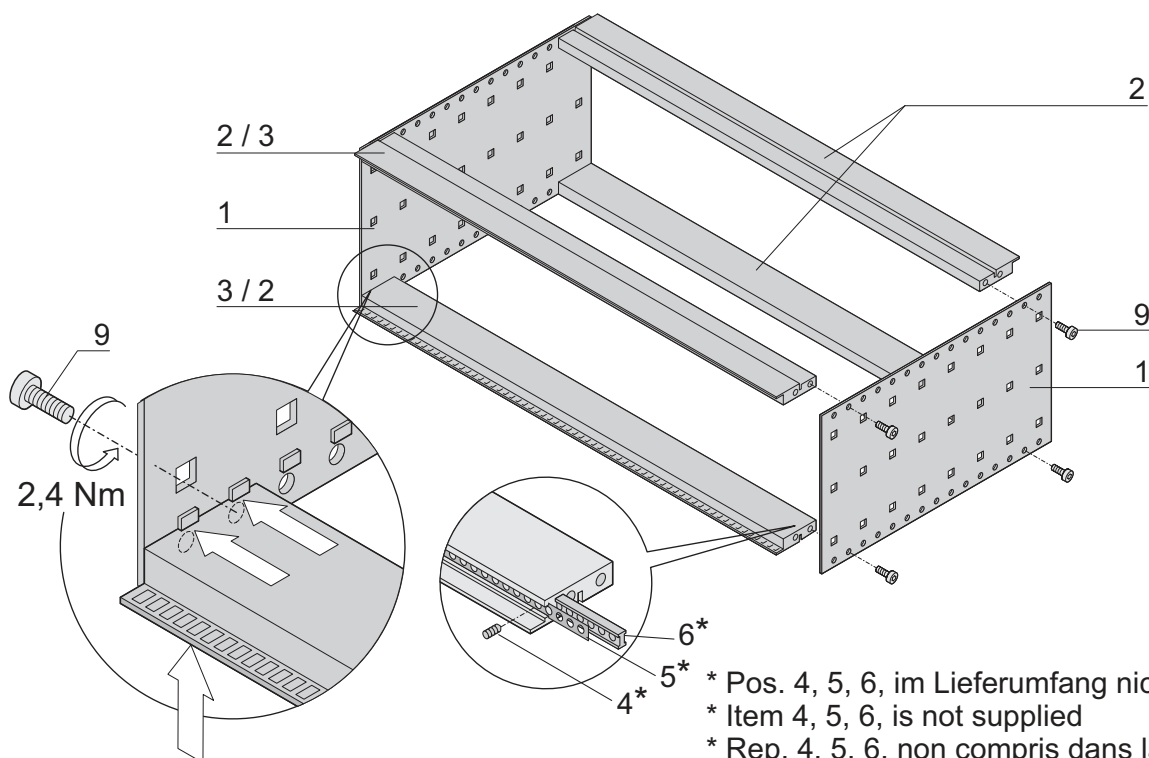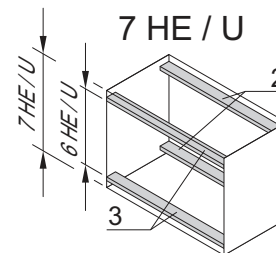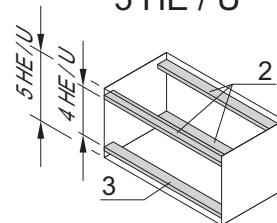
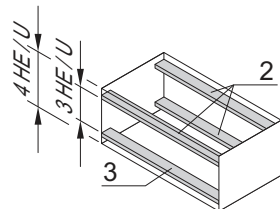


* Pos. 4, 5, 6, im Lieferumfang nicht enthalten
* Item 4, 5, 6, is not supplied
* Rep. 4, 5, 6, non compris dans la livraison

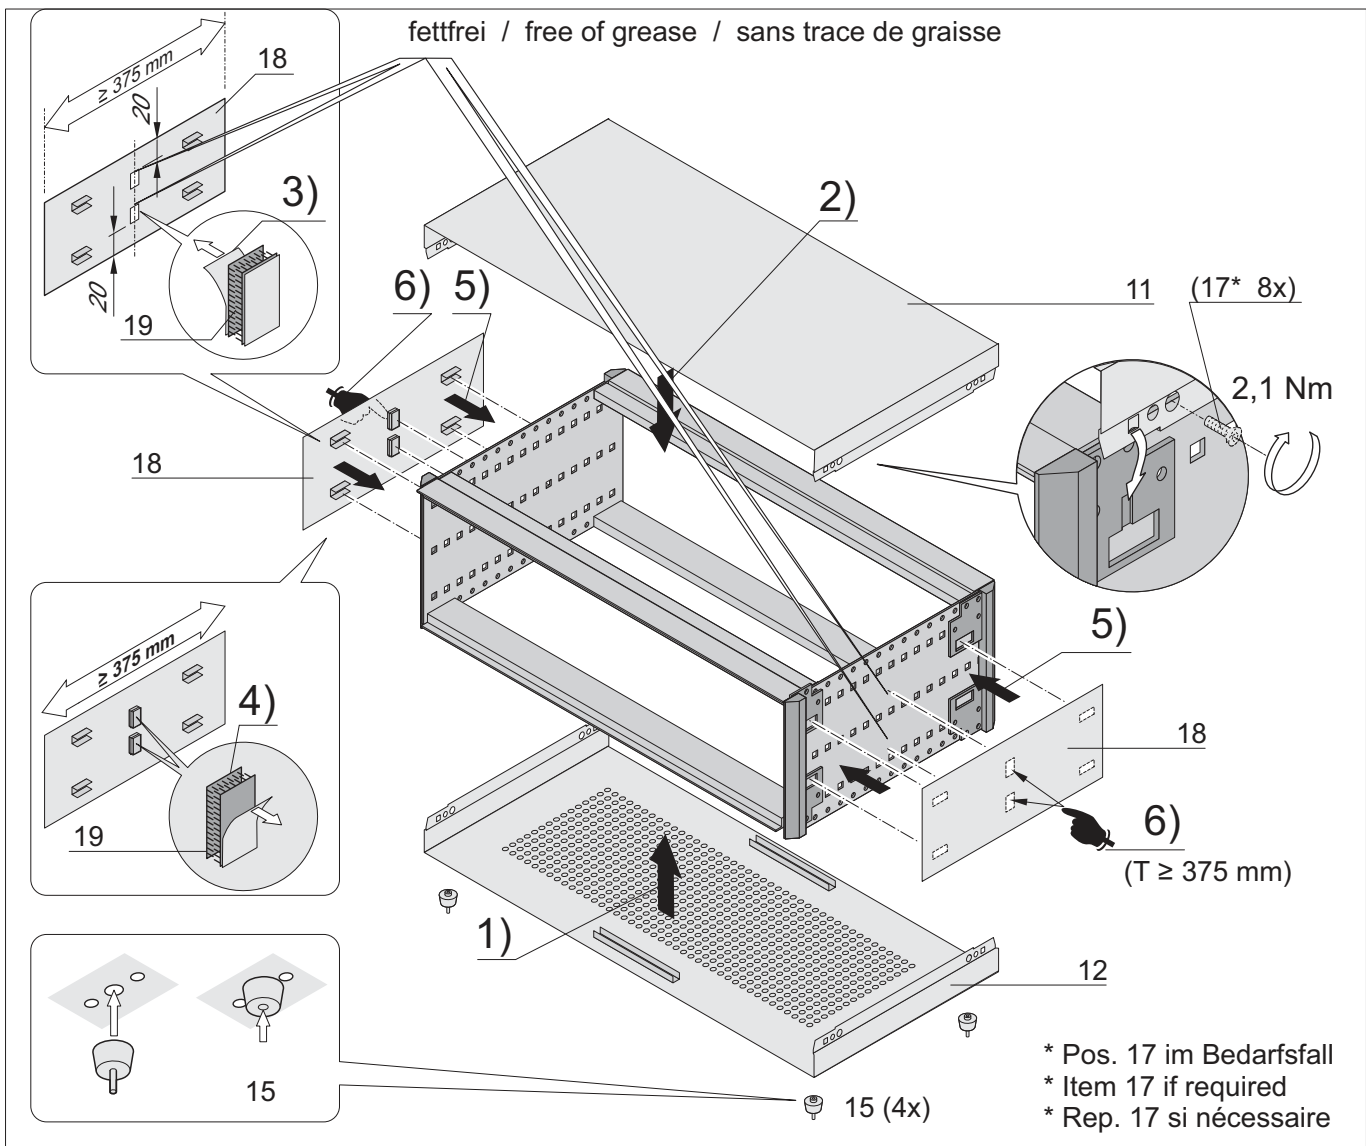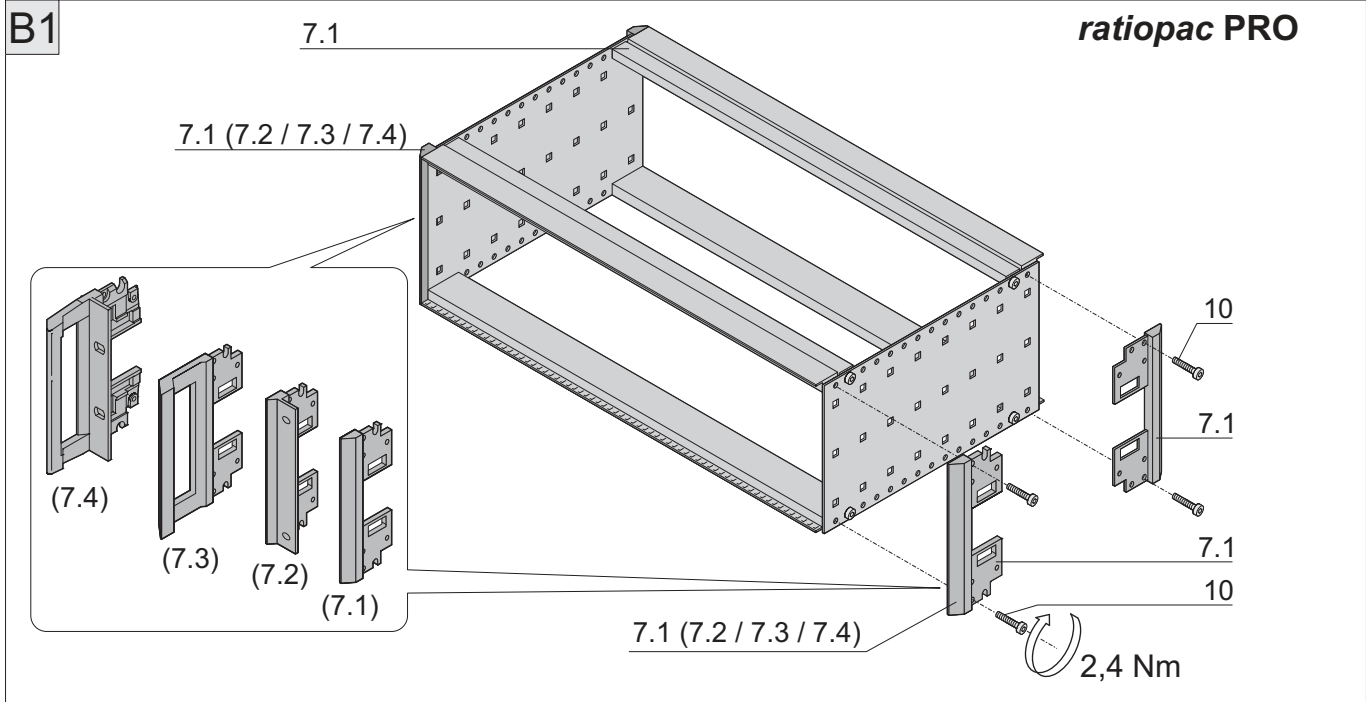


B2


ratiopac PRO-air

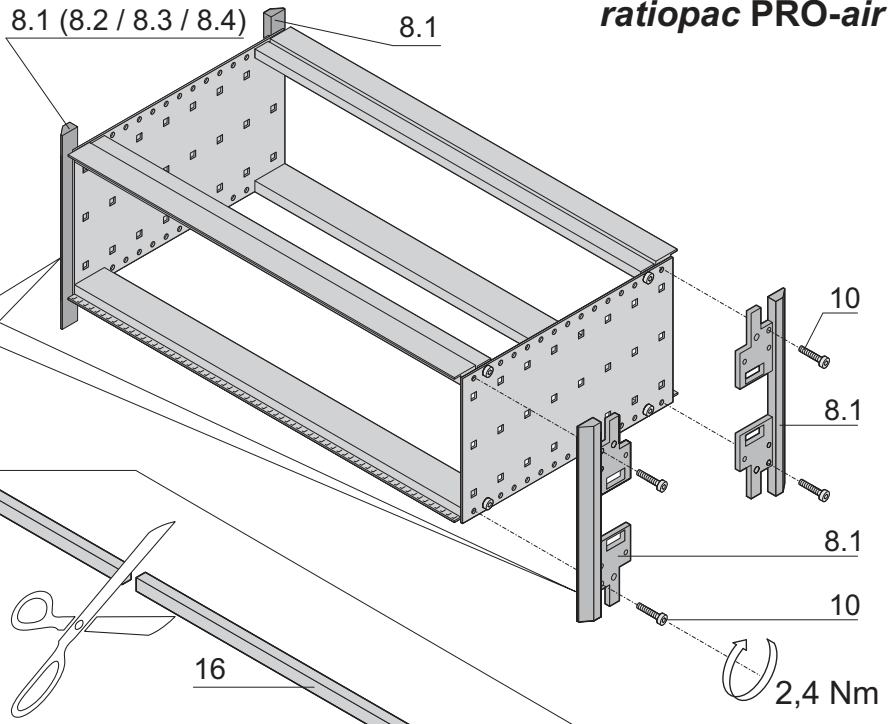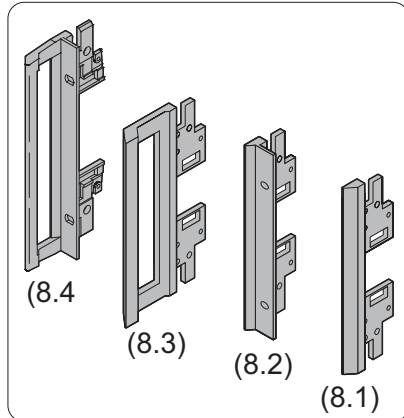

Pos./Item./Rep.	TE/HP/F	mm
16	42	218
16	63	325
16	84	432

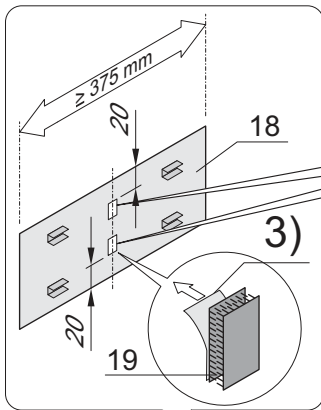

fettfrei / free of grease / sans trace de graisse

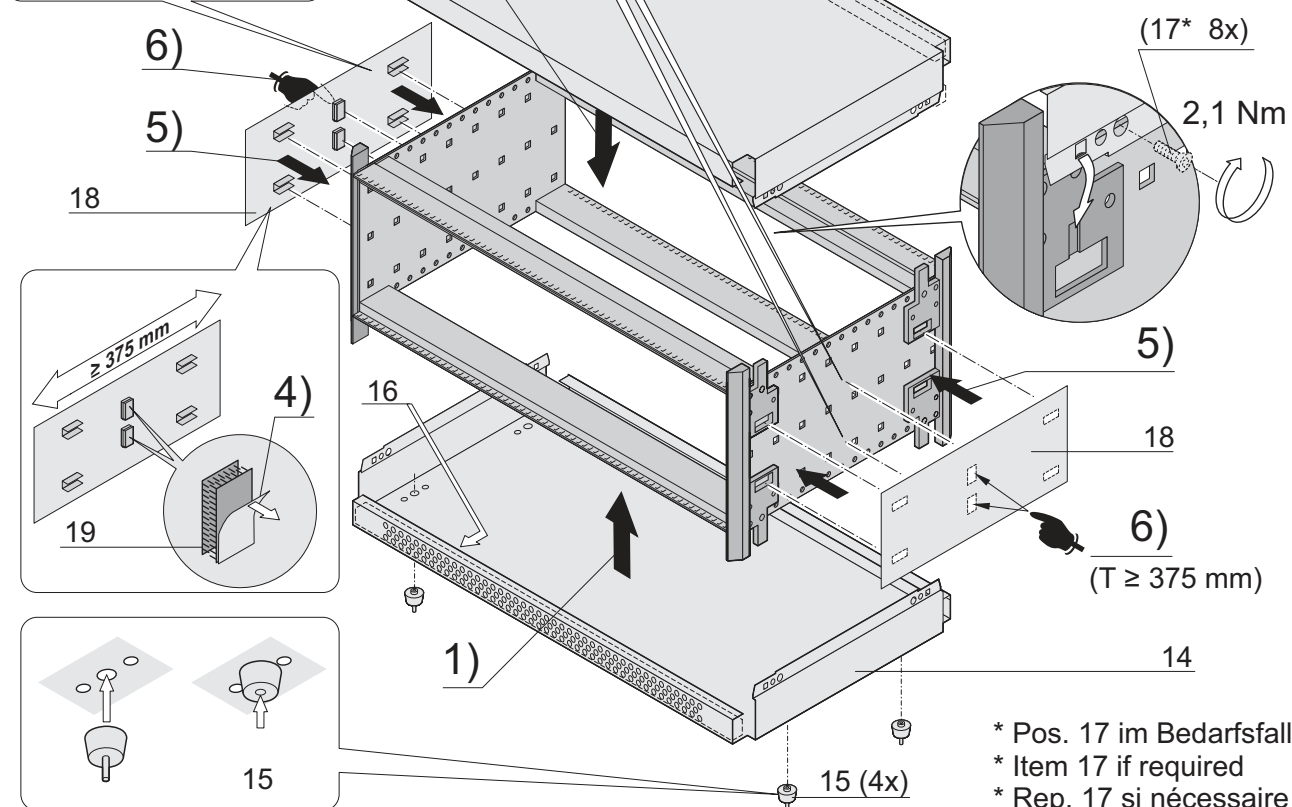

- * Pos. 17 im Bedarfsfall
- * Item 17 if required
- * Rep. 17 si nécessaire