



Montageanweisung
KRANÖSEN
VAR ISTAR

Assembly instructions
LIFTING EYES
VAR ISTAR


Instructions de montage
ANNEAU DE LEVAGE
VAR ISTAR

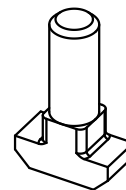

 
1 (4x)



2 (4x)

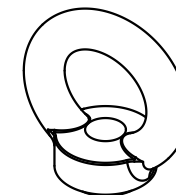



3 (4x)

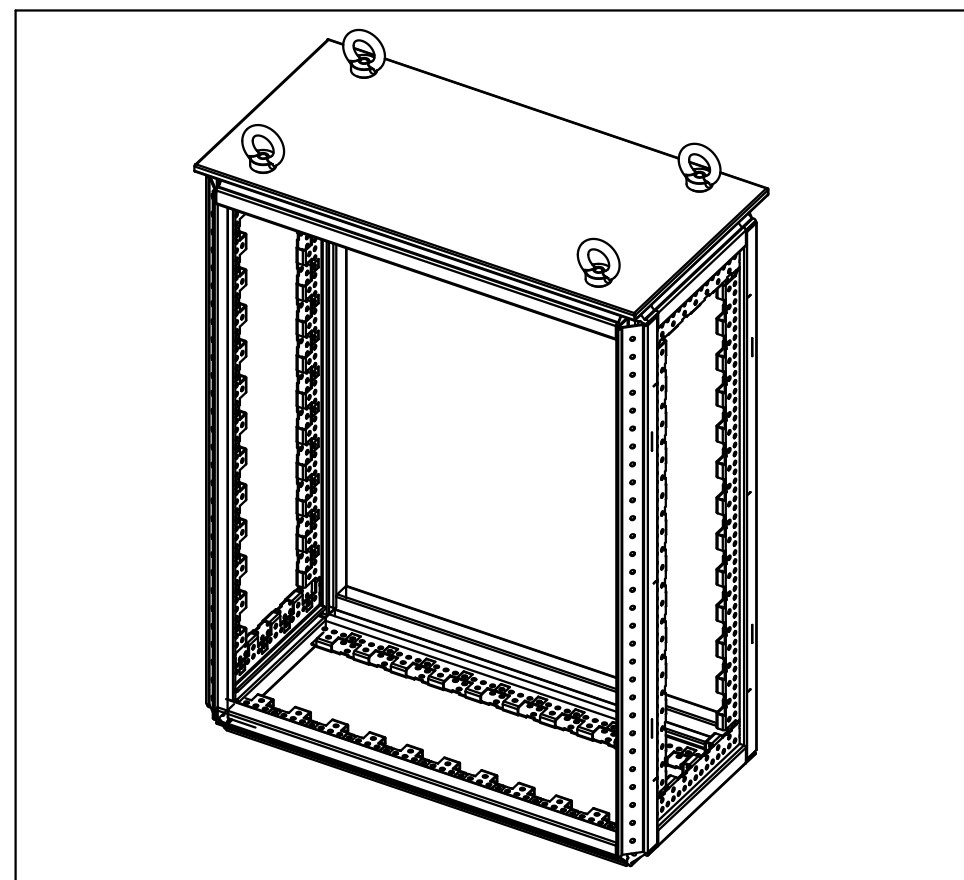

Sicherheitshinweis
für Kranösen MI2

Safety instructions
for lifting eyes MI2

Consignes de sécurité
pour les anneaux de levage MI2

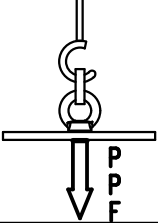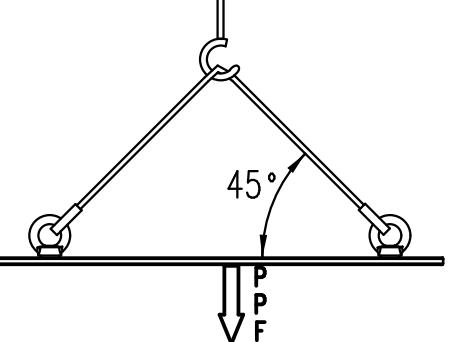Belastungsart Direction of lift Mode d'accrochage	Maximale Belastbarkeit Maximum load-carrying capacity Charge admissible
	340kg Gültig für je eine Kranöse Valid for a single lifting eye Poids pour un anneau
	240kg Gültig für 2 Kranösen Valid for 2 lifting eyes Poids pour 2 anneaux
<p>Vorgeschriebene Werte dürfen nicht überschritten werden. Specified values must not be exceeded. Ne pas dépasser les valeurs indiquées.</p>	

