



Montageanweisung  
SCHWENKRAHMENARRETIERUNG 120°  
VAR ISTAR


Assembly instructions  
SWING FRAME STOP 120°  
VAR ISTAR

Instructions de montage  
ARRET CADRE PIVOTANT 120°  
VAR ISTAR

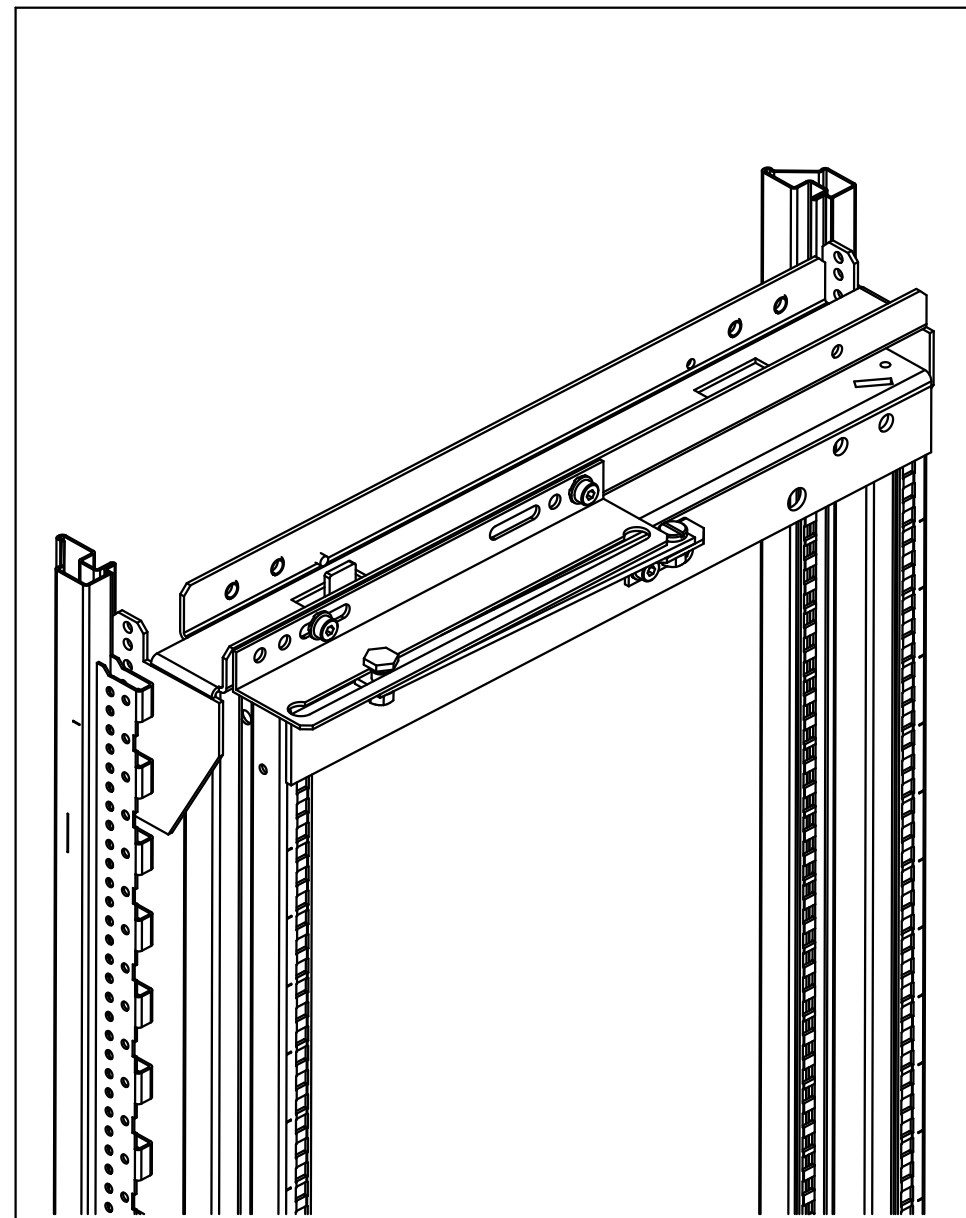


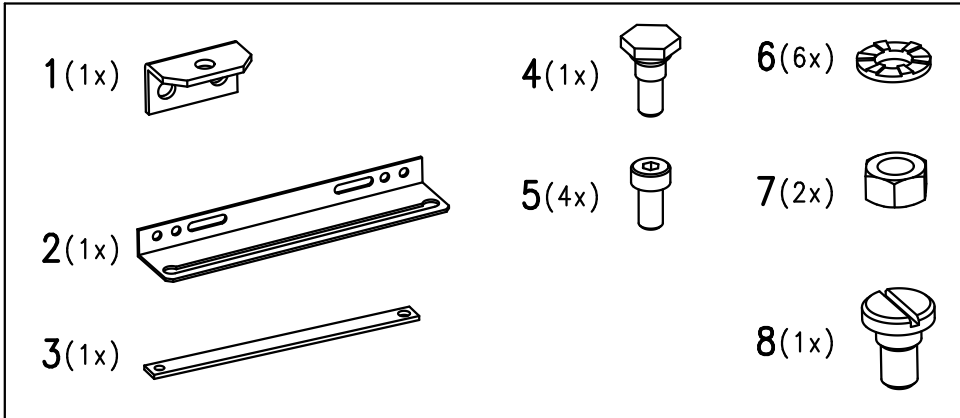

SCHRANKBREITE 600      CABINET WIDTH 600      LARGEUR ARMOIRE 600

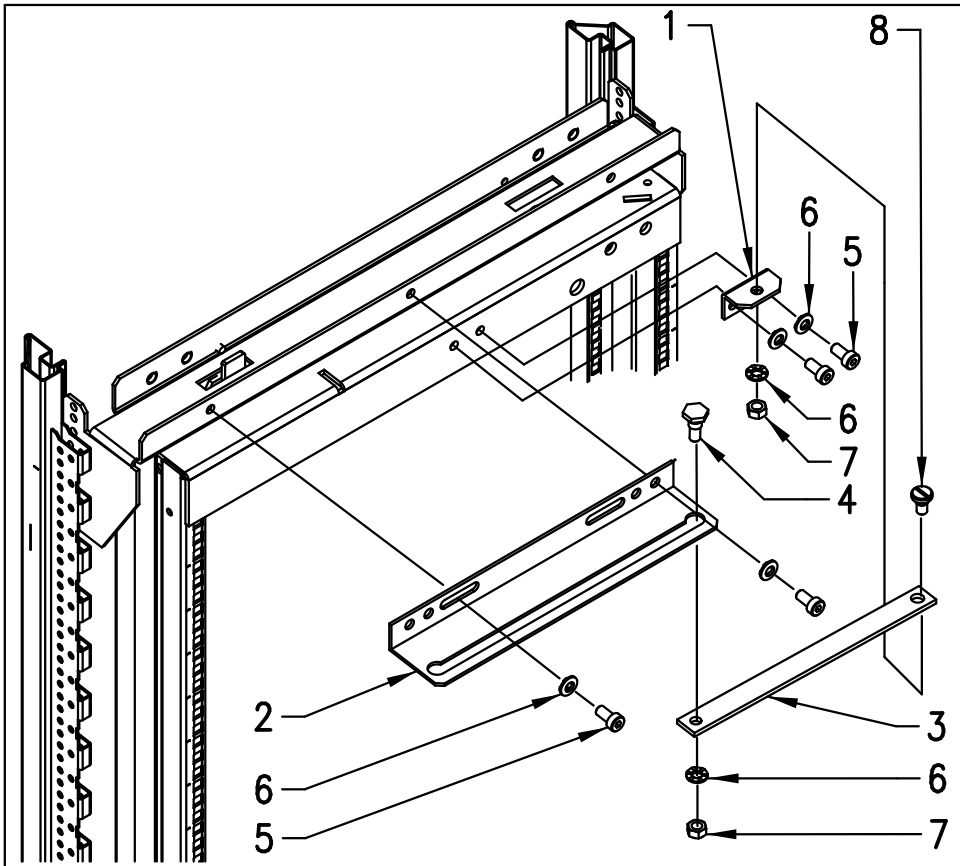

SCHRANKBREITE 800      CABINET WIDTH 800      LARGEUR ARMOIRE 800  
 ASYMMETRISCHE MONTAGE      ASYMMETRICAL ASSEMBLY      MONTAGE ASYMETRIQUE

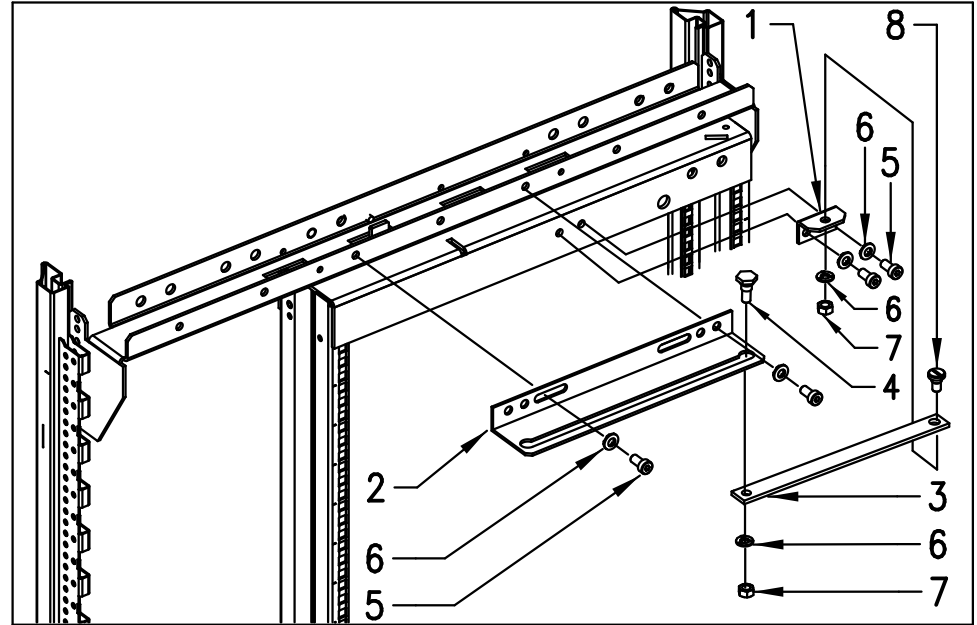

SCHRANKBREITE 800      CABINET WIDTH 800      LARGEUR ARMOIRE 800  
 SYMMETRISCHE MONTAGE      SYMMETRICAL ASSEMBLY      MONTAGE SYMETRIQUE

