
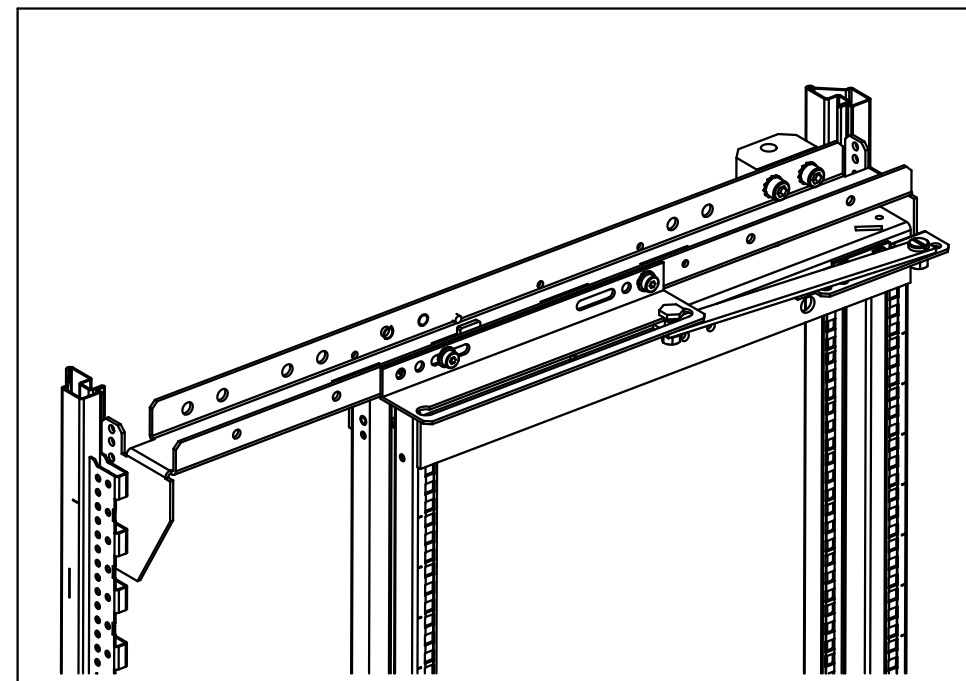



Montageanweisung
SCHWENKRAHMENARRETIERUNG 160°
VAR ISTAR

Assembly instructions
SWING FRAME STOP 160°
VAR ISTAR

Instructions de montage
ARRET CADRE PIVOTANT 160°
VAR ISTAR

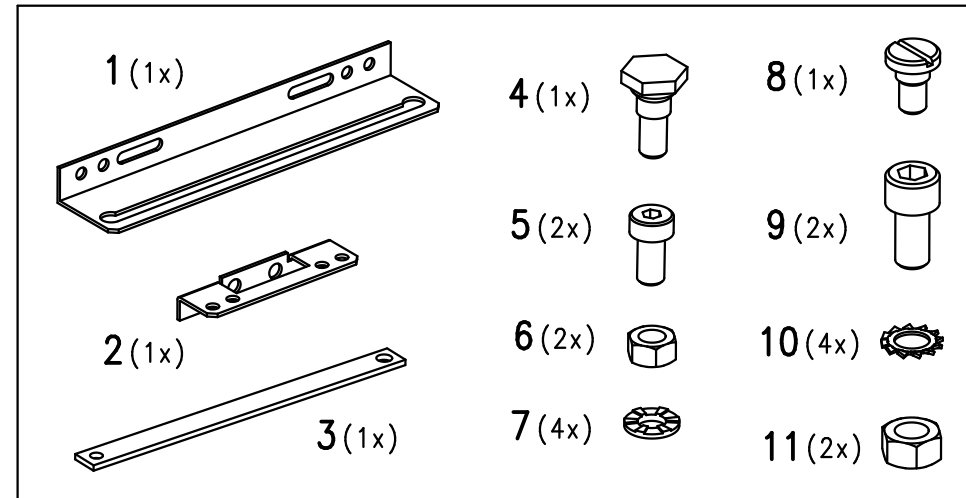

ASYMMETRISCHE MONTAGE ASYMMETRICAL ASSEMBLY MONTAGE ASYMETRIQUE

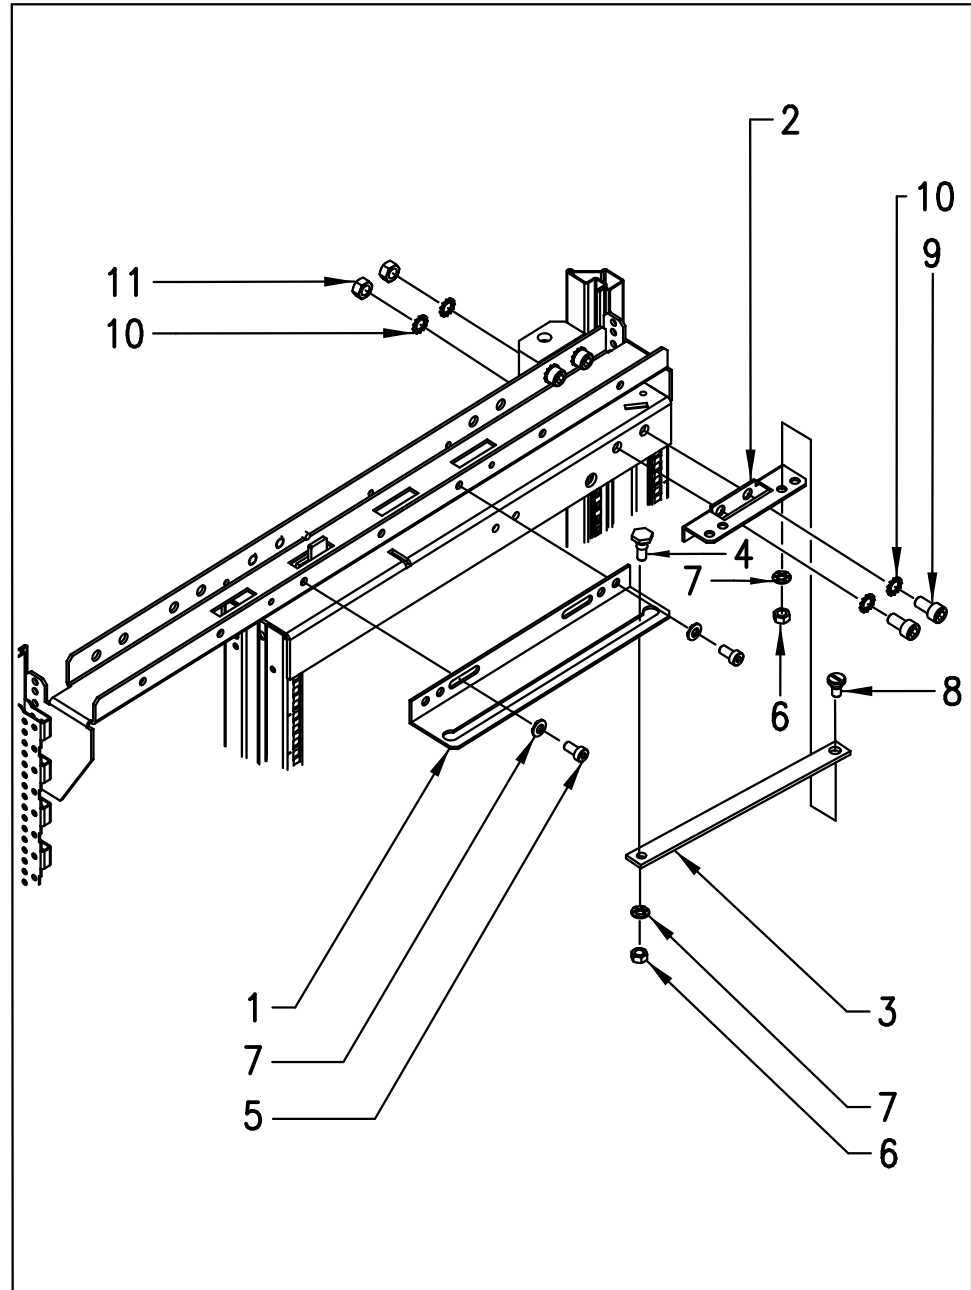

SYMMETRISCHE MONTAGE SYMMETRICAL ASSEMBLY MONTAGE SYMETRIQUE

