




PIGEON POINT SHELF MANAGER

External Interface Reference

Release 2.5.3
April 30, 2008

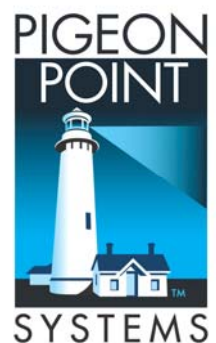

© 2002-2008 Pigeon Point Systems. All rights reserved.

Pigeon Point™ Shelf Manager and ShMM-500

This document is furnished under license and may be used or copied only in accordance with the terms of such license. The content of this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by Pigeon Point Systems. Pigeon Point Systems assumes no responsibility or liability for any errors or inaccuracies that may appear in this book.

Except as permitted by such license, no part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, manual, recording, or otherwise, without the prior written permission of Pigeon Point Systems.

Pigeon Point and Monterey Linux are trademarks of Pigeon Point Systems. Linux is a registered trademark of Linus Torvalds.

The Pigeon Point™ Shelf Manager uses an implementation of the MD5 Message-Digest algorithm that is derived from the RSA Data Security, Inc. MD5 Message-Digest Algorithm.

Table of Contents

1	ABOUT THIS DOCUMENT	13
1.1	SHELF MANAGER DOCUMENTATION	13
1.2	CONVENTIONS USED IN THIS DOCUMENT	13
1.3	ADDITIONAL RESOURCES	14
2	INTRODUCTION	15
3	COMMAND LINE INTERFACE	16
3.1	STARTING THE COMMAND LINE INTERFACE	16
3.2	COMMAND LINE INTERFACE SUMMARY TABLE	18
3.3	SHORTHAND NOTATIONS	27
3.4	ACTIVATE	29
3.4.1	Syntax	29
3.4.2	Purpose	29
3.4.3	Examples	29
3.5	AIRFILTERREPLACED	31
3.5.1	Syntax	31
3.5.2	Purpose	31
3.5.3	Examples	31
3.6	ALARM	32
3.6.1	Syntax	32
3.6.2	Purpose	32
3.6.3	Examples	32
3.7	AMCPORTSTATE	34
3.7.1	Syntax	34
3.7.2	Purpose	34
3.7.3	Example	34
3.8	BOARD	36
3.8.1	Syntax	36
3.8.2	Purpose	36
3.8.3	Example	37
3.9	BOARDRESET	39
3.9.1	Syntax	39
3.9.2	Purpose	39
3.9.3	Examples	40
3.10	BUSRES	41
3.10.1	Syntax	41
3.10.2	Purpose	41
3.10.3	info	42
3.10.4	release force <resource>	43
3.10.5	lock unlock	44
3.10.6	query	45
3.10.7	setowner	46
3.10.8	sendbusfree	47
3.11	DEACTIVATE	48
3.11.1	Syntax	48
3.11.2	Purpose	48
3.11.3	Examples	48
3.12	DEBUGLEVEL	49
3.12.1	Syntax	49
3.12.2	Purpose	49
3.12.3	Examples	50
3.13	EXIT/QUIT	51

3.13.1	<i>Syntax</i>	51
3.13.2	<i>Purpose</i>	51
3.13.3	<i>Examples</i>	51
3.14	FANS.....	52
3.14.1	<i>Syntax</i>	52
3.14.2	<i>Purpose</i>	52
3.14.3	<i>Examples</i>	52
3.15	FRU.....	54
3.15.1	<i>Syntax</i>	54
3.15.2	<i>Purpose</i>	54
3.15.3	<i>Examples</i>	55
3.16	FRUDATA.....	57
3.16.1	<i>Syntax</i>	57
3.16.2	<i>Purpose</i>	57
3.16.3	<i>Examples</i>	57
3.17	FRUDATAR.....	59
3.17.1	<i>Syntax</i>	59
3.17.2	<i>Purpose</i>	59
3.17.3	<i>Examples</i>	59
3.18	FRUDATAW.....	60
3.18.1	<i>Syntax</i>	60
3.18.2	<i>Purpose</i>	60
3.18.3	<i>Examples</i>	61
3.19	FRUINFO.....	63
3.19.1	<i>Syntax</i>	63
3.19.2	<i>Purpose</i>	63
3.19.3	<i>Examples</i>	63
3.20	FRUCONTROL.....	70
3.20.1	<i>Syntax</i>	70
3.20.2	<i>Purpose</i>	70
3.20.3	<i>Examples</i>	71
3.21	GETBOOTDEV.....	72
3.21.1	<i>Syntax</i>	72
3.21.2	<i>Purpose</i>	72
3.21.3	<i>Examples</i>	72
3.22	GETFANLEVEL.....	73
3.22.1	<i>Syntax</i>	73
3.22.2	<i>Purpose</i>	73
3.22.3	<i>Examples</i>	73
3.23	GETFANPOLICY.....	74
3.23.1	<i>Syntax</i>	74
3.23.2	<i>Purpose</i>	74
3.23.3	<i>Examples</i>	74
3.24	GETFRULEDSTATE.....	76
3.24.1	<i>Syntax</i>	76
3.24.2	<i>Purpose</i>	76
3.24.3	<i>Examples</i>	76
3.25	GETHYSTERESIS.....	79
3.25.1	<i>Syntax</i>	79
3.25.2	<i>Purpose</i>	79
3.25.3	<i>Examples</i>	79
3.26	GETIPMBSTATE.....	81
3.26.1	<i>Syntax</i>	81
3.26.2	<i>Purpose</i>	81
3.26.3	<i>Examples</i>	81
3.27	GETLANCONFIG.....	83

3.27.1	Syntax.....	83
3.27.2	Purpose	83
3.27.3	Examples.....	85
3.27.4	auth_support.....	85
3.27.5	auth_enables	86
3.27.6	ip.....	87
3.27.7	ip_source.....	87
3.27.8	mac.....	88
3.27.9	subnet_mask.....	88
3.27.10	ipv4_hdr_param.....	89
3.27.11	pri_rmcp_port.....	89
3.27.12	sec_rmcp_port.....	90
3.27.13	arp_control.....	90
3.27.14	arp_interval	91
3.27.15	dft_gw_ip.....	91
3.27.16	dft_gw_mac.....	91
3.27.17	backup_gw_ip.....	92
3.27.18	backup_gw_mac	92
3.27.19	community.....	93
3.27.20	destination_count.....	93
3.27.21	destination_type	94
3.27.22	destination_address.....	95
3.28	GETPEFCONFIG.....	96
3.28.1	Syntax.....	96
3.28.2	Purpose	96
3.28.3	Examples.....	97
3.28.4	control	98
3.28.5	action_control.....	98
3.28.6	startup_delay	99
3.28.7	alert_startup_delay	99
3.28.8	event_filter_count.....	100
3.28.9	event_filter.....	100
3.28.10	event_filter_data1.....	101
3.28.11	alert_policy_count.....	102
3.28.12	alert_policy.....	102
3.28.13	system_guid.....	103
3.28.14	alert_string_count.....	104
3.28.15	alert_string_key.....	104
3.28.16	alert_string.....	105
3.28.17	oem_filter_count.....	105
3.28.18	oem_filter.....	106
3.28.19	pet_format.....	107
3.29	GETSENSOREVENTENABLE	108
3.29.1	Syntax.....	108
3.29.2	Purpose	108
3.29.3	Examples.....	109
3.30	GETTHRESHOLD/THRESHOLD	110
3.30.1	Syntax.....	110
3.30.2	Purpose	110
3.30.3	Examples.....	111
3.31	HELP	112
3.31.1	Syntax.....	112
3.31.2	Purpose	112
3.31.3	Examples.....	112
3.32	IPMC.....	116
3.32.1	Syntax.....	116

3.32.2	<i>Purpose</i>	116
3.32.3	<i>Examples</i>	117
3.33	LOCALADDRESS.....	119
3.33.1	<i>Syntax</i>	119
3.33.2	<i>Purpose</i>	119
3.33.3	<i>Examples</i>	119
3.34	MINFANLEVEL.....	120
3.34.1	<i>Syntax</i>	120
3.34.2	<i>Purpose</i>	120
3.34.3	<i>Examples</i>	120
3.35	NETWORKELEMENTID.....	123
3.35.1	<i>Syntax</i>	123
3.35.2	<i>Purpose</i>	123
3.35.3	<i>Examples</i>	123
3.36	POLL.....	124
3.36.1	<i>Syntax</i>	124
3.36.2	<i>Purpose</i>	124
3.36.3	<i>Examples</i>	124
3.37	SEL.....	125
3.37.1	<i>Syntax</i>	125
3.37.2	<i>Purpose</i>	125
3.37.3	<i>Examples</i>	125
3.38	SENDAMC.....	129
3.38.1	<i>Syntax</i>	129
3.38.2	<i>Purpose</i>	129
3.38.3	<i>Examples</i>	129
3.39	SENCMD.....	130
3.39.1	<i>Syntax</i>	130
3.39.2	<i>Purpose</i>	130
3.39.3	<i>Examples</i>	130
3.40	SENSOR.....	131
3.40.1	<i>Syntax</i>	131
3.40.2	<i>Purpose</i>	131
3.40.3	<i>Examples</i>	132
3.41	SENSORDATA.....	136
3.41.1	<i>Syntax</i>	136
3.41.2	<i>Purpose</i>	136
3.41.3	<i>Examples</i>	137
3.42	SENSORREAD.....	139
3.42.1	<i>Syntax</i>	139
3.42.2	<i>Purpose</i>	139
3.42.3	<i>Examples</i>	139
3.43	SESSION.....	141
3.43.1	<i>Syntax</i>	141
3.43.2	<i>Purpose</i>	141
3.43.3	<i>Examples</i>	141
3.44	SETBOOTDEV.....	142
3.44.1	<i>Syntax</i>	142
3.44.2	<i>Purpose</i>	142
3.44.3	<i>Examples</i>	142
3.45	SETEXTRACTED.....	143
3.45.1	<i>Syntax</i>	143
3.45.2	<i>Purpose</i>	143
3.45.3	<i>Examples</i>	143
3.46	SETFANLEVEL.....	144
3.46.1	<i>Syntax</i>	144

3.46.2	<i>Purpose</i>	144
3.46.3	<i>Examples</i>	144
3.47	SETFANPOLICY.....	145
3.47.1	<i>Syntax</i>	145
3.47.2	<i>Purpose</i>	145
3.47.3	<i>Examples</i>	145
3.48	SETRULEDSTATE.....	147
3.48.1	<i>Syntax</i>	147
3.48.2	<i>Purpose</i>	147
3.48.3	<i>Examples</i>	148
3.49	SETHYSTERESIS.....	149
3.49.1	<i>Syntax</i>	149
3.49.2	<i>Purpose</i>	149
3.49.3	<i>Examples</i>	149
3.50	SETIPMBSTATE.....	150
3.50.1	<i>Syntax</i>	150
3.50.2	<i>Purpose</i>	150
3.50.3	<i>Examples</i>	150
3.51	SETLANCONFIG.....	151
3.51.1	<i>Syntax</i>	151
3.51.2	<i>Purpose</i>	151
3.51.3	<i>auth_enables</i>	152
3.51.4	<i>ip</i>	153
3.51.5	<i>subnet_mask</i>	153
3.51.6	<i>ipv4_hdr_param</i>	154
3.51.7	<i>arp_control</i>	154
3.51.8	<i>arp_interval</i>	155
3.51.9	<i>dft_gw_ip</i>	156
3.51.10	<i>backup_gw_ip</i>	156
3.51.11	<i>community</i>	156
3.51.12	<i>destination_type</i>	157
3.51.13	<i>destination_address</i>	158
3.52	SETLOCKED.....	159
3.52.1	<i>Syntax</i>	159
3.52.2	<i>Purpose</i>	159
3.52.3	<i>Examples</i>	159
3.53	SETPEFCONFIG.....	160
3.53.1	<i>Syntax</i>	160
3.53.2	<i>Purpose</i>	160
3.53.3	<i>control</i>	162
3.53.4	<i>action_control</i>	163
3.53.5	<i>startup_delay</i>	163
3.53.6	<i>alert_startup_delay</i>	164
3.53.7	<i>event_filter</i>	164
3.53.8	<i>event_filter_data1</i>	165
3.53.9	<i>alert_policy</i>	166
3.53.10	<i>system_guid</i>	167
3.53.11	<i>alert_string_key</i>	168
3.53.12	<i>alert_string</i>	168
3.53.13	<i>oem_filter</i>	169
3.53.14	<i>pet_format</i>	170
3.54	SETPOWERLEVEL.....	171
3.54.1	<i>Syntax</i>	171
3.54.2	<i>Purpose</i>	171
3.54.3	<i>Examples</i>	172
3.55	SETSENSORDATA.....	173

3.55.1	Syntax.....	173
3.55.2	Purpose.....	173
3.55.3	Examples.....	175
3.56	SETSENSOREVENTENABLE.....	176
3.56.1	Syntax.....	176
3.56.2	Purpose.....	176
3.56.3	Examples.....	178
3.57	SETTHRESHOLD.....	179
3.57.1	Syntax.....	179
3.57.2	Purpose.....	179
3.57.3	Examples.....	179
3.58	SHELF.....	181
3.58.1	Syntax.....	181
3.58.2	Purpose.....	181
3.58.3	Displaying Shelf FRU Information.....	181
3.58.4	Modifying Maximum External Available Current.....	187
3.58.5	Modifying Minimum Expected Operating Voltage.....	189
3.58.6	Modifying Shelf Manager Controlled Activation Flag.....	190
3.58.7	Modifying Shelf Manager Controlled Deactivation Flag.....	194
3.58.8	Modifying Shelf Manager BDSelGrounded Flag.....	196
3.58.9	Modifying Maximum FRU Power Capability.....	198
3.58.10	Modifying Delay Before Next Power On.....	199
3.58.11	Modifying Allowance for FRU Activation Readiness.....	201
3.58.12	Reorder the FRU Activation and Power Descriptors.....	202
3.58.13	Refresh the Shelf FRU Info.....	204
3.58.14	Updating the Shelf FRU Info Storage Devices.....	205
3.59	SHELFADDRESS.....	207
3.59.1	Syntax.....	207
3.59.2	Purpose.....	207
3.59.3	Examples.....	207
3.60	SHMSTATUS.....	209
3.60.1	Syntax.....	209
3.60.2	Purpose.....	209
3.60.3	Examples.....	209
3.61	SHOWUNHEALTHY.....	210
3.61.1	Syntax.....	210
3.61.2	Purpose.....	210
3.61.3	Examples.....	210
3.62	SWITCHOVER.....	211
3.62.1	Syntax.....	211
3.62.2	Purpose.....	211
3.62.3	Examples.....	211
3.63	TERMINATE.....	212
3.63.1	Syntax.....	212
3.63.2	Purpose.....	212
3.63.3	Examples.....	212
3.64	USER.....	213
3.64.1	Syntax.....	213
3.64.2	Purpose.....	213
3.64.3	Displaying User Information.....	213
3.64.4	Adding a New User.....	214
3.64.5	Deleting a User.....	215
3.64.6	Enabling and Disabling a User.....	216
3.64.7	Modifying a User Name.....	217
3.64.8	Modifying a User's Password.....	218
3.64.9	Modify Channel Access Settings.....	219

3.65	VERSION	221
3.65.1	<i>Syntax</i>	221
3.65.2	<i>Purpose</i>	221
3.65.3	<i>Examples</i>	221
4	WEB INTERFACE	222
4.1	STARTING THE WEB INTERFACE	222
4.2	ALARM	224
4.3	FAN INFORMATION.....	225
4.4	FRU ACTIVATION/DEACTIVATION	226
4.5	FRU INFORMATION	227
4.6	GET BOARD INFORMATION.....	229
4.7	GET FAN LEVEL.....	230
4.8	GET FRU LED STATE	231
4.9	GET IPMB STATE	233
4.10	GET LAN CONFIGURATION INFORMATION.....	234
4.11	GET PIGEON POINT MIB FILES.....	236
4.12	GET SENSOR EVENT ENABLE MASK	238
4.13	GET SENSOR THRESHOLDS.....	240
4.14	GET SENSOR HYSTERESIS	242
4.15	GET PEF CONFIGURATION INFORMATION.....	244
4.16	IPM CONTROLLER INFORMATION	246
4.17	PARSED FRU DATA	248
4.18	RAW FRU DATA.....	250
4.19	RESET BOARD	252
4.20	SENSOR DATA	253
4.21	SENSOR INFORMATION	255
4.22	SESSION INFORMATION.....	257
4.23	SET FAN LEVEL	258
4.24	SET FRU LED STATE.....	259
4.25	SET IPMB STATE	261
4.26	SET LAN CONFIGURATION INFORMATION	263
4.27	SET PEF CONFIGURATION INFORMATION	265
4.28	SET SENSOR EVENT ENABLE	267
4.29	SET SENSOR THRESHOLDS	269
4.30	SET SENSOR HYSTERESIS.....	271
4.31	SHELF INFORMATION.....	273
4.32	SWITCHOVER.....	275
4.33	SYSTEM EVENT LOG	276
4.34	UNHEALTHY SYSTEM COMPONENTS	279
4.35	VERSION	280
5	SIMPLE NETWORK MANAGEMENT PROTOCOL (SNMP)	281
5.1	BASIC MIB VARIABLES.....	282
5.1.1	<i>Board Variables</i>	282
5.1.2	<i>Fan Tray Variables</i>	286
5.1.3	<i>Power Supply Variables</i>	290
5.1.4	<i>Shelf Manager Variables</i>	293
5.1.5	<i>Chassis Variables</i>	296
5.1.6	<i>Event Variables</i>	298
5.1.7	<i>Shelf Manager Status Variables</i>	300
5.1.8	<i>Shelf Manager Version Variables</i>	300
5.1.9	<i>TELCO Alarm Variables</i>	301
5.2	ADVANCED MIB VARIABLES.....	302
5.2.1	<i>IPM Controller Variables</i>	302
5.2.2	<i>FRU Device Variables</i>	304

5.2.3	Sensor Variables.....	307
5.2.4	Board Variables.....	312
5.2.5	System Event Log Variables.....	314
5.2.6	Shelf Variables.....	315
5.2.7	LAN Configuration Variables.....	316
5.2.8	PEF Configuration Variables.....	319
5.2.9	FRU Information Variables.....	322
5.2.10	FRU Device by Site Variables.....	323
5.3	ACCESSING THE SHELF MANAGER VIA SNMP.....	326
5.3.1	SNMPv2c.....	326
5.3.2	SNMPv3.....	326
6	RMCP INTERFACE.....	338
6.1	SUPPORTED IPMI COMMANDS.....	338
6.2	PIGEON POINT EXTENSION COMMANDS AND SENSORS.....	345
6.2.1	TELCO Alarm Sensor.....	346
6.2.2	Set/Clear TELCO Alarms.....	346
6.2.3	Get TELCO Alarm Sensor Number.....	346
6.2.4	Query Digital Output Properties.....	347
6.2.5	Get Digital Outputs.....	347
6.2.6	Set/Clear Digital Outputs.....	348
6.2.7	Get Shelf FRU Record Data.....	349
6.2.8	Notify Shelf Manager About an Extracted FRU.....	351
6.2.9	Initiate Shelf Manager Switchover.....	351
6.2.10	Subscribe for Event Notifications.....	352
6.2.11	Set Shelf FRU Record Data.....	353
6.2.12	Get Cached Device SDR Info.....	354
6.2.13	Get Cached Device SDR.....	355
6.2.14	Reserve Cached Device SDR Repository.....	355
6.3	DEACTIVATION SCENARIOS FOR THE SHELF MANAGER.....	356
7	REVISION HISTORY.....	357
7.1	RELEASE 2.1.0.....	357
7.2	RELEASE 2.2.0.....	357
7.3	RELEASE 2.3.0.....	357
7.4	RELEASE 2.4.0.....	358
7.5	RELEASE 2.4.1.....	358
7.6	RELEASE 2.4.2.....	358
7.7	RELEASE 2.4.3.....	359
7.8	RELEASE 2.4.4.....	359
7.9	RELEASE 2.5.0.....	359
7.10	RELEASE 2.5.2.....	360
7.11	RELEASE 2.5.3.....	360

Tables

Table 1 Shelf Manager Documentation	13
Table 2 Conventions Used in this Document	13
Table 3 Supported Commands.....	18
Table 4 Mapping Between ATCA Logical Slot Numbers and IPMB Addresses	36
Table 5 Mapping Between CompactPCI Physical Slot Numbers and IPMB Addresses.....	37
Table 6 Mapping PICMG 3.0 Logical Slot Numbers	39
Table 7 Mapping Between CompactPCI Physical Slot Numbers and IPMB Addresses.....	39
Table 8 Names and Numbers of LAN Configuration Parameters Supported by the getlanconfig Command.....	83
Table 9 Names and Numbers of PEF Configuration Parameters Supported by the getpefconfig Command	96
Table 10 Names and Numbers of LAN Configuration Parameters Supported by the setlanconfig Command.....	151
Table 11 Names and Numbers of PEF Configuration Parameters Supported by the setpefconfig Command	160
Table 12 Parameters Supported by the shelf Command	182
Table 13 Board Variable Indices	283
Table 14 Basic Fan Tray Variables	286
Table 15 Basic Power Supply Variables.....	290
Table 16 Basic Shelf Manager Variables	293
Table 17 Basic Chassis Variables	296
Table 18 Basic Event Variables	298
Table 19 Basic Shelf Manager Status Variables.....	300
Table 20 Basic Shelf Manager Version Variables	300
Table 21 Basic TELCO Alarm Variables.....	301
Table 22 Advanced IPM Controller Variables	302
Table 23 Advanced FRU Variables	304
Table 24 Advanced Sensor Variables	307
Table 25 Advanced Board Slot Variables.....	312
Table 26 Advanced System Log Variables	314
Table 27 Advanced Shelf Variables	315
Table 28 Advanced LAN Channel Variables	316
Table 29 Advanced PEF Configuration Variables	319
Table 30 PEF Event Filter Variables.....	320
Table 31 PEF Alert Policy Variables	320
Table 32 PEF Alert String Variables	321
Table 33 FRU Info Block Variables	322
Table 34 Advanced FRU Device Variables	323
Table 35 IPMI Commands Implemented by the Shelf Manager.....	338
Table 36 Set/Clear TELCO Alarms Command.....	346
Table 37 Get TELCO Alarm Sensor Number Command.....	347
Table 38 Query Digital Output Properties Command	347

Table 39 Get Digital Outputs Command.....	347
Table 40 Set/Clear Digital Outputs Command.....	348
Table 41 Get Shelf FRU Record Data Command.....	350
Table 42 Notify Shelf Manager About an Extracted FRU Command.....	351
Table 43 Initiate Shelf Manager Switchover Command.....	352
Table 44 Subscribe for Event Notifications Command.....	352
Table 45 Set Shelf FRU Record Data Command.....	353
Table 46 Get Cached Device SDR Info	354
Table 47 Get Cached Device SDR.....	355
Table 48 Reserve Cached Device SDR Repository.....	356

1 About This Document

This document describes how to use the Shelf Manager command line interface, the web interface, the Simple Network Management Protocol (SNMP) interface and the Remote Management Control Protocol (RMCP) interface.

1.1 Shelf Manager Documentation

This document is one of two in the Shelf Manager documentation set. These documents are available in PDF file format. The complete set includes:

Table 1 Shelf Manager Documentation

DOCUMENT	DESCRIPTION
Pigeon Point Shelf Manager User Guide	This document describes the overall configuration and use of the Pigeon Point Shelf Manager.
Pigeon Point Shelf Manager External Interface Reference	This document describes how to use the Shelf Manager command line interface, the web interface, the Simple Network Management Protocol (SNMP) interface and the Remote Management Control Protocol (RMCP) interface.

1.2 Conventions Used in this Document

This table describes the textual conventions used in this document.

Table 2 Conventions Used in this Document

CONVENTION SAMPLE	DESCRIPTION
setenv	This 10 point bold Courier font is used for text entered at keyboard in example dialogues, which typically occur as one or more separate lines.
ARMboot 1.0.2 (Apr 18 2003 - 14:58:54)	This 10 point normal Courier font is used ShMM output in example dialogues.
addmisc	This 12 point bold Courier font is used for special text within normal paragraphs. The types of such special text include command names, file names, configuration parameters and command parameters, plus other text that could be entered by or displayed to a Shelf Manager user. This font is also used for command syntax definitions.
"Get Device ID"	IPMI commands defined by the IPMI specification or as PICMG extensions are shown in the normal font, surrounded by double quotes. This matches the corresponding convention used in PICMG specifications.

1.3 *Additional Resources*

For more information about Pigeon Point products, go to the Pigeon Point Web site: <http://www.pigeonpoint.com/products.html>.

2 Introduction

The Pigeon Point Shelf Manager external interfaces include support for a command line interface, a web interface, a Simple Network Management Protocol (SNMP) interface and a Remote Management Control Protocol (RMCP) interface. The following chapters describe how to use each of these interfaces.

The Pigeon Point Shelf Manager User Guide provides an introduction to shelf management, the Shelf Manager and the Shelf Management Mezzanine (ShMM) on which the Shelf Manager runs; familiarity with that introduction is assumed in this document.

In this document, references to ShMM cover both ShMM-500 and ShMM-500R; the latter model complies with the Restriction of Hazardous Substances (RoHS) directive, but is software equivalent with its non-RoHS predecessor from a Shelf Manager perspective.

3 Command Line Interface

The Command Line Interface (CLI) is used to communicate with the intelligent management controllers of the shelf, with boards, and with the Shelf Manager itself, via textual commands.

The CLI is an IPMI-based set of commands that can be accessed directly or through a higher-level management application or a script. Administrators can access the CLI through **telnet** or the ShMM's serial port.

Using the CLI, operators can access information about the current state of the shelf including current FRU population, current sensor values, threshold settings, recent events and overall shelf health.

3.1 *Starting the Command Line Interface*

To use the CLI, a user should first log on to the Linux system on which the Shelf Manager (ShM) runs. Once logged in, a user runs the executable **clia** (for Command Line Interface Agent) from the command line with specific parameters. The first parameter is the command verb.

The **clia** executable is located on the virtual root file system maintained by Linux running on the ShMM. The **clia** executable connects to the main Shelf Manager software process, passes the command information to it and retrieves the results. The Shelf Manager must be running prior to starting the CLI.

For example,

```
# clia ipmc
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
20: Entity: (d0, 0) Maximum FRU device ID: 20
    PICMG Version 2.0
    Hot Swap State: M4, Previous: M3, Last State Change Cause: Normal
    State Change (0)
```

```
#
```

If it is started without parameters, **clia** enters an interactive mode. In that mode, the program repeatedly issues a prompt to the terminal, accepts user input as the next command with parameters, executes that command and shows the results on the terminal, until the user types the command **exit** or **quit**.

For example,

```
# clia
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```



```
CLI> ipmc 20
```

```
20: Entity: (d0, 0) Maximum FRU device ID: 20
```

```
    PICMG Version 2.0
```

```
    Hot Swap State: M4, Previous: M3, Last State Change Cause: Normal  
State Change (0)
```

```
CLI> exit
```

```
#
```

3.2 *Command Line Interface Summary Table*

The command line interface implements the commands shown in the following table, with a designated subset of them available for use on the backup Shelf Manager.

The commands are described in detail in the subsequent subsections in alphabetical order of the command names.

Table 3 Supported Commands

COMMAND	PARAMETERS	DESCRIPTION	USEABLE ON BACKUP SHELF MANAGER
activate	IPMB address FRU device ID	Activates the specified FRU.	No
airfilterreplaced	dd.mm.yyyy (optional)	Sets the date when the Air Filter is to be replaced.	No
amcportstate	IPMB address FRU device ID or AMC number (optional)	Shows AMC port state information for a specified AMC. If AMC number is not specified, the AMC port state information is reported for all active AMCs for the designated IPM controller.	No
alarm	alarm type	Activates or clears TELCO alarms.	No
board	slot number (optional)	Shows information about boards.	No
boardreset	slot number	Resets the specified board.	No
busres	subcommand, with its parameters	Performs the specified operation on the Bused E-Keying-managed resources.	No
deactivate	IPMB address FRU device ID	Deactivates the specified FRU.	No
debuglevel	new debug level (optional)	Gets current debug levels for the Shelf Manager (for both the system log and the console) or sets new debug levels.	Yes
exit/quit		Exits from the interpreter in interactive mode.	Yes
fans	IPMB address (optional) FRU device ID (optional)	Shows information about fans.	No

COMMAND	PARAMETERS	DESCRIPTION	USEABLE ON BACKUP SHELF MANAGER
fru	IPMB address (optional) FRU device ID (optional) FRU type (optional)	Shows information about one or a group of FRUs in the shelf; FRUs are selected by type or by the parent IPM controller.	Yes; on the backup Shelf Manager, reports information only about FRUs that are local to that backup.
frucontrol	IPMB address FRU device ID Option	Sends FRU Control command to specific FRU.	Yes
frudata	IPMB address (optional) FRU device ID (optional) block / byte offset (optional) data (optional)	Provides raw access to the FRU Information on the specified FRU.	Yes; on the backup Shelf Manager, reports information only about FRUs that are local to that backup.
frudatar	IPMB address FRU device ID File name	Reads the FRU data area of the specified FRU and stores the data in the specified file.	Yes; on the backup Shelf Manager, reports information only about FRUs that are local to that backup.
frudataw	IPMB address FRU device ID File name	Writes the FRU data in the specified file into the FRU data area of the specified FRU.	Yes; on the backup Shelf Manager, reports information only about FRUs that are local to that backup.
fruinfo	IPMB address FRU device ID	Provides user friendly FRU Information output.	Yes; on the backup Shelf Manager, reports information only about FRUs that are local to that backup.
getbootdev	IPMB address FRU device ID or AMC address	Shows system boot device parameter.	No

COMMAND	PARAMETERS	DESCRIPTION	USEABLE ON BACKUP SHELF MANAGER
getfanlevel	IPMB address (optional) FRU device ID (optional)	Shows the current level of the fan controlled by the specified FRU.	No
getfanpolicy	IPMB address (optional) FRU device ID (optional) <site_type> (optional) <site_number> (optional)	Retrieves information about Fan Tray(s) control mode and/or FRUs coverage by the specified Fan Tray(s). This command returns two different pieces of data: whether or not the site(s) are enabled/disabled for autonomous control by the Shelf Manager (based on "Set Fan Policy" commands), and whether or not the FRU site(s) are covered by the fans (according to the Fan Geography record).	No
getfruledstate	IPMB address (optional) FRU device ID (optional) LED ID or ALL(optional)	Shows the FRU LED state.	Yes; on the backup Shelf Manager, reports information only about FRUs that are local to that backup.
gethysteresis	IPMB address (optional) sensor name (optional) sensor number (optional)	Shows both the positive and negative hystereses of the specified sensor.	Yes; on the backup Shelf Manager, reports information only about FRU LEDs that are local to that backup.
getipmbstate	IPMB address IPMB link number (optional)	Shows the current state of IPMB-0 at the target address. If a link number is specified and the target IPM controller is an IPMB hub, information about a specific link is shown.	Yes; on the backup Shelf Manager, reports information only about sensors that are local to that backup.

COMMAND	PARAMETERS	DESCRIPTION	USEABLE ON BACKUP SHELF MANAGER
getlanconfig	channel number parameter name or number (optional) set selector (optional)	Shows a LAN configuration parameter for a specific channel.	No
getpefconfig	parameter name or number (optional) set selector (optional)	Shows a PEF configuration parameter.	No
getsensoreventenable	IPMB address (optional) sensor name (optional) sensor number (optional)	Shows the current sensor event mask values for the supported events of the specified sensor(s).	Yes; on the backup Shelf Manager, reports information only about FRUs that are local to that backup.
getthreshold, threshold	IPMB address (optional) sensor name (optional) sensor number (optional)	Shows threshold information about a specific sensor.	Yes; on the backup Shelf Manager, reports information only about sensors that are local to that backup.
help		Shows the list of supported commands.	Yes
ipmc	IPMB address (optional)	Shows information about one or all IPM controllers in the shelf.	Yes; on the backup Shelf Manager, reports information only about IPM Controllers that are local to that backup.
localaddress		Retrieves the IPMB address of the current Shelf Manager.	Yes
minfanlevel	fan level (optional)	Shows or sets the minimum fan level.	No
networkelementid	Network Element Identifier (optional)	Allows getting or setting the Network Element Identifier	No

COMMAND	PARAMETERS	DESCRIPTION	USEABLE ON BACKUP SHELF MANAGER
poll		Initiates a poll of the IPM controllers on IPMB-0.	No
sel	IPMB address (optional) number of items (optional)	Shows the most recent items from the System Event Log maintained on the target IPM controller.	No
sendamc	IPMB address AMC address or FRU ID NetFn Command Code Byte1 (optional) ... (optional) ByteN (optional)	Transparently sends an arbitrary IPMI command to an Advanced Management Controller (AMC) that resides behind its correspondent IPM controller in a transparent way.	Yes
sendcmd	IPMB address Network function Command Code Byte1 (optional) ... (optional) ByteN (optional)	Transparently sends an arbitrary IPMI command to the target IPMC.	Yes
sensor	IPMB address (optional) sensor name (optional) sensor number (optional)	Shows information about one or a group of sensors; sensors are selected by IPM controller address, number or name.	Yes; on the backup Shelf Manager, reports information only about sensors that are local to that backup.
sensordata	IPMB address (optional) sensor name (optional) sensor number (optional)	Shows value information for a specific sensor.	Yes; on the backup Shelf Manager, reports information only about sensors that are local to that backup.
sensorread	IPMB address sensor number	Shows raw value information for a specific sensor (ignoring any Sensor Data Record describing the sensor). It does not check the presence of the target IPM controllers or validity of the sensor number, but just sends the request directly via IPMB.	Yes; on the backup Shelf Manager, reports information only about sensors that are local to that backup.

COMMAND	PARAMETERS	DESCRIPTION	USEABLE ON BACKUP SHELF MANAGER
session		Shows information about active RMCP sessions.	No
setbooddev	IPMB address FRU device ID or AMC address boot device parameter	Sets system boot device parameter.	No
setextracted	IPMB address FRU device ID	Notifies the Shelf Manager that the specified FRU has been physically extracted from the shelf.	No
setfanpolicy	IPMB address FRU device ID action to be taken: ENABLE or DISABLE timeout (optional) site type (optional) site number (optional)	Enables or disables Shelf Manager control over fan trays for cooling management purposes.	No
setfanlevel	IPMB address FRU device ID level	Sets a new level for the fan controlled by the specified FRU.	No
setfruledstate	IPMB address FRU device ID LED Id or ALL LED operation LED Color (optional)	Sets the state of a specific LED or all LEDs for the given FRU.	Yes; on the backup Shelf Manager, reports information only about sensors that are local to that backup.
sethysteresis	IPMB address sensor name or sensor number hysteresis to be set (pos or neg) hysteresis value	Sets new hysteresis value for the specified sensor.	Yes; on the backup Shelf Manager, reports information only about sensors that are local to that backup.

COMMAND	PARAMETERS	DESCRIPTION	USEABLE ON BACKUP SHELF MANAGER
setipmbstate	IPMB address IPMB bus name (A or B) IPMB link number (optional) action to be taken	Disables/enables IPMB-A or IPMB-B (or the specific IPMB link) on the target IPM controller.	Yes; on the backup Shelf Manager, reports information only about IPMB-0 links that are local to that backup.
setlanconfig	channel parameter name or number additional parameters	Sets the value of the LAN configuration parameter on the specified channel.	No
setlocked	IPMB address FRU device ID State	Sets the Locked bit for the specified FRU to the specified state (0 – unlock, 1 – lock).	Yes; on the backup Shelf Manager, reports information only about FRUs that are local to that backup.
setpefconfig	parameter name or number set selector (optional) parameter value	Sets a new value of a PEF configuration parameter.	No
setpowerlevel	IPMB address FRU device ID Power level Copy flag (optional)	Sets the power level of a board/FRU.	No
setsensoreventenable	IPMB address sensor name sensor number global flags assertion events mask (optional) deassertion events mask (optional)	Changes the event enable masks for a specific sensor.	Yes; on the backup Shelf Manager, reports information only about sensors that are local to that backup.

COMMAND	PARAMETERS	DESCRIPTION	USEABLE ON BACKUP SHELF MANAGER
setthreshold	IPMB address sensor name sensor number threshold type threshold value	Changes a specific threshold value (upper/lower, critical/non-critical/non-recoverable) for a specific sensor.	Yes; on the backup Shelf Manager, reports information only about sensors that are local to that backup.
shelf	subcommand, with its parameters	Shows general information about the shelf; several subcommands allow setting shelf attributes and getting additional information about specific areas.	No
shelfaddress	Shelf Address string (optional)	Gets or sets the Shelf Address field of the Address Table within Shelf FRU Information.	No
shmstatus		Shows the Shelf Manager active/backup status	Yes
showunhealthy		Shows the unhealthy components of the shelf	No
switchover		Initiates a switchover to the backup Shelf Manager.	Yes
terminate		Terminates the Shelf Manager, optionally without rebooting the ShMM.	Yes
user	subcommand, with its parameters	Shows information about the RMCP user accounts on the Shelf Manager and provides a simple way to add, delete and modify user accounts.	No
version		Shows the Shelf Manager version information.	Yes

Most informational commands support brief and verbose modes of execution, differing in the amount of information provided. Brief mode is the default (standard); verbose mode is selected by using the option **-v** in the command line, directly after the command and before the positional arguments. Commands that are executed on the backup Shelf Manager can only access objects (such as sensors, FRUs, IPM controllers) that are local to the backup Shelf Manager.

To help the user to determine whether a specific command is being executed on the active or on the backup Shelf Manager, the following message is issued when a CLI command is executed on

the backup Shelf Manager: “Running on the Backup Shelf Manager, with limited functionality”.

For more information about documentation conventions, see [Conventions Used in this Document](#).

3.3 Shorthand Notations

The next chapters provide the details of the individual commands of the CLI and the syntax and usage of each of the available commands. The CLI supports both AdvancedTCA and CompactPCI shelf contexts.

As a convenience, key types of shelf components can be referenced in the following way, as an alternative to a reference notation based solely on an IPMB address and numerical FRU identifier:

- **board** <N>
- **power_supply** <N>
- **fan_tray** <N>
- **pem** <N>
- <IPMB-address> **amc** <M>
- **board** <N> **amc** <M>

Note:

The reference notation **power_supply** <N>, plus its abbreviation, is supported only in CompactPCI shelves.

In all the above convenience notations, <N> and <M> are Site Numbers of the component, as described in the Address Table for the shelf. Site Type 00h ("PICMG Board") corresponds to **board**, 01h ("Power Entry") – to **pem** and 04h ("Fan Tray") – to **fan_tray**. In CompactPCI systems, the OEM-defined site type C5h ("CompactPCI Power Supply") corresponds to **power_supply**.

This notation enables a user to designate a specific AMC by its number, using the syntax <IPMB-address> **amc** <M> or **board** <N> **amc** <M>. In that case, <IPMB-address> or **board** <N> identifies the corresponding AMC carrier board.

Revision 2.0 of the AMC.0 specification defines how the AMC slots are numbered, according to the following principles:

- AMC slot numbers 1-4 (which are also referenced as A1-A4, according to the specification) are only present on AMC carriers that support two layers of AMC slots (each of which can hold two compact size AMCs). These slots are actually embedded through the main board of the carrier, which is therefore called a "cutaway" carrier.
- AMC slot numbers 5-8 (which are also referenced as B1-B4, according to the specification) usually refer to either mid-size or full-size slots, but on cutaway carriers that support two layers of slots, these slots are "above" the A slots (that is, farther away from the main board of the carrier).
- For each layer, slot numbering starts from the slot that is closest to the Zone 3 end of the board (at the top of a vertical slot). The first layer A slot is numbered 1 or A1 and the first layer B slot is numbered 5 or B1.

Furthermore, the CLI supports the following abbreviations:

- **board** <N> can be abbreviated to **b** <N>
- **power_supply** <N> can be abbreviated to **ps** <N>
- **fan_tray** <N> can be abbreviated to **ft** <N>

The special abbreviations **shm 1** and **shm 2** can be used to access the redundant Shelf Managers that are described in the address table in the Shelf FRU Information. **shm 1** relates to the Shelf Manager with the numerically smaller hardware address and **shm 2** relates to the Shelf Manager with the numerically greater hardware address.

In redundant configurations, not all CLI commands are supported by the backup Shelf Manager. Table 3 in Section 3.2 provides a list of all the CLI commands, including identification of which commands are supported by the backup Shelf Manager.

3.4 *activate*

3.4.1 *Syntax*

```
activate <IPMB-address> <fru_id>
activate board <N>
activate shm <N>
activate fan_tray <N>
activate power_supply <N>
activate pem <N>
activate <IPMB-address> amc <M>
activate board <N> amc <M>
```

3.4.2 *Purpose*

This command activates the specified FRU. To achieve that, it clears the “Activation Locked” flag on the target FRU by sending the IPMI command “Set FRU Activation Policy (Clear Locked)”, and then sends the IPMI command “Set FRU Activation (Activate FRU)” to the target FRU.

The first step allows the command to activate FRUs that are in the state M1. To allow the FRU some time to transition from the state M1 to the state M2, if the command “Set FRU Activation” returns the completion code “COMMAND NOT SUPPORTED IN PRESENT STATE”, it is repeated up to the number of times indicated by the value of the Shelf Manager configuration parameter TASKLET_RETRIES.

The FRU is specified using the IPMB address of the owning IPM controller and the FRU device ID. FRU device ID 0 designates the IPM controller proper in PICMG 3.0 contexts. In PICMG 2.x contexts, the Shelf Manager emulates this command in the best possible way for each specific type of FRU.

In the PICMG 3.0 context, this command is primarily useful for those FRUs that are not listed in the power management table in the Shelf FRU Information, or for which the Shelf Manager Controlled Activation attribute is set to **FALSE**.

These FRUs are not automatically activated by the Shelf Manager and stay in the state M2. The Shelf Manager automatically activates other FRUs once they reach state M2. Attempting to activate a FRU that is not in state M2 does nothing.

3.4.3 *Examples*

Activate the IPM controller proper at address 9Ch.

```
# clia activate 9c 0
```

Pigeon Point Shelf Manager Command Line Interpreter

Command executed successfully

#

3.5 *airfilterreplaced*

3.5.1 *Syntax*

airfilterreplaced [<dd.mm.yyyy>]

3.5.2 *Purpose*

A fan tray air filter change date can be maintained in a Pigeon Point defined multirecord in the Shelf FRU Information. This multirecord contains the following information related to air filter changes:

- Air Filter Replaced – Indicates the date when the Air Filter was last replaced. The format is “dd.mm.yyyy”
- Air Filter To Be Replaced – Indicates the date when the Air Filter must be replaced again (the filter expiration date). The format is “dd.mm.yyyy”.

After an operator has replaced the air filter, he or she should use the Shelf Manager CLI tool to change the dates above in the Shelf FRU Information.

The date “dd.mm.yyyy” specified as the command parameter indicates the filter expiration date (i.e. when the Air Filter shall be replaced again). If the date is omitted, the default expiration time is 6 months from the current date.

After executing the command, the Shelf Manager updates the Shelf FRU Information as follows: the field Air Filter Replaced contains the current calendar date and the field Air Filter To Be Replaced contains the expiration date – either the date supplied with the command or the default date – 6 months in the future.

NOTE: This command requires special carrier-specific support and is not implemented for all ShMM carriers. If the command is not implemented for the current carrier, an error message is shown when this command is used.

3.5.3 *Examples*

```
# clia airfilterreplaced 25.12.2006
```

```
Pigeon Point Shelf Manager Command Line Interpreter  
#
```

3.6 *alarm*

3.6.1 *Syntax*

alarm [**clear** | **info** | **minor** | **major** | **critical**]

3.6.2 *Purpose*

This command provides access to the TELCO alarm outputs. Parameters **minor**, **major** and **critical** allow the user to set the corresponding alarm output. These actions are cumulative; that is, after the commands **clia alarm minor** and **clia alarm major**, both minor and major alarms will be set. The action **clear** clears the minor and major alarm outputs; the critical alarm output cannot be cleared. The action **info** displays information about the last alarm that occurred in the shelf.

Command invocation without parameters returns the status of the TELCO alarm outputs.

3.6.3 *Examples*

```
# clia alarm
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
    alarm mask: 0x00
```

```
#
```

```
# clia alarm major
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Returned completion code: 0
```

```
#
```

```
# clia alarm
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
    alarm mask: 0x02
```

```
    Major Alarm
```

```
#
```

```
# clia alarm clear
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Returned completion code: 0
```

```
#
```

```
# clia alarm
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
    alarm mask: 0x00
```


#

clia alarm info

Pigeon Point Shelf Manager Command Line Interpreter

Last saved alarm information:

Alarm mask: 0x02

Alarm date/time: Wed May 10 10:54:04 2006

Alarm source: Remote request

Alarm reason: On-demand setting alarms mask: 0x02

#

3.7 *amcportstate*

3.7.1 *Syntax*

```
amcportstate [-v] <IPMB-address> [<fru_id> | amc <M>]
amcportstate [-v] shm <N> [<fru_id> | amc <M>]
amcportstate [-v] board <N> [<fru_id> | amc <M>]
```

3.7.2 *Purpose*

This command shows AMC port state information for a specific AMC. If a FRU ID or AMC number is omitted, the AMC port state information is reported for all active AMCs for the designated IPM controller.

3.7.3 *Example*

```
#clia amcportstate 98
```

Pigeon Point Shelf Manager Command Line Interpreter

```
98: FRU # 1 (AMC # 5)
    Channel 0:
        Link 1 configuration:
            lane mask 03, type 07, type extension 02, grouping ID 00,
status 0 (Disabled)
        Link 2 configuration:
            lane mask 01, type 07, type extension 02, grouping ID 00,
status 1 (Enabled)
        Link 3 configuration:
            lane mask 02, type 07, type extension 02, grouping ID 00,
status 0 (Disabled)
```

```
98: FRU # 2 (AMC # 6)
    Channel 0:
        Link 1 configuration:
            lane mask 03, type 07, type extension 02, grouping ID 00,
status 0 (Disabled)
        Link 2 configuration:
            lane mask 01, type 07, type extension 02, grouping ID 00,
status 1 (Enabled)
        Link 3 configuration:
            lane mask 02, type 07, type extension 02, grouping ID 00,
status 0 (Disabled)
```

```
#clia amcportstate 9c 2
```

Pigeon Point Shelf Manager Command Line Interpreter

```
9C: FRU # 2 (AMC # 6)
    Channel 0:
        Link 1 configuration:
            lane mask 0f, type 05, type extension 01, grouping ID 00,
status
```

```
1 (Enabled)
  Channel 1:
    Link 1 configuration:
      lane mask 0f, type 05, type extension 01, grouping ID 00,
status
1 (Enabled)
  Channel 2:
    Link 1 configuration:
      lane mask 01, type f0, type extension 00, grouping ID 00,
status
1 (Enabled)
```

#clia amcportstate 88 amc 6

Pigeon Point Shelf Manager Command Line Interpreter

```
88: FRU # 2 (AMC # 6)
  Channel 0:
    Link 1 configuration:
      lane mask 01, type 07, type extension 01, grouping ID 00,
status 1 (Enabled)
  Channel 1:
    Link 1 configuration:
      lane mask 01, type 07, type extension 01, grouping ID 00,
status 0 (Disabled)
```

3.8 *board*

3.8.1 *Syntax*

board [-v] [<physical-slot-address>]

3.8.2 *Purpose*

This command and the **boardreset** command are different from most of the rest of the command set in that they work with ATCA or CompactPCI boards and take as arguments physical slot numbers, instead of IPM controller addresses and FRU device IDs.

This makes them easier for the end user and allows their use in CompactPCI contexts, where boards may not include an IPM controller and therefore, are not easily addressable using the IPMB address – FRU device ID pair.

This command shows information about each IPM controller in the range of IPMB addresses allocated to CompactPCI/ATCA slots, and about each additional FRU represented by those controllers. This command is a short-hand version of the **fru** command and the information displayed is the same.

The range of IPMB addresses is 82h-A0h for PICMG 3.0 systems and B0h-ECh for PICMG 2.9 systems, where boards have IPM controllers on them. In generic PICMG 2.x systems, where boards do not necessarily have IPM controllers on them, there may be no IPM controller address or FRU device ID defined. In that case, only the **board** and **boardreset** commands among the CLI commands are applicable.

The physical address should be specified as a decimal number. For PICMG 3.0 systems, the correspondence between physical addresses and IPMB addresses is specified in the Shelf FRU information. If the Shelf FRU information does not contain an address table, (which would only occur in a non-compliant ATCA shelf) the following mapping table (mapping of logical slot numbers) is used.

Table 4 Mapping Between ATCA Logical Slot Numbers and IPMB Addresses

LOGICAL SLOT NUMBER	IPMB ADDRESS	LOGICAL SLOT NUMBER	IPMB ADDRESS
1	82	9	92
2	84	10	94
3	86	11	96
4	88	12	98
5	8A	13	9A
6	8C	14	9C
7	8E	15	9E
8	90	16	AE

For PICMG 2.9 based systems, the following mapping between Slot Number and IPMB address is used. “Slot Number” refers to the PICMG 2.x concept of “Physical Slot Number”.

Table 5 Mapping Between CompactPCI Physical Slot Numbers and IPMB Addresses

PHYSICAL SLOT NUMBER	IPMB ADDRESS	PHYSICAL SLOT NUMBER	IPMB ADDRESS
1	B0	16	D0
2	B2	17	D2
3	B4	18	D4
4	B6	19	D6
5	B8	20	D8
6	BA	21	DA
7	BE	22	DC
8	BC	23	DE
9	C0	24	E0
10	C2	25	E2
11	C4	26	E4
12	C6	27	E6
13	C8	28	E8
14	CC	29	EA
15	CE	30	EC

3.8.3 Example

Get standard information about all boards in the shelf (where only physical slots 1 and 14 happen to be occupied).

```
# clia board
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Physical Slot # 1
```

```
82: Entity: (0xd0, 0x0) Maximum FRU device ID: 0x08
    PICMG Version 2.0
    Hot Swap State: M4 (Active), Previous: M3 (Activation In Process),
    Last State Change Cause: Normal State Change (0x0)
```

```
82: FRU # 0
    Entity: (0xd0, 0x0)
    Hot Swap State: M4 (Active), Previous: M3 (Activation In Process),
    Last State Change Cause: Normal State Change (0x0)
    Device ID String: Pigeon Point 6
```

```
Physical Slot # 14
```

```
9c: Entity: (0xd0, 0x0) Maximum FRU device ID: 0x08
    PICMG Version 2.0
    Hot Swap State: M4 (Active), Previous: M3 (Activation In Process),
    Last State Change Cause: Normal State Change (0x0)
```

```
9c: FRU # 0
    Entity: (0xd0, 0x0)
    Hot Swap State: M4 (Active), Previous: M3 (Activation In Process),
Last State Change Cause: Normal State Change (0x0)
    Device ID String: Pigeon Point 6
```

#

Get verbose information about a board in physical slot 14.

clia board -v 14

Pigeon Point Shelf Manager Command Line Interpreter

Physical Slot # 14

```
9c: Entity: (0xd0, 0x0) Maximum FRU device ID: 0x08
    PICMG Version 2.0
    Hot Swap State: M4 (Active), Previous: M3 (Activation In Process),
Last State Change Cause: Normal State Change (0x0)
    Device ID: 0x00, Revision: 0, Firmware: 1.01, IPMI ver 1.5
    Manufacturer ID: 00315a (PICMG), Product ID: 0000, Auxiliary Rev:
01ac1014
    Device ID String: Pigeon Point 6
    Global Initialization: 0x0, Power State Notification: 0x0, Device
Capabilities: 0x29
    Controller provides Device SDRs
    Supported features: 0x29
        Sensor Device FRU Inventory Device IPMB Event Generator
```

```
9c: FRU # 0
    Entity: (0xd0, 0x0)
    Hot Swap State: M4 (Active), Previous: M3 (Activation In Process),
Last State Change Cause: Normal State Change (0x0)
    Device ID String: Pigeon Point 6
    Site Type: 0x00, Site Number: 14
    Current Power Level: 0x01, Maximum Power Level: 0x01, Current Power
Allocation: 20.0 Watts
```

#

3.9 *boardreset*

3.9.1 *Syntax*

boardreset <physical-slot-address>

3.9.2 *Purpose*

This command resets the board in the specified physical slot, sending it the IPMI command “FRU Control (Cold Reset)”.

The physical address should be specified as a decimal number. For PICMG 3.0 systems, correspondence between physical addresses and IPMB addresses is specified in the Shelf FRU Information. If the Shelf FRU information does not contain an address table, (which would only be true in a non-compliant ATCA shelf) the following mapping is used. FRU device ID is 0.

Table 6 Mapping PICMG 3.0 Logical Slot Numbers

LOGICAL SLOT NUMBER	IPMB ADDRESS	LOGICAL SLOT NUMBER	IPMB ADDRESS
1	82	9	92
2	84	10	94
3	86	11	96
4	88	12	98
5	8A	13	9A
6	8C	14	9C
7	8E	15	9E
8	90	16	A0

In PICMG 2.x contexts, the Shelf Manager uses the radial board reset signal line, if available. Otherwise, if the radial BD_SEL# line is available, the Shelf Manager uses that mechanism to power cycle the board. In generic PICMG 2.x systems, where boards do not have IPM controllers on them, there may be no direct association between the physical slot number and the IPM controller and FRU device ID pair. In that case, CLI commands other than **board** and **boardreset** are not applicable to boards in physical slots.

For PICMG 2.9 based systems, the following CompactPCI Peripheral address mapping table is used:

Table 7 Mapping Between CompactPCI Physical Slot Numbers and IPMB Addresses

PHYSICAL SLOT NUMBER	IPMB ADDRESS	PHYSICAL SLOT NUMBER	IPMB ADDRESS
1	B0	16	D0
2	B2	17	D2
3	B4	18	D4

PHYSICAL SLOT NUMBER	IPMB ADDRESS	PHYSICAL SLOT NUMBER	IPMB ADDRESS
4	B6	19	D6
5	B8	20	D8
6	BA	21	DA
7	BC	22	DC
8	BE	23	DE
9	C0	24	E0
10	C4	25	E2
11	C6	26	E4
12	C8	27	E6
13	CA	28	E8
14	CC	29	EA
15	CE	30	EC

3.9.3 Examples

Reset the board in physical slot 14 (IPMB address 9Ch, FRU 0).

```
# clia boardreset 14
```

Pigeon Point Shelf Manager Command Line Interpreter

Board 14 reset, status returned 0

```
#
```


3.10 *busres*

3.10.1 *Syntax*

busres <subcommand>

The following subcommands are supported:

```
info [<resource>]
release <resource>
force <resource>
lock <resource>
unlock <resource>
query [-v] <resource> [<target> [noupdate]]
setowner <resource> <target>
sendbusfree <resource> <target>
```

3.10.2 *Purpose*

This command shows information about the current state of the Bused E-Keying-managed resources and allows changing that state.

All subcommands accept a resource ID as one of the parameters. The resource ID is either a 0-based resource number or a short resource name, as follows:

- 0 | **mtb1** --Metallic Test Bus pair 1
- 1 | **mtb2** --Metallic Test Bus pair 2
- 2 | **clk1** --Synch Clock group 1
- 3 | **clk2** --Synch Clock group 2

The following subsections describe the syntax of the several variations of the **busres** command.

3.10.3 *info*

3.10.3.1 Syntax

busres info [<resource>]

3.10.3.2 Purpose

This command displays information about the current state of the specified resource or all resources, if the resource ID is not specified.

The parameter **<resource>** is the resource ID. The resource ID is either a 0-based resource number or a short resource name, as follows:

- 0 | **mtb1** --Metallic Test Bus pair 1
- 1 | **mtb2** --Metallic Test Bus pair 2
- 2 | **clk1** --Synch Clock group 1
- 3 | **clk2** --Synch Clock group 2

3.10.3.3 Examples

Get information about the state of Metallic Test Bus pair 2.

```
# clia busres info mtb2
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Metallic Test Bus pair 2 (ID 1): Owned by IPMC 0x82, Locked
```

```
#
```

3.10.4 *release / force <resource>*

3.10.4.1 Syntax

busres release | force <resource>

3.10.4.2 Purpose

This command sends the “Bused Resource Control” request to the current owner of the resource, instructing it to release the resource. If the command syntax is **busres release <resource>**, the “Bused Resource Control (Release)” command is sent. If the command is **busres force <resource>**, the “Bused Resource Control (Force)” command is sent. See section 3.7.3.4 of the PICMG 3.0 specification for a detailed description of these ATCA commands.

The parameter **<resource>** is the resource ID. The resource ID is either a 0-based resource number or a short resource name, as follows:

- 0 | **mtb1** --Metallic Test Bus pair 1
- 1 | **mtb2** --Metallic Test Bus pair 2
- 2 | **clk1** --Synch Clock group 1
- 3 | **clk2** --Synch Clock group 2

3.10.4.3 Examples

Force releasing Metallic Test Bus pair 2 by the current owner.

```
# clia busres force mtb2
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Force operation succeeded
```

```
#
```

3.10.5 *lock / unlock*

3.10.5.1 Syntax

busres lock | unlock <resource>

3.10.5.2 Purpose

This command locks (**busres lock <resource>**) or unlocks (**busres unlock <resource>**) the specified resource. If the resource is locked, when another IPM Controller sends the “Bused Resource Control (Request)” command to the Shelf Manager, the Shelf Manager responds with the Deny status. If the resource is unlocked, when another IPM Controller sends the “Bused Resource Control (Request)” command to the Shelf Manager, the Shelf Manager responds with Busy status and sends the “Bused Resource Control (Release)” to the current owner. If the current owner releases the resource, on the next request, this resource will be granted to the requestor.

Please note that only the resources that are owned by some IPM Controller can be locked. Also, as soon as the current owner releases the resource, the lock is also removed from this resource.

The parameter **<resource>** is the resource ID. The resource ID is either a 0-based resource number or a short resource name, as follows:

- 0 | **mtb1** --Metallic Test Bus pair 1
- 1 | **mtb2** --Metallic Test Bus pair 2
- 2 | **clk1** --Synch Clock group 1
- 3 | **clk2** --Synch Clock group 2

3.10.5.3 Examples

Lock Synch Clock group 3.

```
# clia busres lock clk3
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Lock operation succeeded
```

```
#
```

3.10.6 *query*

3.10.6.1 Syntax

busres [-v] **query** <resource> [<target> [noupdate]]

3.10.6.2 Purpose

This command sends the “Bused Resource Control (Query)” request to the specified IPM Controller. If the IPM Controller is not specified in the command line, the request is sent to the current owner of the resource. Upon receiving the response, appropriate changes are made in the resource table (for example, if the IPM Controller that is believed to be the current owner responds with the No Control status, the table is modified to reflect that fact), unless the **noupdate** flag is provided. If this flag is passed in the command line, no changes to the resource table are made based on the received information.

The parameter <resource> is the resource ID. The resource ID is either a 0-based resource number or a short resource name, as follows:

- 0 | **mtb1** --Metallic Test Bus pair 1
- 1 | **mtb2** --Metallic Test Bus pair 2
- 2 | **clk1** --Synch Clock group 1
- 3 | **clk2** --Synch Clock group 2

The parameter <target> specifies the IPM Controller to which the request will be sent. It can either be an IPMB address of the IPM Controller, or a symbolic name: **board** <N>, **fan_tray** <N>, or **power_supply** <N>, where <N> is the number of the board, fan tray, or power supply respectively, exactly as for **clia ipmc** command.

The flag **noupdate**, if present, indicates that the information received in response to the Query request should not be used to update the resource table. In the current revision of the Shelf Manager, no additional information is provided if **-v** flag is specified.

3.10.6.3 Examples

Send query for Metalic Test Bus pair 1 to the IPM Controller with address 82h.
Don't update the resource table based on the response.

```
# clia busres query mtb1 0x82 noupdate
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
No Control: IPMC 0x82 is not the owner of resource 0
```

```
#
```

3.10.7 *setowner*

3.10.7.1 Syntax

busres setowner <resource> <target>

3.10.7.2 Purpose

Warning: This command is for experienced users. Use it with care and only when you know what you are doing!

This command directly sets the owner of the specified resource in the resource table. It doesn't send a "Bused Resource Control" command, even if the resource had a different owner before executing the command. This is a low-level command that should be used for testing and recovery purposes only.

The parameter **<resource>** is the resource ID. The resource ID is either a 0-based resource number or a short resource name, as follows:

- 0 | **mtb1** --Metallic Test Bus pair 1
- 1 | **mtb2** --Metallic Test Bus pair 2
- 2 | **clk1** --Synch Clock group 1
- 3 | **clk2** --Synch Clock group 2

The parameter **<target>** specifies the IPM Controller that is set as the owner of the resource. It can either be an IPMB address of the IPM Controller, or a symbolic name: **board <N>**, **fan_tray <N>**, or **power_supply <N>**, where **<N>** is the number of the board, fan tray, or power supply respectively, exactly as for the **clia ipmc** command. Use 0 as the IPMB address to specify that the resource is not owned by any IPM Controller.

3.10.7.3 Examples

Set board 1 as the new owner for Metallic Test Bus pair 1.

```
# clia busres setowner mtb1 board 1
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
New owner is set successfully
```

```
#
```

3.10.8 *sendbusfree*

3.10.8.1 Syntax

busres sendbusfree <resource> <target>

3.10.8.2 Purpose

Warning. This command is for experienced users. Use it with care and only when you know what you are doing!

This command sends the “Bused Resource Control (Bus Free)” request to the specified IPM Controller. No operation is performed on the resource before sending the request even if a different IPM Controller owns it. However, the resource table is updated based on the response to this request. That is, if the IPM Controller accepts ownership of the resource, it is set as the new owner in that table. This is a low-level command that should be used for testing and recovery purposes only.

The parameter **<resource>** is the resource ID. The resource ID is either a 0-based resource number or a short resource name, as follows:

- 0 | **mtb1** --Metallic Test Bus pair 1
- 1 | **mtb2** --Metallic Test Bus pair 2
- 2 | **clk1** --Synch Clock group 1
- 3 | **clk2** --Synch Clock group 2

The parameter **<target>** specifies the IPM Controller, to which the request is sent. It can either be an IPMB address of the IPM Controller, or a symbolic name: **board <N>**, **fan_tray <N>**, or **power_supply <N>**, where **<N>** is the number of the board, fan tray, or power supply respectively, exactly as for **clia ipmc** command. Use 0 as the IPMB address to specify that the resource is not owned by any IPM Controller.

3.10.8.3 Examples

Send a Bus Free request for Metallic Test Bus pair 1 to the IPM Controller with address 82h.

```
# clia busres sendbusfree mtb1 0x82
```

Pigeon Point Shelf Manager Command Line Interpreter

IPMC rejected ownership of the resource

```
#
```

3.11 *deactivate*

3.11.1 *Syntax*

```
deactivate <IPMB-address> <fru_id>
deactivate board <N>
deactivate shm <N>
deactivate fan_tray <N>
deactivate power_supply <N>
deactivate pem <N>
deactivate <IPMB-address> amc <M>
deactivate board <N> amc <M>
```

3.11.2 *Purpose*

This command sends the IPMI command “Set FRU Activation (Deactivate FRU)” to the specified FRU. The FRU is specified using the IPMB address of the owning IPM controller and the FRU device ID. FRU device ID 0 designates the IPM controller proper in PICMG 3.0 contexts. In PICMG 2.x contexts, the Shelf Manager emulates this command in the best possible way for each specific type of FRU. Attempting to deactivate an already inactive FRU does nothing.

Note: Programmatic deactivation of the active Shelf Manager (such as via the command **deactivate 0x20**) does not affect the Shelf Manager functionality and does not cause a switchover to the other Shelf Manager. However, programmatic deactivation of the physical Shelf Manager IPM controller on the active Shelf Manager causes a switchover to the backup Shelf Manager if the configuration variable **SWITCHOVER_ON_HANDLE_OPEN** is set to **TRUE** (remembering that the default value of this parameter is carrier-dependent) and if the backup Shelf Manager is available for switchover. Please see the Deactivation Scenarios for the Shelf Manager for more information on this topic.

3.11.3 *Examples*

Deactivate the IPM controller proper at address 9Ch.

```
# clia deactivate 9c 0
```

Pigeon Point Shelf Manager Command Line Interpreter

Command executed successfully

```
# clia deactivate b 4 amc 1
```

Pigeon Point Shelf Manager Command Line Interpreter

Command executed successfully

3.12 *debuglevel*

3.12.1 *Syntax*

debuglevel [<new-value> [<new-console-value>]]

3.12.2 *Purpose*

This command shows the current debug levels for the Pigeon Point Shelf Manager (for both the system log and the console), or sets them to new values if new values are specified.

The debug level is a hexadecimal number in the range 0x0000 to 0x00FF that is treated as a bit mask. Each bit in the mask, when set, enables debug output of a specific type:

- 0x0001 Error messages
- 0x0002 Warning messages
- 0x0004 Informational messages
- 0x0008 Verbose informational messages
- 0x0010 Trace messages
- 0x0020 Verbose trace messages
- 0x0040 Messages displayed for important commands sent to the IPM controllers during their initialization
- 0x0080 Verbose messages about acquiring and releasing internal locks

Starting with release 2.4.4, separate debug levels can be set for Shelf Manager output to the system log versus output to the console. This makes it possible, for example, to reserve the system console for only serious error messages, while preserving the normal verbosity of the Shelf Manager output to the system log.

This command, when issued without parameters, shows the current debug level values for both system log and console. If both levels have the same value, only a single line of output is produced.

This command, when issued with a single parameter **<new-value>**, sets the specified debug level for output to both the system log and the console.

If this command is invoked with two parameters, the first parameter specifies the debug level for system log output and the second parameter specifies the debug level for console output.

The default debug level for the Shelf Manager is 0x0007 (for both the system log and the console), but this value can be overridden in the Shelf Manager configuration file (separately for the system log and the console), or during Shelf Manager startup using the **-v** option in the command line (for both the system log and the console).

This command can also be issued on the backup Shelf Manager.

3.12.3 *Examples*

Get current debug levels, and then set both of them to 0x001F. Here, the command **debuglevel** works in a mode compatible with previous releases.

```
# clia debuglevel
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Debug Mask is 0x0007
```

```
#
```

```
# clia debuglevel 1f
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Debug Mask is set to 0x001f
```

```
#
```

```
# clia debuglevel
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Debug Mask is 0x001f
```

```
#
```

Set the system log debug level mask to 0x0007 (informational) and the console mask to 0x0003 (errors and warnings only).

```
# clia debuglevel 7 3
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Debug Mask is set to 0x0007
```

```
Console Debug Mask is set to 0x0003
```

```
#
```

```
# clia debuglevel
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Debug Mask is 0x0007
```

```
Console Debug Mask is 0x0003
```

```
#
```

3.13 *exit/quit*

3.13.1 *Syntax*

exit | **quit**

3.13.2 *Purpose*

The command **exit** or **quit** exits the CLI interactive mode (which is entered by issuing **clia** without parameters). This command can also be issued on the backup Shelf Manager.

3.13.3 *Examples*

```
CLI> exit
```

```
#
```

3.14 *fans*

3.14.1 *Syntax*

```

fans [-v] [ <IPMB-address> [ <fru_id> ] ]
fans board <N>
fans shm <N>
fans power_supply <N>
fans pem <N>
fans fan_tray <N>
fans <IPMB-address> amc <M>
fans board <N> amc <M>

```

3.14.2 *Purpose*

This command shows information about the specified fan FRUs. If the FRU device ID is omitted, the command shows information about all fan FRUs controlled by the IPM controller at the specified address. If the IPMB address is also omitted, the command shows information about all fan FRUs known to the Shelf Manager.

The following information is shown:

- IPMB address and FRU device ID
- Minimum Speed Level
- Maximum Speed Level
- Maximum Sustained Speed Level
- Current Level (the pair of Override and Local Control levels if both are available)

3.14.3 *Examples*

Get fan information about all fan FRUs at IPMB address 20h.

```
# clia fans 20
```

Pigeon Point Shelf Manager Command Line Interpreter

```

20: FRU # 3
    Current Level: 3
    Minimum Speed Level: 0, Maximum Speed Level: 15
20: FRU # 5
    Current Level: 3
    Minimum Speed Level: 0, Maximum Speed Level: 15
20: FRU # 4
    Current Level: 3
    Minimum Speed Level: 0, Maximum Speed Level: 15

```

Get fan information for the fan residing at AMC 1 for AMC carrier at IPMB address 82h.

```
#clia fans 82 amc 1
```

Pigeon Point Shelf Manager Command Line Interpreter

```
No known fans at FRU id 0x01 at controller 0x82
#
```

3.15 *fru*

3.15.1 *Syntax*

```
fru [-v] [<IPMB-address> [id=<fru_id> | type=<site_type>]]
| [type=<site_type> [/<site_number>]]
fru board <N>
fru shm <N>
fru power_supply <N>
fru pem <N>
fru fan_tray <N>
fru <IPMB-address> amc <M>
fru board <N> amc <M>
```

3.15.2 *Purpose*

This command shows information about a specific FRU. If the FRU device ID is omitted, the command shows information about all FRUs controlled by the IPM controller at the specified address. If the IPMB address is also omitted, the command shows information about all FRUs known to the Shelf Manager.

Additionally, the site type can select FRUs. Site type should be specified in command parameters in hexadecimal. Associations between FRUs and their site types are stored in the Shelf FRU information. Site types are defined in the PICMG 3.0 specification as follows:

- 00h = AdvancedTCA Board
- 01h = Power Entry Module
- 02h = Shelf FRU Information
- 03h = Dedicated ShMC
- 04h = Fan Tray
- 05h = Fan Filter Tray
- 06h = Alarm
- 07h = AdvancedTCA™ Module (Mezzanine)
- 08h = PMC
- 09h = Rear Transition Module
- C0h - CFh = OEM defined

All other values are reserved.

In CompactPCI systems, the following OEM-defined site types are used to describe CompactPCI sites:

- C4h = CompactPCI Board
- C5h = CompactPCI Power Supply

The following information is shown for the FRU in standard mode:

- IPMB address and the FRU device ID
- Entity ID, Entity Instance
- Site type and number (if known)
- Current hot swap state, previous hot swap state and cause of the last state change for the FRU. The hot swap states M0-M7 are defined in the PICMG 3.0 specification as follows:

M0 – Not Installed

M1 – Inactive

M2 – Activation Request

M3 – Activation in Progress

M4 – FRU Active

M5 – Deactivation Request

M6 – Deactivation in Progress

M7 – Communication Lost

The following information is shown for the FRU in verbose mode only:

- The FRU device type, device type modifier (only for FRU-device-ID \neq 0). This information is taken from the FRU SDR and conforms to section 37.12 of the IPMI specification.
- Device ID string from the FRU SDR
- Current FRU power level and maximum FRU power level; current assigned power allocation in Watts

This command shows information about FRUs in state M1, if they were known previously to the Shelf Manager. This command can also be issued on the backup Shelf Manager; in that case, information is only reported about FRUs that are local to the backup Shelf Manager.

3.15.3 Examples

Get standard information about all FRUs at address 9Ch.

```
# clia fru 9c 0
```

Pigeon Point Shelf Manager Command Line Interpreter

```
9c: FRU # 0
    Entity: (0xd0, 0x0)
    Hot Swap State: M4 (Active), Previous: M3 (Activation In Progress),
    Last State Change Cause: Normal State Change (0x0)
    Device ID String: "Pigeon Point 6"
```

```
#
```

Get verbose information about all FRUs at address 9Ch.

```
# clia fru -v 9c 0
```

Pigeon Point Shelf Manager Command Line Interpreter

```
9c: FRU # 0
    Entity: (0xd0, 0x0)
```

```

    Hot Swap State: M4 (Active), Previous: M3 (Activation In Process),
    Last State Change Cause: Normal State Change (0x0)
    Device ID String: "Pigeon Point 6"
    Site Type: 0x00, Site Number: 14
    Current Power Level: 0x01, Maximum Power Level: 0x01, Current Power
    Allocation: 20.0 Watts

```

#

Get verbose information about FRU 1 at address 20h.

```
# clia fru -v 20 id=1
```

Pigeon Point Shelf Manager Command Line Interpreter

```

20: FRU # 1
    Entity: (0x1, 0x1)
    Hot Swap State: M4 (Active), Previous: M3 (Activation In Process),
    Last State Change Cause: Normal State Change (0x0)
    Device Type: "FRU Inventory Device behind management controller"
    (0x10), Modifier 0x0
    Device ID String: "Pigeon Point 1.1"
    Current Power Level: UNKNOWN, Maximum Power Level: UNKNOWN, Current
    Power Allocation: UNKNOWN

```

Get information about AMC 1 on the AMC carrier in slot 8.

```
# clia fru board 8 amc 1
```

Pigeon Point Shelf Manager Command Line Interpreter

```

84: FRU # 1 (AMC # 1)
    Entity: (0xc1, 0x61)
    Hot Swap State: M4 (Active), Previous: M3 (Activation In Process),
    Last State Change Cause: Normal State Change (0x0)
    Device ID String: "AMC Module 1"

```

#

3.16 *frudata*

3.16.1 *Syntax*

```
frudata [<IPMB-address> [<fru_id> [<block_offset>]]]
frudata <IPMB-address> <fru_id> <byte_offset> <byte1>
[byte2 ... [byte16] ... ]
```

<IPMB-address> <fru_id> can be replaced with any of the following alternatives:

```
board <N>
shm <N>
power_supply <N>
pem <N>
fan_tray <N>
<IPMB-address> amc <M>
board <N> amc <M>
```

3.16.2 *Purpose*

This command provides access to the FRU Information in raw form. Depending on the command format, it is used to read or write the FRU Information. In the read format, the command takes an optional 32-byte block number. In the write format it requires a byte offset parameter. The user can modify up to 65535 bytes of FRU Information. This command can also be issued on the backup Shelf Manager; in that case, FRU Information is only displayed for FRUs that are local to the backup Shelf Manager.

3.16.3 *Examples*

```
# clia frudata
```

Pigeon Point Shelf Manager Command Line Interpreter

```
20: FRU # 0      Failure status: 203 (0xcb)
    Requested data not present
20: FRU # 1 Raw FRU Info Data
    FRU Info size: 529
20: FRU # 2      Failure status: 203 (0xcb)
    Requested data not present
82: FRU # 0 Raw FRU Info Data
    FRU Info size: 160
9c: FRU # 0 Raw FRU Info Data
    FRU Info size: 160
fc: FRU # 0 Raw FRU Info Data
    FRU Info size: 160
fe: FRU # 0 Raw FRU Info Data
    FRU Info size: 160
#
```

clia frudata 20 1 0

Pigeon Point Shelf Manager Command Line Interpreter

```
20: FRU # 1 Block # 0 Raw FRU Info Data
    FRU Info size: 529
    01 00 01 05  0E 18 00 D3  01 04 01 02  55 AA 83 55
    AA 55 C1 00  00 00 00 00  00 00 00 00  00 00 00 00
#
```

clia frudata 20 1 1 0xfc 0xfe

Pigeon Point Shelf Manager Command Line Interpreter

Writing 2 bytes to IPM 0x20, FRU # 1, offset: 1, status = 0(0x0)

clia frudata 20 1 0

Pigeon Point Shelf Manager Command Line Interpreter

```
20: FRU # 1 Block # 0 Raw FRU Info Data
    FRU Info size: 529
    01 FC FE 05  0E 18 00 D3  01 04 01 02  55 AA 83 55
    AA 55 C1 00  00 00 00 00  00 00 00 00  00 00 00 00
#
```

clia frudata 20 1 1 0 1

Pigeon Point Shelf Manager Command Line Interpreter

Writing 2 bytes to IPM 0x20, FRU # 1, offset: 1, status = 0(0x0)

clia frudata 20 1 0

Pigeon Point Shelf Manager Command Line Interpreter

```
20: FRU # 1 Block # 0 Raw FRU Info Data
    FRU Info size: 529
    01 00 01 05  0E 18 00 D3  01 04 01 02  55 AA 83 55
    AA 55 C1 00  00 00 00 00  00 00 00 00  00 00 00 00
#
```

clia frudata board 8 amc 1

Pigeon Point Shelf Manager Command Line Interpreter

```
84: FRU # 1 Raw FRU Info Data
    FRU Info size: 64
    01 00 00 00  00 01 00 FE  C0 02 06 41  F7 5A 31 00
    16 00 1E C0  82 28 20 76  5A 31 00 19  00 00 80 04
    E0 FF FF E1  FF FF E2 FF  FF E3 FF FF  00 51 00 00
    FC 01 51 00  00 FC 02 51  00 00 FC 03  51 00 00 FC
```

3.17 *frudatar*

3.17.1 *Syntax*

frudatar <IPMB-address> <fru_id> <file name>

<IPMB-address> <fru_id> can be replaced with any of the following alternatives:

board <N>

shm <N>

power_supply <N>

pem <N>

fan_tray <N>

<IPMB-address> **amc** <M>

board <N> **amc** <M>

3.17.2 *Purpose*

This command reads FRU Information from the specified FRU and stores it in a file on the ShMM flash file system in a raw format (in other words, uploads FRU Information from the specified FRU to a flash file). The parameter <**file name**> specifies the path to the destination file. The number of bytes read from the FRU and written to the destination file is equal to the number of bytes returned in the response to the IPMI command “Get FRU Inventory Area Info” for the specified FRU.

This command can also be issued on the backup Shelf Manager; in that case, FRU Information is only read from FRUs that are local to the backup Shelf Manager.

3.17.3 *Examples*

```
# clia frudatar 20 2 /var/tmp/20.2.bin
```

Pigeon Point Shelf Manager Command Line Interpreter

```
20: FRU # 2 Raw FRU Info Data
```

```
FRU Info size: 176
```

```
01 00 00 01 09 00 00 F5 01 08 19 84 C0 42 C7 53
63 68 72 6F 66 66 D9 53 68 4D 4D 2D 41 43 42 2D
46 43 20 53 68 65 6C 66 20 4D 61 6E 61 67 65 72
86 10 04 41 10 14 01 89 D2 04 65 58 13 51 17 00
00 C0 C1 00 00 00 00 EA 01 0D 19 C7 53 63 68 72
6F 66 66 DD 46 61 6E 20 43 6F 6E 74 72 6F 6C 6C
65 72 20 6F 6E 20 53 68 4D 4D 2D 41 43 42 2D 46
43 89 D2 04 65 58 13 51 17 00 00 C9 52 65 76 2E
20 31 2E 30 30 86 10 04 41 10 14 01 C0 DF 2F 76
61 72 2F 6E 76 64 61 74 61 2F 66 61 6E 2D 66 72
75 2D 69 6E 66 6F 72 6D 61 74 69 6F 6E C1 00 26
```

```
#
```

3.18 *frudataw*

3.18.1 *Syntax*

```
frudataw [-s|-d] <IPMB-address> <fru_id> [<file name>|-c]
frudataw -s -c <IPMB-address> <fru_id>
frudataw -d -c <IPMB-address> <fru_id>
```

<IPMB-address> <fru_id> can be replaced with any the following alternatives:

```
board <N>
shm <N>
power_supply <N>
pem <N>
fan_tray <N>
<IPMB-address> amc <M>
board <N> amc <M>
```

3.18.2 *Purpose*

This command downloads FRU Information to the specified FRU from a file on the ShMM flash file system. The file contains the raw binary image of the FRU Information. The parameter **<file name>** specifies the path to the source file.

This command can also be issued on the backup Shelf Manager; in that case, FRU Information is only downloaded to FRUs that are local to the backup Shelf Manager.

There are two special options to update HPDL data in the FRU Information, both in the Shelf FRU Information and regular (e.g board) FRU Information. The option **-d** indicates that HPDL data are to be updated; the option **-s** indicates that SDRs are to be updated. In both cases, the parameter **<file name>** specifies the path to the file that contains binary HPDL data or SDRs to be stored in the target FRU information. The option **-c** (if specified instead of the file name) removes (clears) the HPDL data or SDRs, respectively, from the target FRU Information.

The parameters **<ipmb-address>** and **<fru-id>** specify the IPMB address and FRU device ID of the FRU Information to update. When updating HPDL data or SDRs in the Shelf FRU Information, it is necessary to specify the addresses of actual locations of the Shelf FRU Information. The alias (20h, 254) currently does not work for this purpose, but may become available in a future release of the Shelf Manager.

The file that contains binary HPDL data or SDRs can be compressed using the **gzip** compression utility. The compressed data is then stored in the FRU Information. Decompression is performed by the Shelf Manager when reading HPDL data from the FRU information. The Shelf Manager automatically detects whether the data is compressed or not.

3.18.3 Examples

```
# clia frudataw 20 2 /var/tmp/20.2.orig.bin
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 0, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 16, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 32, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 48, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 64, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 80, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 96, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 112, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 128, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 144, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 160, status = 0(0x0)
File "/var/tmp/20.2.orig.bin" has been written to the FRU 20#2
```

```
#
```

```
# clia frudataw -d 20 2 /var/nvdata/chassis_data
```

Pigeon Point Shelf Manager Command Line Interpreter

```
20: FRU # 2 Reading FRU Info Data, size 8192
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 0, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 16, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 32, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 48, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 64, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 80, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 96, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 112, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 128, status = 0(0x0)
.....
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 3072, status =
0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 3088, status =
0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 3104, status =
0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 3120, status =
0(0x0)
Writing 8 bytes to IPM 0x20, FRU # 2, offset: 3136, status = 0(0x0)
wrote 3144 (of 3144) bytes to the FRU 20#2 #
```

```
# clia frudataw -s -c 20 2
```

Pigeon Point Shelf Manager Command Line Interpreter

```
20: FRU # 2 Reading FRU Info Data, size 8192
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 0, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 16, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 32, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 48, status = 0(0x0)
Writing 16 bytes to IPM 0x20, FRU # 2, offset: 64, status = 0(0x0)
```

```

    Writing 16 bytes to IPM 0x20, FRU # 2, offset: 80, status = 0(0x0)
    Writing 16 bytes to IPM 0x20, FRU # 2, offset: 96, status = 0(0x0)
    Writing 16 bytes to IPM 0x20, FRU # 2, offset: 112, status = 0(0x0)
    Writing 16 bytes to IPM 0x20, FRU # 2, offset: 128, status = 0(0x0)
    .....
    Writing 16 bytes to IPM 0x20, FRU # 2, offset: 1136, status =
0(0x0)
    Writing 16 bytes to IPM 0x20, FRU # 2, offset: 1152, status =
0(0x0)
    Writing 16 bytes to IPM 0x20, FRU # 2, offset: 1168, status =
0(0x0)
    Writing 16 bytes to IPM 0x20, FRU # 2, offset: 1184, status =
0(0x0)
    Writing 16 bytes to IPM 0x20, FRU # 2, offset: 1200, status =
0(0x0)
    Writing 13 bytes to IPM 0x20, FRU # 2, offset: 1216, status =
0(0x0)
    wrote 1229 (of 1229) bytes to the FRU 20#2 #

```

3.19 *fruinfo*

3.19.1 *Syntax*

fruinfo [-v] [-x] <IPMB-address> <fru_id>

<IPMB-address> <fru_id> can be replaced with any the following alternatives:

board <N>

shm <N>

power_supply <N>

pem <N>

fan_tray <N>

<IPMB-address> **amc** <M>

board <N> **amc** <M>

3.19.2 *Purpose*

This command shows FRU Information in a user-friendly format. This command can also be issued on the backup Shelf Manager; in that case, FRU Information is only shown for FRUs that are local to the backup Shelf Manager.

3.19.3 *Examples*

```
# clia fruinfo 20 0
```

Pigeon Point Shelf Manager Command Line Interpreter

```
20: FRU # 0, FRU Info
    Failure status: 203 (0xcb)
    Requested data not present
#
```

```
# clia fruinfo 20 1
```

Pigeon Point Shelf Manager Command Line Interpreter

```
20: FRU # 1, FRU Info
Common Header:      Format Version = 1
```

Chassis Info Area:

```
    Version      = 1
    Chassis Type          = (1)
    Chassis Part Number   = 0x55 0xAA
    Chassis Serial Number = 5I:5
```

Board Info Area:

```
    Version      = 1
    Language Code          = 25
```

```

Mfg Date/Time           = Jun 16 15:37:00 2011 (8129737 minutes
since 1996)
Board Manufacturer      = Pigeon Point Systems
Board Product Name     = Shelf Manager
Board Serial Number    = PPS0000000
Board Part Number      = A
FRU Programmer File ID =

```

Product Info Area:

```

Version      = 1
Language Code      = 25
Manufacturer Name  = Pigeon Point Systems
Product Name      = Shelf Manager
Product Part / Model# = 000000
Product Version   = Rev. 1.00
Product Serial Number = PPS0000000
Asset Tag        =
FRU Programmer File ID =

```

Multi Record Area:

```

Record Type           = Management Access Record
Version = 2
Sub-Record Type: Component Name (0x05)

```

```

PICMG Address Table Record (ID=0x10)
Version = 1

```

```

PICMG Backplane Point-to-Point Connectivity Record (ID=0x04)
Version = 0

```

```

PICMG Shelf Power Distribution Record (ID=0x11)
Version = 0

```

```

PICMG Shelf Activation And Power Management Record (ID=0x12)
Version = 0

```

```

#
# clia fruinfo -v -x 20 1

```

Pigeon Point Shelf Manager Command Line Interpreter

```

20: FRU # 1, FRU Info
Common Header:      Format Version = 1
01 00 01 05  0E 18 00 D3

```

Chassis Info Area:

```

Version      = 1
Chassis Type      = (1)
Chassis Part Number = 0x55 0xAA
Chassis Serial Number = 5I:5
Custom Chassis Info =
01 04 01 02  55 AA 83 55  AA 55 C1 00  00 00 00 00
00 00 00 00  00 00 00 00  00 00 00 00  00 00 00 61

```

Board Info Area:

```

Version      = 1
Language Code      = 25

```



```

Mfg Date/Time           = Jun 16 15:37:00 2011 (8129737 minutes
since 1996)
Board Manufacturer      = Pigeon Point Systems
Board Product Name     = Shelf Manager
Board Serial Number    = PPS0000000
Board Part Number      = A
FRU Programmer File ID =
Custom Board Info      =
01 09 19 C9 0C 7C D4 50 69 67 65 6F 6E 20 50 6F
69 6E 74 20 53 79 73 74 65 6D 73 D6 53 68 65 6C
66 20 4D 61 6E 61 67 65 72 20 20 20 20 20 20 20
20 20 CA 50 50 53 30 30 30 30 30 30 C2 41 20
C0 C1 00 00 00 00 00 A0

```

Product Info Area:

```

Version      = 1
Language Code      = 25
Manufacturer Name  = Pigeon Point Systems
Product Name      = Shelf Manager
Product Part / Model# = 000000
Product Version    = Rev. 1.00
Product Serial Number = PPS0000000
Asset Tag         =
FRU Programmer File ID =
Custom Product Info =
01 0A 19 D4 50 69 67 65 6F 6E 20 50 6F 69 6E 74
20 53 79 73 74 65 6D 73 D6 53 68 65 6C 66 20 4D
61 6E 61 67 65 72 20 20 20 20 20 20 20 C6
30 30 30 30 30 30 C9 52 65 76 2E 20 31 2E 30 30
CA 50 50 53 30 30 30 30 30 30 C0 C0 C1 00 6A

```

Multi Record Area:

```

Record Type           = Management Access Record
Version = 2
Sub-Record Type: Component Name (0x05)
Sub-Record Data:      = ShMM
03 02 05 A6 50 05 53 68 4D 4D

```

PICMG Address Table Record (ID=0x10)

```

Version = 1
Shelf Address      =
Address Table Entries# = 16
Hw Addr: 41, Site # 1, Type: "AdvancedTCA Board" 00
Hw Addr: 42, Site # 2, Type: "AdvancedTCA Board" 00
Hw Addr: 43, Site # 3, Type: "AdvancedTCA Board" 00
Hw Addr: 44, Site # 4, Type: "AdvancedTCA Board" 00
Hw Addr: 45, Site # 5, Type: "AdvancedTCA Board" 00
Hw Addr: 46, Site # 6, Type: "AdvancedTCA Board" 00
Hw Addr: 47, Site # 7, Type: "AdvancedTCA Board" 00
Hw Addr: 48, Site # 8, Type: "AdvancedTCA Board" 00
Hw Addr: 49, Site # 9, Type: "AdvancedTCA Board" 00
Hw Addr: 4a, Site # 10, Type: "AdvancedTCA Board" 00
Hw Addr: 4b, Site # 11, Type: "AdvancedTCA Board" 00
Hw Addr: 4c, Site # 12, Type: "AdvancedTCA Board" 00
Hw Addr: 4d, Site # 13, Type: "AdvancedTCA Board" 00
Hw Addr: 4e, Site # 14, Type: "AdvancedTCA Board" 00
Hw Addr: 4f, Site # 15, Type: "AdvancedTCA Board" 00

```

```

        Hw Addr: 50, Site # 16, Type: "AdvancedTCA Board" 00
C0 02 4B 44 AF 5A 31 00 10 01 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 10
41 01 00 42 02 00 43 03 00 44 04 00 45 05 00 46
06 00 47 07 00 48 08 00 49 09 00 4A 0A 00 4B 0B
00 4C 0C 00 4D 0D 00 4E 0E 00 4F 0F 00 50 10 00

```

PICMG Backplane Point-to-Point Connectivity Record (ID=0x04)

Version = 0

P2P Slot Descriptor:

```

        Channel Type           = 0x0B PICMG®3.0 Base Interface
        LocalSlot/HW Address    = 0x41
        Channel Count           = 0x0F
        Channel Descriptor      = LocalChannel 2, RemoteChannel 2,
RemoteSlot 0x42
        Channel Descriptor      = LocalChannel 3, RemoteChannel 1,
RemoteSlot 0x43
        Channel Descriptor      = LocalChannel 4, RemoteChannel 1,
RemoteSlot 0x44
        Channel Descriptor      = LocalChannel 5, RemoteChannel 1,
RemoteSlot 0x45
        Channel Descriptor      = LocalChannel 6, RemoteChannel 1,
RemoteSlot 0x46
        Channel Descriptor      = LocalChannel 7, RemoteChannel 1,
RemoteSlot 0x47
        Channel Descriptor      = LocalChannel 8, RemoteChannel 1,
RemoteSlot 0x48
        Channel Descriptor      = LocalChannel 9, RemoteChannel 1,
RemoteSlot 0x49
        Channel Descriptor      = LocalChannel 10, RemoteChannel 1,
RemoteSlot 0x4A
        Channel Descriptor      = LocalChannel 11, RemoteChannel 1,
RemoteSlot 0x4B
        Channel Descriptor      = LocalChannel 12, RemoteChannel 1,
RemoteSlot 0x4C
        Channel Descriptor      = LocalChannel 13, RemoteChannel 1,
RemoteSlot 0x4D
        Channel Descriptor      = LocalChannel 14, RemoteChannel 1,
RemoteSlot 0x4E
        Channel Descriptor      = LocalChannel 15, RemoteChannel 1,
RemoteSlot 0x4F
        Channel Descriptor      = LocalChannel 16, RemoteChannel 1,
RemoteSlot 0x50

```

P2P Slot Descriptor:

```

        Channel Type           = 0x0B PICMG®3.0 Base Interface
        LocalSlot/HW Address    = 0x42
        Channel Count           = 0x0F
        Channel Descriptor      = LocalChannel 2, RemoteChannel 2,
RemoteSlot 0x41
        Channel Descriptor      = LocalChannel 3, RemoteChannel 2,
RemoteSlot 0x43
        Channel Descriptor      = LocalChannel 4, RemoteChannel 2,
RemoteSlot 0x44
        Channel Descriptor      = LocalChannel 5, RemoteChannel 2,
RemoteSlot 0x45
        Channel Descriptor      = LocalChannel 6, RemoteChannel 2,
RemoteSlot 0x46

```

```

        Channel Descriptor = LocalChannel 7, RemoteChannel 2,
RemoteSlot 0x47
        Channel Descriptor = LocalChannel 8, RemoteChannel 2,
RemoteSlot 0x48
        Channel Descriptor = LocalChannel 9, RemoteChannel 2,
RemoteSlot 0x49
        Channel Descriptor = LocalChannel 10, RemoteChannel 2,
RemoteSlot 0x4A
        Channel Descriptor = LocalChannel 11, RemoteChannel 2,
RemoteSlot 0x4B
        Channel Descriptor = LocalChannel 12, RemoteChannel 2,
RemoteSlot 0x4C
        Channel Descriptor = LocalChannel 13, RemoteChannel 2,
RemoteSlot 0x4D
        Channel Descriptor = LocalChannel 14, RemoteChannel 2,
RemoteSlot 0x4E
        Channel Descriptor = LocalChannel 15, RemoteChannel 2,
RemoteSlot 0x4F
        Channel Descriptor = LocalChannel 16, RemoteChannel 2,
RemoteSlot 0x50
C0 02 65 2B AE 5A 31 00 04 00 0B 41 0F 42 42 00
43 61 00 44 81 00 45 A1 00 46 C1 00 47 E1 00 48
01 01 49 21 01 4A 41 01 4B 61 01 4C 81 01 4D A1
01 4E C1 01 4F E1 01 50 01 02 0B 42 0F 41 42 00
43 62 00 44 82 00 45 A2 00 46 C2 00 47 E2 00 48
02 01 49 22 01 4A 42 01 4B 62 01 4C 82 01 4D A2
01 4E C2 01 4F E2 01 50 02 02

```

PICMG Shelf Power Distribution Record (ID=0x11)

Version = 0

Feed count: 1

Feed:

Maximum External Available Current: 50.0 Amps

Maximum Internal Current: Not specified

Minimum Expected Operating Voltage: -40.5 Volts

Feed-to-FRU Mapping entries count: 16

FRU Addr: 41, FRU ID: 0xfe

FRU Addr: 42, FRU ID: 0xfe

FRU Addr: 43, FRU ID: 0xfe

FRU Addr: 44, FRU ID: 0xfe

FRU Addr: 45, FRU ID: 0xfe

FRU Addr: 46, FRU ID: 0xfe

FRU Addr: 47, FRU ID: 0xfe

FRU Addr: 48, FRU ID: 0xfe

FRU Addr: 49, FRU ID: 0xfe

FRU Addr: 4a, FRU ID: 0xfe

FRU Addr: 4b, FRU ID: 0xfe

FRU Addr: 4c, FRU ID: 0xfe

FRU Addr: 4d, FRU ID: 0xfe

FRU Addr: 4e, FRU ID: 0xfe

FRU Addr: 4f, FRU ID: 0xfe

FRU Addr: 50, FRU ID: 0xfe

```

C0 02 2C A7 6B 5A 31 00 11 00 01 F4 01 FF FF 51
10 41 FE 42 FE 43 FE 44 FE 45 FE 46 FE 47 FE 48
FE 49 FE 4A FE 4B FE 4C FE 4D FE 4E FE 4F FE 50
FE

```

PICMG Shelf Activation And Power Management Record (ID=0x12)
 Version = 0
 Allowance for FRU Activation Readiness: 10 seconds
 FRU Activation and Power Description Count: 16
 Hw Address: 41, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts
 Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 42, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts
 Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 43, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts
 Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 44, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts
 Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 45, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts
 Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 46, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts
 Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 47, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts
 Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 48, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts
 Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 49, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts
 Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 4a, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts
 Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 4b, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts
 Shelf Manager Controlled Activation: Enabled

Delay Before Next Power On: 0.0 seconds

Hw Address: 4c, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 4d, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 4e, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 4f, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 50, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

```
C0 82 57 81 E6 5A 31 00 12 00 0A 10 41 FE 96 00
40 42 FE 96 00 40 43 FE 96 00 40 44 FE 96 00 40
45 FE 96 00 40 46 FE 96 00 40 47 FE 96 00 40 48
FE 96 00 40 49 FE 96 00 40 4A FE 96 00 40 4B FE
96 00 40 4C FE 96 00 40 4D FE 96 00 40 4E FE 96
00 40 4F FE 96 00 40 50 FE 96 00 40
```

#

3.20 *frucontrol*

3.20.1 *Syntax*

```

frucontrol <IPMB-address> <fru_id> <option>
frucontrol board <N> <option>
frucontrol shm <N> <option>
frucontrol power_supply <N> <option>
frucontrol pem <N>
frucontrol fan_tray <N> <option>
frucontrol <IPMB-address> amc <M> <option>
frucontrol board <N> amc <M> <option>

```

3.20.2 *Purpose*

This command sends the “FRU Control” command to the specified FRU, performing the specified operation on the FRU payload. The FRU is specified using the IPMB address of the owning IPM controller and the FRU device ID. FRU device ID 0 designates the IPM controller proper in PICMG 3.0 contexts.

For the option **<info>**, the command “Get FRU Control Capabilities” is sent to the specified FRU. The returned byte indicates what FRU Control commands are supported by the specified FRU. This option only works for FRUs that support ECN-002 to the PICMG 3.0 R2.0 specification.

The parameter **<option>** specifies the option of the FRU Control command to be used. It can be specified as one of the following symbolic values:

- **cold_reset** (abbreviated as **cr**) – perform cold reset of the FRU payload
- **warm_reset** (abbreviated as **wr**) – perform warm reset of the FRU payload
- **graceful_reboot** (abbreviated as **gr**) – perform graceful reboot of the FRU payload
- **diagnostic_interrupt** (abbreviated as **di**) – issue the diagnostic interrupt
- **info** – get FRU Control capabilities.

This command can also be issued on the backup Shelf Manager; in that case, the FRU Control command is only sent to FRUs that are local to the backup Shelf Manager.

According to the PICMG 3.0 specification, the command “FRU Control (Cold Reset)” must be implemented for all FRUs. Most FRUs that are represented by the Shelf Manager (such as fan trays or PEMs) have no payload to which the operations of this command would apply; for these FRUs the Shelf Manager implements the cold reset command as a no-operation that just returns the successful completion code.

3.20.3 *Examples*

Issue a “Cold Reset” command to the FRU 0 at IPMB address 9Ch.

```
# clia frucontrol 9c 0 cr
```

Pigeon Point Shelf Manager Command Line Interpreter

```
FRU Control: Controller 0x9c, FRU ID # 0, command 0x00, status
0(0x0)
Command executed successfully
```

```
#
```

Get FRU Control capabilities for the FRU 0 at IPMB address 0Eh.

```
# clia frucontrol 0e 0 info
```

Pigeon Point Shelf Manager Command Line Interpreter

```
FRU Control Capabilities: Controller 0x0e, FRU ID # 0, status
0(0x0)
Capabilities: 00; Supported commands: Cold Reset
```

```
#
```

```
#
```

3.21 *getbootdev*

3.21.1 *Syntax*

getbootdev <IPMB-0-address> [<fru_id> | <IPMB-L-address>]

3.21.2 *Purpose*

This command shows the system boot parameters for a designated IPM controller. If AdvancedMC access is not targeted, the second parameter should be set to 0 or omitted. The IPMB-L address for an AMC address is used if the second parameter exceeds 70h. Otherwise, the second parameter is treated as a FRU ID and converted to an IPMB-L address via AMC address mapping.

3.21.3 *Examples*

Get the system boot options for IPM controller at IPMB address 82h.

```
# clia getbootdev 82
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Get boot device option: status = 0x0 (0)
Response data (raw): 01 05 00 00 00 00 00
Decoded:
    Parameter version: 1
    Parameter valid = TRUE
    Boot option selector: 5
    Boot flags valid = FALSE
    Boot device selector: 0 (No override)
```

Get the system boot options for an AMC, where the carrier has IPMB-0 address 90h and the MMC has address IPMB-L address 72h.

```
# clia getbootdev 90 72
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Get boot device option: status = 0x0 (0)
Response data (raw): 01 05 80 04 00 00 00
Decoded:
    Parameter version: 1
    Parameter valid = TRUE
    Boot option selector: 5
    Boot flags valid = TRUE
    Boot device selector: 1 (Force PXE)
```


3.22 *getfanlevel*

3.22.1 *Syntax*

```
getfanlevel <IPMB-address> <fru_id>
getfanlevel shm <N>
getfanlevel board <N>
getfanlevel power_supply <N>
getfanlevel pem <N>
getfanlevel fan_tray <N>
getfanlevel <IPMB-address> amc <M>
getfanlevel board <N> amc <M>
```

3.22.2 *Purpose*

This command shows the current level of the fan controlled by the FRU specified in the command parameters.

3.22.3 *Examples*

Get fan level for the fan residing at FRU #2 at IPMB address 20h.

```
# clia getfanlevel 20 2
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
20: FRU # 2 Override Fan Level: 1, Local Fan Level: 255
```

```
#
```

3.23 *getfanpolicy*

3.23.1 *Syntax*

```
getfanpolicy [<fan_tray_addr> [<fan_tray_fru_id>]] [-s
<addr>|<site_type> [<fru_id>|<site_number>]]
```

3.23.2 *Purpose*

This command retrieves information about Fan Tray(s) control mode and/or FRUs coverage by the specified Fan Tray(s). Notice that this command returns two different pieces of data: whether or not the site(s) are enabled/disabled for autonomous control by the Shelf Manager (based on "Set Fan Policy" commands), and whether or not the FRU site(s) are covered by the fans (according to the Fan Geography record).

The parameters **<fan_tray_addr>** and **<fan_tray_fru_id>** specify a fan tray. The command may be issued with no parameters; in this case, the information about all Fan Trays and FRUs will be received.

If a numeric argument is expected to be treated as a hexadecimal, the "0x" prefix should be used, otherwise the error will be returned.

The flag **-s** precedes the parameters that define a site covered by the fan tray.

The **<site_type>** parameter can accept one of the following values: **Board**, **PEM**, **ShelfFRU**, **ShelfManager**, **FanTray**, **FanFilterTray**, **Alarm**, **Mezzanine**, **PMC**, **RTM**.

3.23.3 *Examples*

Get fan policy for the fan tray at IPMB address 20h, FRU ID 3.

```
# clia getfanpolicy 0x20 3
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Fan Tray: 0x20, FRU Id # 3
Policy Type: Any Site
Policy Timeout: 20 seconds
Policy Applied: Tue Oct 17 02:32:06 2006
```

Get fan policy for the fan tray at IPMB address 20h, FRU ID 3, applied to the site at IPMB address 20h, FRU ID 1.

```
# clia getfanpolicy 0x20 3 -s 0x20 1
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Fan Tray: 0x20, FRU Id # 3
```

Policy Type: Per Site
Policy Timeout: 20 seconds
Policy Applied: Tue Oct 17 02:39:06 2006
Site Type: Dedicated ShMC, Site Number: 1
Site Covered: TRUE

3.24 *getfruledstate*

3.24.1 *Syntax*

```
getfruledstate [-v] [<IPMB-address> [<fru_id>
[<LedId>|ALL]]]
getfruledstate shm <N>[<LedId>|ALL]
getfruledstate board <N> [<LedId>|ALL]
getfruledstate power_supply <N>[<LedId>|ALL]
getfruledstate pem <N> [<LedId>|ALL]
getfruledstate fan_tray <N>[<LedId>|ALL]
getfruledstate <IPMB-address> amc <M> [<LedId>|ALL]
getfruledstate board <N> amc <M> [<LedId>|ALL]
```

3.24.2 *Purpose*

This command shows the current FRU LED state on all levels of control that are enabled for the LED(s). In verbose mode, information about the colors supported by the LED(s) is also shown.

Information can be shown about a specific LED or all LEDs for the given FRU. IPMB address and FRU ID of the target LED can also be omitted. If FRU ID is omitted, information is shown about all LEDs on all FRUs of the given IPM controller. If IPMB address is also omitted, information is shown about all known LEDs in the shelf.

This command can also be issued on the backup Shelf Manager; in that case, the FRU LED state is only shown for FRU LEDs that are local to the backup Shelf Manager.

3.24.3 *Examples*

Show LED state for all LEDs on the IPM controller at IPMB address FCh:

```
# clia getfruledstate fc
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
fc: FRU # 0, Led # 0 ("BLUE LED"):
    Local Control LED State: LED OFF
```

```
fc: FRU # 0, Led # 1 ("LED 1"):
    Local Control LED State: LED OFF
```

```
fc: FRU # 0, Led # 2 ("LED 2"):
    Local Control LED State: LED OFF
```

```
fc: FRU # 0, Led # 3 ("LED 3"):
    Local Control LED State: LED OFF
```

```
fc: FRU # 0, Led # 4 ("Application Specific LED# 1"):
    Local Control LED State: LED ON, color: GREEN
```

Show LED state for the IPM controller at IPMB address FCh:

```
# clia getfruLEDstate -v FC
```

Pigeon Point Shelf Manager Command Line Interpreter

```
fc: FRU # 0, Led # 0 ("BLUE LED"):
    Local Control LED State: LED OFF
    LED's color capabilities:
        Colors supported(0x02): BLUE
        Default LED Color in Local Control State(0x01): BLUE
        Default LED Color in Override State(0x01): BLUE

fc: FRU # 0, Led # 1 ("LED 1"):
    Local Control LED State: LED OFF
    LED's color capabilities:
        Colors supported(0x0C): RED GREEN
        Default LED Color in Local Control State(0x03): GREEN
        Default LED Color in Override State(0x03): GREEN

fc: FRU # 0, Led # 2 ("LED 2"):
    Local Control LED State: LED OFF
    LED's color capabilities:
        Colors supported(0x0C): RED GREEN
        Default LED Color in Local Control State(0x03): GREEN
        Default LED Color in Override State(0x03): GREEN

fc: FRU # 0, Led # 3 ("LED 3"):
    Local Control LED State: LED OFF
    LED's color capabilities:
        Colors supported(0x0C): RED GREEN
        Default LED Color in Local Control State(0x02): RED
        Default LED Color in Override State(0x02): RED

fc: FRU # 0, Led # 4 ("Application Specific LED# 1"):
    Local Control LED State: LED ON, color: GREEN
    LED's color capabilities:
        Colors supported(0x0C): RED GREEN
        Default LED Color in Local Control State(0x02): RED
        Default LED Color in Override State(0x02): RED
```

Show LED state for FRU #0 of the IPM controller at IPMB address 20h:

```
# clia getfruLEDstate 20 0
```

Pigeon Point Shelf Manager Command Line Interpreter

```
20: FRU # 0, Led # 0 ("BLUE LED"):
    Local Control LED State: LED ON, color: BLUE

20: FRU # 0, Led # 1 ("LED 1"):
    Local Control LED State: LED OFF
```

Show LED state for LED #1 from FRU #0 of the IPM controller at IPMB address 20h:

```
#clia getfruLEDstate -v 20 0 1
```

Pigeon Point Shelf Manager Command Line Interpreter

20: FRU # 0, Led # 1 ("LED 1"):

Local Control LED State: LED OFF

LED's color capabilities:

Colors supported(0x04): RED

Default LED Color in Local Control State(0x02): RED

Default LED Color in Override State(0x02): RED

3.25 *gethysteresis*

3.25.1 *Syntax*

```
gethysteresis [<IPMB-address> [ [ <lun>: ] <sensor id> |
<sensor name>] ]
gethysteresis [board <N> [ [ <lun>: ] <sensor id> | <sensor
name>] ]
gethysteresis [shm <N> [ [ <lun>: ] <sensor id> | <sensor
name>] ]
gethysteresis <IPMB-address> -f <fru_id>
gethysteresis <IPMB-address> -f amc <amc_number>
gethysteresis board <N> -f <fru_id>
gethysteresis board <N> -f amc <amc_number>
gethysteresis shm <N> -f <fru_id>
gethysteresis shm <N> -f amc <amc_number>
```

3.25.2 *Purpose*

This command shows the current hysteresis values for the specified sensor(s). The sensor(s) must be threshold-based. Both raw and processed values are shown.

The option **-f** allows the user to select all sensors that belong to a specific FRU, designated either with its **<fru_id>** or, if it is an AMC, with the **amc <amc_number>** notation.

The command allows the user to qualify the sensor number with the Logical Unit Number (LUN) if the targets controller supports sensors on multiple LUNs. If the LUN is omitted, the current hysteresis values for all sensors with the specified sensor number are shown. **<lun>** can take the value 0, 1 or 3. (LUN 2 is reserved.)

Sensor names are not qualified with LUN numbers, since it is assumed that sensor names will normally be unique within the controller. However, if there are several sensors with the same name within the controller, information is shown about all of them. If **<IPMB-address>** is omitted, the current hysteresis levels for all sensors for the specified IPMB address are shown.

This command can also be issued on the backup Shelf Manager; in that case, the current hysteresis values are only shown for sensors that are local to the backup Shelf Manager.

3.25.3 *Examples*

Show the hysteresis values for sensor # 2 on the IPM controller at IPMB address FCh.

```
# clia gethysteresis FC 2
```

Pigeon Point Shelf Manager Command Line Interpreter

```
fc: LUN: 0, Sensor # 2 ("lm75 temp")
    Type: Threshold (0x01), "Temperature"(0x01)
        Positive hysteresis, Raw data: 0x00    Processed data: 0.00000
degrees C
        Negative hysteresis, Raw data: 0x00    Processed data: 0.00000
degrees C
```

Show the hysteresis values for sensors that belong to FRU #5 on the IPM controller at IPMB address 20h

```
# clia gethysteresis 20 -f 5
```

Pigeon Point Shelf Manager Command Line Interpreter

Flag -f at position 1

```
20: LUN: 0, Sensor # 126 ("Temp_In Right")
    Type: Threshold (0x01), "Temperature" (0x01)
        Positive hysteresis, Raw Data: 0x00    Processed data: 0.000000
degrees C
        Negative hysteresis, Raw Data: 0x00    Processed data: 0.000000
degrees C
```

```
#
```


3.26 *getipmbstate*

3.26.1 *Syntax*

getipmbstate <IPMB-address> [<link>] (in radial IPMB-0 environment)

getipmbstate <IPMB-address> (in bused IPMB-0 environment)

3.26.2 *Purpose*

This command shows the current state of IPMB-0 on the target IPM Controller. The state is taken from the sensor data provided by the IPMB Link sensor on the target IPM controller (sensor type F1). Information about both buses A and B is displayed.

The command works differently in bused and radial contexts. In a bused shelf, or in a radial shelf if the target IPM controller is not an IPMB hub, the argument <link> is not used. Information about the state of IPMB-A and IPMB-B on the target IPM controller is shown.

In the radial shelf if the target IPM Controller is an IPMB hub, the command works as follows:

- If <link> is omitted, the command shows information about the state of all radial IPMB links. The state is taken from the sensor data of the multiple IPMB link sensors on the IPM controller.
- If <link> is present, the command shows information about the specific radial IPMB link (1 to 95). The state of the link is taken from the state of the corresponding IPMB link sensor on the IPM controller.

In both cases, information about the state of both IPMB-A and IPMB-B is shown.

This command can also be issued on the backup Shelf Manager; in that case, the current state of IPMB-0 is only reported for IPM controllers that are local to the backup Shelf Manager.

3.26.3 *Examples*

Show the current state of IPMB-0 on the IPM controller at IPMB address 92h.

```
# clia getipmbstate 92
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
92: LUN: 0, Sensor # 1 ("IPMB LINK")
  Bus Status: 0x8  (IPMB-A Enabled, IPMB-B Enabled)
  IPMB A State: 0x8  (LocalControl, No failure)
  IPMB B State: 0x8  (LocalControl, No failure)
```

Show the current state of IPMB link 8 on the Shelf Manager (the IPM controller at 20h).

```
# clia getipmbstate 20 8
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

20: Link: 8, LUN: 0, Sensor # 12 ("IPMB LINK 8")
Bus Status: 0x8 (IPMB-A Enabled, IPMB-B Enabled)
IPMB A State: 0x8 (LocalControl, No failure)
IPMB B State: 0x8 (LocalControl, No failure)

3.27 *getlanconfig*

3.27.1 *Syntax*

```
getlanconfig <channel> [ <parameter-name> [ <additional-parameters> ] ]
getlanconfig <channel> [ <parameter-number> [ <additional-parameters> ] ]
```

3.27.2 *Purpose*

This command shows the value of the specified LAN configuration parameter on the specified channel. If no configuration parameter name or number is specified, all configuration parameters for the specified channel are shown.

The following table lists the names and numbers of LAN configuration parameters supported by the **getlanconfig** command:

Table 8 Names and Numbers of LAN Configuration Parameters Supported by the **getlanconfig** Command

PARAMETER NAME	NUMBER	DESCRIPTION
auth_support	1	An 8-bit value that contains authentication type support flags for the LAN channel.
auth_enables	2	Five 8-bit values that contain authentication types enable flags for Callback, User, Operator, Administrator, and OEM privilege levels for the LAN channel.
ip	3	A string value that contains the IP address assigned to the LAN channel in dotted decimal notation (e.g. 192.168.0.15).
ip_source	4	A value that encodes the source of the assigned IP address.
mac	5	A string value that contains the MAC address assigned to the LAN channel as 6 hexadecimal byte values delimited by ':' symbols (e.g. 00:A0:24:C6:18:2F).
subnet_mask	6	A string value that contains the subnet mask assigned to the LAN channel in dotted decimal notation (e.g. 255.255.255.0).
ipv4_hdr_param	7	Three 8-bit values that contain various IPv4 header parameters for sending RMCP packets: Time-to-live IP header flags (bits [7:5]) Precedence (bits [7:5]) and type of service (bits [4:1])

PARAMETER NAME	NUMBER	DESCRIPTION
pri_rmcp_port	8	A 16-bit value that contains the primary RMCP port number (the port used for regular RMCP communication).
sec_rmcp_port	9	A 16-bit value that contains the secondary RMCP port number. (the port used for secure RMCP communication).
arp_control	10	Two flags that control ARP behavior on the LAN channel: Enable responding to ARP requests Enable sending Gratuitous ARPs
arp_interval	11	The Gratuitous ARP interval in seconds, in fixed-point format (potentially including a fractional part).
dft_gw_ip	12	A string value that contains the IP address of the default gateway in dotted decimal notation.
dft_gw_mac	13	A string value that contains the MAC address of the default gateway as 6 hexadecimal byte values delimited by ':' symbols.
backup_gw_ip	14	A string value that contains the IP address of the backup gateway in dotted decimal notation.
backup_gw_mac	15	A string value that contains the MAC address of the backup gateway as 6 hexadecimal byte values delimited by ':' symbols.
community	16	A string value (up to 18 symbols) that is put into the "Community String" field in PET Traps.
destination_count	17	The maximum number of LAN alert destinations supported on the LAN channel.
destination_type	18	The destination type identified by the specified set selector. If no set selector is given, all destination types are shown. Each destination type entry contains the following fields: destination type (0-7) alert acknowledge flag alert acknowledge timeout / retry interval in seconds (1-256) number of retries (0-7)
destination_addresses	19	The destination addresses associated with the specified set selector. If no set selector is given, all destination addresses are shown. Each destination address entry contains the following fields: gateway selector: 0 – use default, 1 – use backup IP address (string in dotted decimal format) MAC address (string of 6 hexadecimal byte values delimited by ':' symbols)

The following subsections provide more detailed information about each of the supported parameters.

3.27.3 Examples

Get and show the whole LAN parameter table for channel 1.

```
# clia getlanconfig 1
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Authentication Type Support: 0x15 ( None MD5 Straight Password/Key )
Authentication Type Enables: 0x00
  User level: 0x15 ( None MD5 Straight Password/Key )
  Operator level: 0x15 ( None MD5 Straight Password/Key )
  Administrator level: 0x15 ( None MD5 Straight Password/Key )
  OEM level: 0x00
IP Address: 172.16.2.203
IP Address Source: Static Address (Manually Configured) (01)
MAC Address: 90:91:91:91:91:91
Subnet Mask: 255.255.255.0
IPv4 Header Parameters: 0x40:0x40:0x10
Primary RMCP Port Number: 0x026f
Secondary RMCP Port Number: 0x0298
BMC-generated ARP Control: 02
  Enable BMC-generated Gratuitous Response
Gratuitous ARP Interval: 2.0 seconds
Default Gateway Address: 0.0.0.0
Default Gateway MAC Address: N/A
Backup Gateway Address: 0.0.0.0
Backup MAC Address: N/A
Community String: "public"
Number of Destinations: 16

#
```

3.27.4 *auth_support*

3.27.4.1 Syntax

```
getlanconfig <channel> auth_support
getlanconfig <channel> 1
```

3.27.4.2 Purpose

This command shows the current value of the LAN parameter **auth_support**. This parameter specifies which authentication types are supported by the Shelf Manager, represented by a single byte, treated as a bit mask with the following meaning of the bits:

- 0x01 None
- 0x02 MD2
- 0x04 MD5

- 0x10 Straight password/key
- 0x20 OEM proprietary

Other bits are reserved and should be set to 0. Besides the raw hexadecimal value, symbolic values for the bits that are set are also shown.

3.27.4.3 Examples

```
# clia getlanconfig 1 auth_support
```

Pigeon Point Shelf Manager Command Line Interpreter

Authentication Type Support: 0x15 (None MD5 Straight Password/Key)

```
#
```

3.27.5 *auth_enables*

3.27.5.1 Syntax

```
getlanconfig <channel> auth_enables  
getlanconfig <channel> 2
```

3.27.5.2 Purpose

This command shows the current value of the LAN parameter **auth_enables**. This parameter specifies which authentication types are currently enabled by the Shelf Manager for each of five supported privilege levels (Callback, User, Administrator, Operator and OEM), represented by a sequence of five bytes, each corresponding to the respective privilege level, treated as a bit mask with the following meanings of the bits:

- 0x01 None
- 0x02 MD2
- 0x04 MD5
- 0x10 Straight password/key
- 0x20 OEM proprietary

Other bits are reserved and should be set to 0.

Besides the raw hexadecimal values, symbolic values for the bits that are set are also shown.

3.27.5.3 Examples

Show the types of authentication supported by LAN channel 1.

```
# clia getlanconfig 1 auth_enables
```

Pigeon Point Shelf Manager Command Line Interpreter

Authentication Type Enables:

```
Callback level: 0x00
User level: 0x15 ( None MD5 Straight Password/Key )
Operator level: 0x15 ( None MD5 Straight Password/Key )
Administrator level: 0x15 ( None MD5 Straight Password/Key )
OEM level: 0x00
```

#

3.27.6 *ip*

3.27.6.1 Syntax

```
getlanconfig <channel> ip
getlanconfig <channel> 3
```

3.27.6.2 Purpose

This command shows the current IP address used by the channel, in dotted decimal notation.

3.27.6.3 Examples

```
# clia getlanconfig 1 ip
```

Pigeon Point Shelf Manager Command Line Interpreter

IP Address: 172.16.2.203

#

3.27.7 *ip_source*

3.27.7.1 Syntax

```
getlanconfig <channel> ip_source
getlanconfig <channel> 4
```

3.27.7.2 Purpose

This command shows the current value of the LAN parameter **ip_source**. This parameter specifies the source of the IP Address used by the Shelf Manager, represented by a single byte, which can have one of the following values:

- 0 Unspecified
- 1 Static address (manually configured)
- 2 Address obtained by Shelf Manager running DHCP
- 3 Address loaded by BIOS or system software
- 4 Address obtained by Shelf Manager running other address assignment protocol

Other values are reserved.

Besides the raw hexadecimal value, the symbolic value is also shown.

3.27.7.3 Examples

```
# clia getlanconfig 1 ip_source
```

Pigeon Point Shelf Manager Command Line Interpreter

IP Address Source: Static Address (Manually Configured) (0x01)

```
#
```

3.27.8 *mac*

3.27.8.1 Syntax

```
getlanconfig <channel> mac
```

```
getlanconfig <channel> 5
```

3.27.8.2 Purpose

This command shows the current MAC address used by the channel, in the form of six hexadecimal bytes separated by colons.

3.27.8.3 Examples

```
# clia getlanconfig 1 mac
```

Pigeon Point Shelf Manager Command Line Interpreter

MAC Address: 90:91:91:91:91:91

```
#
```

3.27.9 *subnet_mask*

3.27.9.1 Syntax

```
getlanconfig <channel> subnet_mask
```

```
getlanconfig <channel> 6
```

3.27.9.2 Purpose

This command shows the current IP subnet mask used by the channel, in dotted decimal notation.

3.27.9.3 Examples

```
# clia getlanconfig 1 subnet_mask
```

Pigeon Point Shelf Manager Command Line Interpreter

Subnet Mask: 255.255.255.0

#

3.27.10 *ipv4_hdr_param*

3.27.10.1 Syntax

```
getlanconfig <channel> ipv4_hdr_param  
getlanconfig <channel> 7
```

3.27.10.2 Purpose

This command shows the current IP 4 header parameters. They are represented as 3 single-byte values in hexadecimal notation, separated with colons. The content of the bytes conforms to section 19.2 of the IPMI 1.5 specification.

3.27.10.3 Examples

```
# clia getlanconfig 1 ipv4_hdr_param
```

Pigeon Point Shelf Manager Command Line Interpreter

IPv4 Header Parameters: 0x40:0x40:0x10

#

3.27.11 *pri_rmcp_port*

3.27.11.1 Syntax

```
getlanconfig <channel> pri_rmcp_port  
getlanconfig <channel> 8
```

3.27.11.2 Purpose

This command shows the current RMCP primary port used by the channel, in hexadecimal. This is the port used for regular interactions via RMCP.

3.27.11.3 Examples

```
# clia getlanconfig 1 pri_rmcp_port
```

Pigeon Point Shelf Manager Command Line Interpreter

Primary RMCP Port Number: 0x026f

#

3.27.12 *sec_rmcp_port*

3.27.12.1 Syntax

```
getlanconfig <channel> sec_rmcp_port
getlanconfig <channel> 9
```

3.27.12.2 Purpose

This command shows the current RMCP secondary port used by the channel, in hexadecimal. This is the port used for secure interactions via RMCP.

3.27.12.3 Examples

```
# clia getlanconfig 1 sec_rmcp_port

Pigeon Point Shelf Manager Command Line Interpreter

Primary RMCP Port Number: 0x0298

#
```

3.27.13 *arp_control*

3.27.13.1 Syntax

```
getlanconfig <channel> arp_control
getlanconfig <channel> 10
```

3.27.13.2 Purpose

This command shows the current value of the LAN parameter **arp_control**. This parameter specifies additional ARP support provided by the Shelf Manager, represented by a single byte, treated as a bit mask with the following meaning of the bits:

- 0x01 Enable Shelf Manager-generated Gratuitous ARPs
- 0x02 Enable Shelf Manager-generated ARP responses

Other bits are reserved and should be set to 0.

Besides the raw hexadecimal value, symbolic values for the bits that are set are also shown.

3.27.13.3 Examples

```
# clia getlanconfig 1 arp_control

Pigeon Point Shelf Manager Command Line Interpreter

BMC-generated ARP Control: 02
    Enable BMC-generated Gratuitous Response
```

#

3.27.14 *arp_interval*

3.27.14.1 Syntax

```
getlanconfig <channel> arp_interval  
getlanconfig <channel> 11
```

3.27.14.2 Purpose

This command shows the current ARP interval used by the channel. The value is shown as a number of seconds in fixed-point numeric format.

3.27.14.3 Examples

```
# clia getlanconfig 1 arp_interval
```

Pigeon Point Shelf Manager Command Line Interpreter

Gratuitous ARP Interval: 2.0 seconds

#

3.27.15 *dft_gw_ip*

3.27.15.1 Syntax

```
getlanconfig <channel> dft_gw_ip  
getlanconfig <channel> 12
```

3.27.15.2 Purpose

This command shows the IP address of the default gateway used by the channel, in dotted decimal notation.

3.27.15.3 Examples

```
# clia getlanconfig 1 dft_gw_ip
```

Pigeon Point Shelf Manager Command Line Interpreter

Default Gateway Address: 0.0.0.0

#

3.27.16 *dft_gw_mac*

3.27.16.1 Syntax

```
getlanconfig <channel> dft_gw_mac
```

```
getlanconfig <channel> 13
```

3.27.16.2 Purpose

This command shows the MAC address of the default gateway used by the channel, in the form of six hexadecimal bytes separated by colons.

3.27.16.3 Examples

```
# clia getlanconfig 1 dft_gw_mac
```

Pigeon Point Shelf Manager Command Line Interpreter

Default Gateway MAC Address: N/A

```
#
```

3.27.17 *backup_gw_ip*

3.27.17.1 Syntax

```
getlanconfig <channel> backup_gw_ip  
getlanconfig <channel> 14
```

3.27.17.2 Purpose

This command shows the IP address of the backup gateway used by the channel, in dotted decimal notation.

3.27.17.3 Examples

```
# clia getlanconfig 1 backup_gw_ip
```

Pigeon Point Shelf Manager Command Line Interpreter

Backup Gateway Address: 0.0.0.0

```
#
```

3.27.18 *backup_gw_mac*

3.27.18.1 Syntax

```
getlanconfig <channel> backup_gw_mac  
getlanconfig <channel> 15
```

3.27.18.2 Purpose

This command shows the MAC address of the backup gateway used by the channel, in the form of six hexadecimal bytes separated by colons.

3.27.18.3 Examples

```
# clia getlanconfig 1 backup_gw_mac
```

Pigeon Point Shelf Manager Command Line Interpreter

Backup Gateway MAC Address: N/A

```
#
```

3.27.19 *community*

3.27.19.1 Syntax

```
getlanconfig <channel> community
```

```
getlanconfig <channel> 16
```

3.27.19.2 Purpose

This command shows the community string parameter used in PET traps.

3.27.19.3 Examples

```
# clia getlanconfig 1 community
```

Pigeon Point Shelf Manager Command Line Interpreter

Community String: "public"

```
#
```

3.27.20 *destination_count*

3.27.20.1 Syntax

```
getlanconfig <channel> destination_count
```

```
getlanconfig <channel> 17
```

3.27.20.2 Purpose

This command shows the maximum number of alert destinations available for the channel. This is a configuration parameter for the Pigeon Point Shelf Manager and can be changed only through the shelfman configuration file.

3.27.20.3 Examples

```
# clia getlanconfig 1 destination_count
```

Pigeon Point Shelf Manager Command Line Interpreter

Number of Destinations: 16

#

3.27.21 *destination_type*

3.27.21.1 Syntax

```
getlanconfig <channel> destination_type [ <set-selector> ]  
getlanconfig <channel> 18 [ <set-selector> ]
```

3.27.21.2 Purpose

This command shows the element of the destination table with the index equal to **<set-selector>**. Indexes are 0-based. Selector 0 is used to address the volatile destination. The following information is shown about the destination:

- the destination selector
- the alert destination type (PET Trap or OEM destination; whether the alert should be acknowledged)
- alert acknowledge timeout
- retry count

If the set selector is omitted, all active destinations are shown, with their numbers.

3.27.21.3 Examples

```
# clia getlanconfig 1 destination_type 2
```

Pigeon Point Shelf Manager Command Line Interpreter

DST Type # 2, Type: Acknowledged PET Trap Destination (0x80), ACK
Timeout / Retry Interval: 3 seconds, Retries: 5

```
# clia getlanconfig 1 destination_type
```

Pigeon Point Shelf Manager Command Line Interpreter

DST Type # 0, Type: Acknowledged reserved (0x81), ACK Timeout / Retry
Interval: 2 seconds, Retries: 6
DST Type # 1, Type: Unacknowledged reserved (0x02), ACK Timeout / Retry
Interval: 3 seconds, Retries: 4
DST Type # 2, Type: Acknowledged PET Trap Destination (0x80), ACK
Timeout / Retry Interval: 3 seconds, Retries: 5
#

3.27.22 *destination_address*

3.27.22.1 Syntax

```
getlanconfig <channel> destination_address [ <set-selector>
]
getlanconfig <channel> 19 [ <set-selector> ]
```

3.27.22.2 Purpose

This command shows the element of the destination address table with the index equal to **<set-selector>**. Indexes are 0-based. Selector 0 is used to address the volatile destination. The following information is shown about the destination:

- the destination selector
- address format (IP+MAC by default)
- the destination IP address
- the destination MAC address
- which gateway to use (default vs. backup).

If the set selector is omitted, all active destination addresses are shown, with their numbers.

3.27.22.3 Examples

```
# clia getlanconfig 1 destination_address 2
```

Pigeon Point Shelf Manager Command Line Interpreter

```
DST Addresses # 2, Address Format: IPv4 IP Address followed by DIX
ethernet / 802.3 MAC Address (0x00)
    Gateway: Default (0x00), Alerting IP: 172.16.2.100, Alerting MAC:
90:93:93:93:93:93
#
```

3.28 *getpefconfig*

3.28.1 *Syntax*

```
getpefconfig
getpefconfig <parameter-name> [ <additional-parameters> ]
getpefconfig <parameter-number> [ <additional-parameters> ]
```

3.28.2 *Purpose*

This command shows the value of the specified PEF configuration parameter. If neither the configuration parameter name nor the parameter number is specified, all PEF configuration parameters are shown.

The following table lists names and numbers of PEF configuration parameters:

Table 9 Names and Numbers of PEF Configuration Parameters Supported by the getpefconfig Command

PARAMETER NAME	NUMBER	DESCRIPTION
control	1	An 8-bit value that represents control flags for PEF (enable PEF, enable PEF startup delay, etc.)
action_control	2	An 8-bit value that represents PEF action global control flags (enable reset, enable power down, etc.)
startup_delay	3	Time to delay PEF after system power-ups and resets, in seconds
alert_startup_delay	4	Time to delay alerts after system power-ups and resets, in seconds
event_filter_count	5	Maximum number of event filters
event_filter	6	An event filter table entry identified by the specified set selector. If no set selector is given, all active event filters are shown.
event_filter_data1	7	The first byte of the event filter table entry identified by the specified set selector. If no set selector is given, all active event filters are shown.
alert_policy_count	8	Maximum number of alert policies
alert_policy	9	An alert policy table entry identified by the specified set selector. If no set selector is given, all active alert policies are shown.
system_guid	10	A GUID used to fill in the GUID field in the PET trap
alert_string_count	11	Maximum number of alert strings

PARAMETER NAME	NUMBER	DESCRIPTION
alert_string_key	12	An alert string key identified by the specified set selector. If no set selector is given, all alert string keys are shown.
alert_string	13	An alert string identified by the specified set selector. If no set selector is given, all alert strings are shown.
oem_filter_count	96	Maximum number of OEM filters
oem_filter	97	An OEM filter table entry identified by the specified set selector. If no set selector is given, all active event filters are shown.
pet_format	98	Format of the Platform Event Traps that are sent by the Shelf Manager as the Alert action initiated by event processing in the Platform Event Filtering facility.

The following subsections provide more detailed information about each of the supported parameters.

3.28.3 Examples

Get and show the whole PEF parameter table.

```
# clia getpefconfig
```

Pigeon Point Shelf Manager Command Line Interpreter

```
PEF parameters:
  PEF control: 0x00
  PEF Action Global Control: 0x00
  PEF Startup Delay: 60 seconds
  PEF Alert Startup Delay: 60 seconds
  PEF Number of Event Filters: 64
  PEF Number of OEM Filters: 16
  Active Event Filters:
    None
  Active OEM Filters:
    0x01: OEM range boundary 0xff:0xff, alert policy # 1
  Active event filter data:
    None
  Alert Policies Count: 64
  Policy:
    None
  PEF GUID: Using the system GUID

  Alert Strings Count: 64
  Alert string key:
    None
  Alert Strings:
    None
#
```

3.28.4 *control*

3.28.4.1 Syntax

```
getpefconfig control  
getpefconfig 1
```

3.28.4.2 Purpose

This command shows the current value of the PEF parameter **control**. This parameter is a single byte, treated as a bit mask with the following meaning of the bits:

- 0x01 Enable PEF
- 0x02 Enable generation of event messages for PEF actions
- 0x04 Enable PEF startup delays on system power-ups and resets
- 0x08 Enable PEF Alert Startup delays

Other bits are reserved and should be set to 0.

3.28.4.3 Examples

```
# clia getpefconfig control
```

Pigeon Point Shelf Manager Command Line Interpreter

```
PEF control: 0x07  
Enable PEF  
Enable Event Message for PEF Actions  
Enable PEF Startup Delay
```

```
#
```

3.28.5 *action_control*

3.28.5.1 Syntax

```
getpefconfig action_control  
getpefconfig 2
```

3.28.5.2 Purpose

This command shows the current value of the PEF parameter **action_control**. This parameter is a single byte, treated as a bit mask with the following meaning of the bits:

- 0x01 Enable alert action
- 0x02 Enable power down action
- 0x04 Enable reset action
- 0x08 Enable power cycle action

- 0x10 Enable OEM action
- 0x20 Enable diagnostic interrupt

Other bits are reserved and should be set to 0.

3.28.5.3 Examples

```
# clia getpefconfig action_control
```

Pigeon Point Shelf Manager Command Line Interpreter

```
PEF Action Global Control: 0x3f
  Enable Alert Action
  Enable Power Down Action
  Enable Reset Action
  Enable Power Cycle Action
  Enable OEM Action
  Enable Diagnostic Interrupt
```

```
#
```

3.28.6 *startup_delay*

3.28.6.1 Syntax

```
getpefconfig startup_delay
getpefconfig 3
```

3.28.6.2 Purpose

This command shows the current value of the PEF parameter **startup_delay**. This parameter is a single byte, representing the number of seconds that the PEF facility delays at startup.

3.28.6.3 Examples

```
# clia getpefconfig startup_delay
```

Pigeon Point Shelf Manager Command Line Interpreter

```
PEF Startup Delay: 60 seconds
```

```
#
```

3.28.7 *alert_startup_delay*

3.28.7.1 Syntax

```
getpefconfig alert_startup_delay
getpefconfig 4
```

3.28.7.2 Purpose

This command shows the current value of the PEF parameter **alert_startup_delay**. This parameter is a single byte, representing the number of seconds that the alerting facility delays at startup.

3.28.7.3 Examples

```
# clia getpefconfig alert_startup_delay
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
PEF Alert Startup Delay: 60 seconds
```

```
#
```

3.28.8 *event_filter_count*

3.28.8.1 Syntax

```
getpefconfig event_filter_count  
getpefconfig 5
```

3.28.8.2 Purpose

This command shows the current value of the PEF parameter **event_filter_count**. This read-only value is the size of the event filter table. This value is a configuration parameter for the Pigeon Point Shelf Manager and can be changed only through the shelfman configuration file.

3.28.8.3 Examples

```
# clia getpefconfig event_filter_count
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
PEF Number of Event Filters: 64
```

```
#
```

3.28.9 *event_filter*

3.28.9.1 Syntax

```
getpefconfig event_filter [ <set-selector> ]  
getpefconfig 6 [ <set-selector> ]
```

3.28.9.2 Purpose

This command shows the element of the event filter table with index equal to **<set-selector>**.

Indexes are 1-based. The following information is shown about each event filter:

- filter configuration: whether the filter is software configured or manufacturer pre-configured
- event filter action mask
- alert policy number
- event severity
- Event source address to match (255 = any address)
- Source Channel/LUN to match (255 = match any source channel/LUN)
- Sensor type to match
- Sensor number to match
- Event trigger (event/reading type) to match
- Event offset mask
- AND, Compare 1 and Compare 2 masks for event data bytes 1, 2 and 3.

If the **<set-selector>** is omitted, all active event filter table entries are shown, with their numbers.

3.28.9.3 Examples

```
# clia getpefconfig event_filter 2
```

Pigeon Point Shelf Manager Command Line Interpreter

Active Event Filters:

0x02: Software Configurable Filter

Action Mask: 0x01

Policy Number: 1, Severity: Critical Condition

Source Address: 0x20, LUN: 3, Channel: 15

Sensor Type: Hot Swap (0xf0), Sensor # 255 (ANY)

Event Trigger: 0xff (ANY), Event Offset Mask: 0xffff

0: AND: 0x0f, CMP1: 0xff, CMP2: 0x00

1: AND: 0x00, CMP1: 0x00, CMP2: 0x00

2: AND: 0xff, CMP1: 0xff, CMP2: 0x00

```
#
```

3.28.10 event_filter_data1

3.28.10.1 Syntax

```
getpefconfig event_filter_data1 [ <set-selector> ]
getpefconfig 7 [ <set-selector> ]
```

3.28.10.2 Purpose

This command shows the first byte of the element of the event filter table with the index equal to **<set-selector>**. Indexes are 1-based. This byte is shown in hexadecimal. Bits in this byte have the following meaning:

- 0x80 This filter is enabled
- 0x40 This filter is pre-configured by the manufacturer and should not be altered by software

Other bits are reserved and should be 0.

If the **<set-selector>** is omitted, first byte for each of the active event filter table entries is shown, with the corresponding filter numbers.

3.28.10.3 Examples

```
# clia getpefconfig event_filter_data1 2
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Active event filter data:
0x02: 0x80 Enabled 1, Configuration: 0 ("Software Configurable
Filter")
```

```
#
```

3.28.11 *alert_policy_count*

3.28.11.1 Syntax

```
getpefconfig alert_policy_count
getpefconfig 8
```

3.28.11.2 Purpose

This command shows the current value of the PEF parameter **alert_policy_count**. This read-only value is the size of the alert policy table. This value is a configuration parameter for the Pigeon Point Shelf Manager and can be changed only through the shelfman configuration file.

3.28.11.3 Examples

```
# clia getpefconfig alert_policy_count
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Alert Policies Count: 64
```

```
#
```

3.28.12 *alert_policy*

3.28.12.1 Syntax

```
getpefconfig alert_policy [ <set-selector> ]
```

```
getpefconfig 9 [ <set-selector> ]
```

3.28.12.2 Purpose

This command shows the element of the alert policy table with index equal to **<set-selector>**. Indexes are 1-based. The following information is shown about each alert policy:

- the policy number
- the policy type (with respect to the alert sent to the previous destination)
- destination channel number
- destination selector
- alert string key

If the **<set-selector>** is omitted, all active alert policy table entries are shown, with their numbers.

3.28.12.3 Examples

```
# clia getpefconfig alert_policy 2
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Policy:
    0x02: Policy# 5, Policy Type: 0, Channel: 1, DST: 1, Alert
String Sel: 1

#
```

3.28.13 *system_guid*

3.28.13.1 Syntax

```
getpefconfig system_guid
getpefconfig 10
```

3.28.13.2 Purpose

This command shows the current value of the PEF parameter **system_guid**. This parameter represents the GUID that is sent in a PET Trap PDU to an alert destination. This GUID may be defined as a separate GUID or as being equal to the System GUID (which can be obtained via the “Get System GUID” IPMI command).

3.28.13.3 Examples

```
# clia getpefconfig system_guid
```

Pigeon Point Shelf Manager Command Line Interpreter

```
PEF GUID: 23662f7f-ba1b-4b65-8808-94ca09c9bbb0
```

#

3.28.14 *alert_string_count*

3.28.14.1 Syntax

```
getpefconfig alert_string_count  
getpefconfig 11
```

3.28.14.2 Purpose

This command shows the current value of the PEF parameter **alert_string_count**. This read-only value is the size of the alert string table, which is the maximum number of alert strings in simultaneous use. This value is the configuration parameter for the Pigeon Point Shelf Manager and can be changed only through the shelfman configuration file.

3.28.14.3 Examples

```
# clia getpefconfig alert_string_count
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Alert Strings Count: 64
```

#

3.28.15 *alert_string_key*

3.28.15.1 Syntax

```
getpefconfig alert_string_key [ <set-selector> ]  
getpefconfig 12 [ <set-selector> ]
```

3.28.15.2 Purpose

This command shows the element of the alert string key table with index **<set-selector>**. Indexes are 1-based. Index 0 can be used to designate the volatile alert string. Each key associates an event filter with an alert string for alert generation purposes. The following information is shown about each alert string key:

- the alert string key number
- the associated event filter number
- the associated alert string number

If the **<set-selector>** is omitted, all active alert string key table entries are shown with their numbers.

3.28.15.3 Examples

```
# clia getpefconfig alert_string_key 2
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Alert string key: set selector 2, event_filter 0x10, string_set
0x11
```

```
#
```

3.28.16 *alert_string*

3.28.16.1 Syntax

```
getpefconfig alert_string [ <set-selector> ]
getpefconfig 13 [ <set-selector> ]
```

3.28.16.2 Purpose

This command shows the element of the alert string table with index equal to **<set-selector>**. Indexes are 1-based. Index 0 can be used to designate the volatile alert string. This command shows the whole string at once.

If the **<set-selector>** is omitted, all defined alert strings are shown with their numbers.

3.28.16.3 Examples

```
# clia getpefconfig alert_string 2
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Alert Strings:
0x02: "This is the alert string"
```

```
#
```

3.28.17 *oem_filter_count*

3.28.17.1 Syntax

```
getpefconfig oem_filter_count
getpefconfig 96
```

3.28.17.2 Purpose

This command shows the current value of the PEF parameter **oem_filter_count**. This read-only value is the size of the OEM filter table. This value is a configuration parameter for the Pigeon Point Shelf Manager and can be changed only through the shelfman configuration file.

The OEM filter table is a Pigeon Point Systems-defined OEM extension of the IPMI specification. It allows PEF to be applied, in addition to platform events, also to OEM timestamped and non-timestamped SEL entries (record type range C0h-FFh).

3.28.17.3 Examples

```
# clia getpefconfig oem_filter_count
```

Pigeon Point Shelf Manager Command Line Interpreter

```
PEF Number of OEM Filters: 16
```

```
#
```

3.28.18 oem_filter

3.28.18.1 Syntax

```
getpefconfig oem_filter [ <set-selector> ]  
getpefconfig 97 [ <set-selector> ]
```

3.28.18.2 Purpose

The OEM filter table is a Pigeon Point-defined OEM extension of the IPMI specification. It allows PEF to be applied, in addition to platform events, also to OEM timestamped and non-timestamped SEL entries (record type range C0h-FFh).

Each entry of the OEM filter table defines the range of record types (in the range of OEM record types), to which this OEM filter applies, and the alert policy number that is to be invoked when a record with the matching record type is placed in the SEL.

This command shows the element of the OEM filter table with index equal to **<set-selector>**. Indexes are 1-based. The following information is shown about each OEM filter:

- Byte 1: SEL Record Type Range Low boundary
- Byte 2: SEL Record type Range high boundary
- Byte 3: Alert policy number that will be invoked for SEL entries that have record types matching the range specified in Bytes 1 and 2.

If the **<set-selector>** is omitted, all active OEM filter table entries are shown, with their numbers.

3.28.18.3 Examples

```
# clia getpefconfig oem_filter
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Active OEM Filters:
```

0x01: OEM range boundary 0xff:0xff, alert policy # 1

3.28.19 *pet_format*

3.28.19.1 Syntax

getpefconfig pet_format

3.28.19.2 Purpose

Reports the format of the Platform Event Traps that are sent by the Shelf Manager as the Alert action initiated by event processing in the Platform Event Filtering facility. The following format types are defined:

- 0 = IPMI default format
- 1 = Plain Text format
- 2 = Multi-variable format.

3.28.19.3 Example

```
# clia getpefconfig pet_format
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Platform Event Trap format: 0 (IPMI default)
```

```
# clia getpefconfig pet_format
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Platform Event Trap format: 1 (Plain text)
```

```
# clia getpefconfig pet_format
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Platform Event Trap format: 2 (Multi OID)
```

3.29 *getsensoreventenable*

3.29.1 *Syntax*

```
getsensoreventenable [ <IPMB-address> [<sensor-name> |
[<lun>:]<sensor-number> ] ]
getsensoreventenable board <N> [<sensor-name> |
[<lun>:]<sensor-number> ] ]
getsensoreventenable shm <N> [<sensor-name> |
[<lun>:]<sensor-number> ] ]
getsensoreventenable <IPMB-address> -f <fru_id>
getsensoreventenable <IPMB-address> -f amc <amc_number>
getsensoreventenable board <N> -f <fru_id>
getsensoreventenable board <N> -f amc <amc_number>
getsensoreventenable shm <N> -f <fru_id>
getsensoreventenable shm <N> -f amc <amc_number>
```

3.29.2 *Purpose*

This command shows the current event enable mask values of the specified sensor(s).

The option **-f** allows the user to select all sensors that belong to a specific FRU, designated either with its **<fru_id>** or, if it is an AMC, with the **amc <amc_number>** notation.

This command allows the user to qualify the sensor number with the Logical Unit Number (LUN) if the target controller supports sensors on multiple LUNs. If the LUN is omitted, information about sensors with the specified sensor number on all LUNs is shown. **<lun>** can take the value 0, 1 or 3. (LUN 2 is reserved.)

Sensor names are not qualified with LUN numbers, since it is assumed that sensor names will normally be unique within the controller. However, if there are several sensors with the same name within the controller, information is shown about all of them.

This command shows the current sensor event mask values for the supported events of the specified sensor(s). The following attributes for each sensor are also shown:

- IPMB address of the owning IPM controller
- Sensor number, sensor name (device ID string from the SDR) and the LUN by which the sensor can be accessed
- The Sensor type

This command can also be issued on the backup Shelf Manager; in that case, the current event enable mask values are only shown for sensors that are local to the backup Shelf Manager.

3.29.3 Examples

Get event enable values for a temperature sensor "Local Temp" on IPM controller FEh.

```
# clia getsensoreventenable -v fe "Local Temp"
```

Pigeon Point Shelf Manager Command Line Interpreter

```
fe: LUN: 0, Sensor # 3 ("Local Temp")
    Type: Threshold (0x01), "Temperature" (0x01)
    Assertion event mask: 0x0a80
        Assertion event for "Upper Non-Recoverable Going High" enabled
        Assertion event for "Upper Critical Going High" enabled
        Assertion event for "Upper Non-Critical Going High" enabled
    Deassertion event mask: 0x0a80
        Deassertion event for "Upper Non-Recoverable Going High"
enabled
        Deassertion event for "Upper Critical Going High" enabled
        Deassertion event for "Upper Non-Critical Going High" enabled

#
```

Get event enable information for the same sensor but specify sensor LUN and number.

```
# clia getsensoreventenable -v fe 0:3
```

Pigeon Point Shelf Manager Command Line Interpreter

```
fe: LUN: 0, Sensor # 3 ("Local Temp")
    Type: Threshold (0x01), "Temperature" (0x01)
    Assertion event mask: 0x0a80
        Assertion event for "Upper Non-Recoverable Going High" enabled
        Assertion event for "Upper Critical Going High" enabled
        Assertion event for "Upper Non-Critical Going High" enabled
    Deassertion event mask: 0x0a80
        Deassertion event for "Upper Non-Recoverable Going High"
enabled
        Deassertion event for "Upper Critical Going High" enabled
        Deassertion event for "Upper Non-Critical Going High" enabled

#
```

3.30 *getthreshold/threshold*

3.30.1 *Syntax*

```
getthreshold [ <IPMB-address> [<sensor-name> |
[<lun>:]<sensor-number> ] ]
getthreshold board <N> [<sensor-name> | [<lun>:]<sensor-
number> ] ]
getthreshold shm <N> [<sensor-name> | [<lun>:]<sensor-
number> ] ]
getthreshold <IPMB-address> -f <fru_id>
getthreshold <IPMB-address> -f amc <amc_number>
getthreshold board <N> -f <fru_id>
getthreshold board <N> -f amc <amc_number>
getthreshold shm <N> -f <fru_id>
getthreshold shm <N> -f amc <amc_number>
```

The verb **threshold** can also be used instead of **getthreshold**.

3.30.2 *Purpose*

This command shows the current threshold values for the supported thresholds of the specified sensor(s). The sensor must be a threshold-based sensor. Both raw and processed values are shown. The following attributes for each sensor are also shown:

- IPMB address of the owning IPM controller
- Sensor number, sensor name (device ID string from the SDR) and the LUN by which the sensor can be accessed
- The Sensor type and Event/reading type code

The option **-f** allows the user to select all sensors that belong to a specific FRU, designated either with its **<fru_id>** or, if it is an AMC, with the **amc <amc_number>** notation.

This command allows the user to qualify the sensor number with the Logical Unit Number (LUN) if the target controller supports sensors on multiple LUNs. If the LUN is omitted, information about sensors with the specified sensor number on all LUNs is shown. **<lun>** can take the value 0, 1 or 3. (LUN 2 is reserved.)

Sensor names are not qualified with LUN numbers, since it is assumed that sensor names will normally be unique within the controller. However, if there are several sensors with the same name within the controller, information is shown about all of them.

This command can also be issued on the backup Shelf Manager; in that case, the current threshold values are only shown for sensors that are local to the backup Shelf Manager.

3.30.3 Examples

Get threshold values for a temperature sensor "Local Temp" on IPM controller FEh.

```
# clia getthreshold -v fe "Local Temp"
```

Pigeon Point Shelf Manager Command Line Interpreter

```
fe: LUN: 0, Sensor # 3 ("Local Temp")
    Type: Threshold (0x01), "Temperature" (0x01)
        Lower Critical Threshold, Raw Data: 0x80, Processed Data: -
128.000000 degrees C
        Upper Non-Critical Threshold, Raw Data: 0x50, Processed Data:
80.000000 degrees C
        Upper Critical Threshold, Raw Data: 0x50, Processed Data:
80.000000 degrees C
        Upper Non-Recoverable Threshold, Raw Data: 0x50, Processed
Data: 80.000000 degrees C
```

Get threshold information for the same sensor but specify sensor LUN and number.

```
# clia getthreshold -v fe 0:3
```

Pigeon Point Shelf Manager Command Line Interpreter

```
fe: LUN: 0, Sensor # 3 ("Local Temp")
    Type: Threshold (0x01), "Temperature" (0x01)
        Lower Critical Threshold, Raw Data: 0x80, Processed Data: -
128.000000 degrees C
        Upper Non-Critical Threshold, Raw Data: 0x50, Processed Data:
80.000000 degrees C
        Upper Critical Threshold, Raw Data: 0x50, Processed Data:
80.000000 degrees C
        Upper Non-Recoverable Threshold, Raw Data: 0x50, Processed
Data: 80.000000 degrees C
```

Get threshold values for sensors that belong to FRU #5 on IPM controller 20h.

```
# clia getthreshold 20 -f 5
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Flag -f at position 1
20: LUN: 0, Sensor # 126 ("Temp_In Right")
    Type: Threshold (0x01), "Temperature" (0x01)
        Upper Critical Threshold, Raw Data: 0x32    Processed data:
50.000000 degrees C
        Upper Non-Recoverable Threshold, Raw Data: 0x41    Processed
data: 65.000000 degrees C
```

3.31 *help*

3.31.1 *Syntax*

help [**<command>** [**<sub command>**]]

3.31.2 *Purpose*

This command shows help information about supported commands and their syntax.

This command can also be issued on the backup Shelf Manager.

3.31.3 *Examples*

```
# clia help
```

Pigeon Point Shelf Manager Command Line Interpreter

Command Line Interface command set:

Parameters are case insensitive

In general:

IPMB address is hexadecimal ALWAYS.

All other numbers may be either decimal and hexadecimal (0x notation required for hexadecimal notation)

-v turns on verbose output

```
activate <addr> <fru_id>
alarm <alarm status/action>
amcportstate [-v] <ipmc> [ amc <N> | <fru_id> ]
board [slot_number]
boardreset <slot number>
busres force <res>
busres info [<res>]
busres lock <res>
busres query [-v] <res> [<target> [nouupdate]]
busres release <res>
busres sendbusfree <res> <target>
busres setowner <res> <target>
busres unlock <res>
deactivate <addr> <fru_id>
debuglevel [<mask> [<console mask>] ]
exit
fans <addr> <fru id>
fru [<addr> [id=<fru_id> | type=<site_type>]] | [type=<site_type>
[/<site_number>]]
frucontrol <addr> <fru_id> <command>
frudata [<addr>] [<fru id>] [<block number>]
frudata shm <N> [<block number>]
frudata <addr> <fru id> <byte offset> <byte_1> [byte2 .. [byte_16]]
frudatar <addr> <fru id> <file name>
frudataw <addr> <fru id> [-s|-d] [<file name>|-c]
fruinfo <addr> <fru_id>
```



```

getbootdev <addr> [<fru-id> | <amc-addr>]
getfanlevel <addr> <fru_id>
getfanpolicy [<addr> [<fru_id>]] [-s <addr>|site_type
[<fru_id>|site_number]]
getfruledstate [-v] [<addr> [<fru_id> [<LedId>|ALL]]]
gethysteresis [ <addr> [ [ lun: ]<sensor id> | <sensor name> ] ]
gethysteresis [ <addr> -f <fru id> ]
gethysteresis [ <addr> -f amc <amc number> ]
getipmbstate <addr> [<link>]
getlanconfig <channel number> <parameter number> | <parameter name>
getpefconfig <parameter name> | <parameter number> [<set selector>]
getsensoreventenable [ <addr> [ [ lun: ]<sensor_id> | <sensor name>
] ]
getsensoreventenable [ <addr> -f <fru id> ]
getsensoreventenable [ <addr> -f amc <amc number> ]
getthreshold [ <addr> [ [ lun: ]<sensor id> | <sensor name> ] ]
getthreshold [ <addr> -f <fru id> ]
getthreshold [ <addr> -f amc <amc number> ]
help [<command>]
ipmc [-v] [-x] [<addr>]
localaddress
minfanlevel <addr> <fru_id> <min fan level>
minfanlevel [<min fan level>]
poll
quit
sel [clear] [ <addr> [ <number of items> [<number of first item>] ] ]
sel info [<addr>]
sendamc <addr> <amc> <netfn> <command> [<parameters ...>]
sendcmd <addr> <netfn> <command> [<parameters ...>]
sensor [ <addr> [ [ lun: ]<sensor id> | <sensor name> ] ]
sensor [ <addr> -f <fru id> ]
sensor [ <addr> -f amc <amc number> ]
sensordata [-t] [ <addr> [ [ lun: ]<sensor id> | <sensor name> ] ]
sensordata [-t] [ <addr> -f <fru id> ]
sensordata [-t] [ <addr> -f amc <amc number> ]
sensorread <addr> [ lun: ]<sensor id>
session
setbootdev <addr> <fru-id | amc-addr> <boot-device>
setextracted <addr> <fru_id>
setfanlevel <addr> <fru_id> <state>
setfanpolicy <addr> <fru_id> <ENABLE|DISABLE [timeout]> [-s
<addr>|site_type <fru_id>|site_number]
setfruledstate <addr> <fru_id> <LedId>|ALL <LedOp|tail> [LedColor]
sethysteresis <addr> [ lun: ]<sensor_id> | <sensor name> pos | neg
<value>
setipmbstate <addr> A|B [<link>] 0|1
setlanconfig <channel number> <parameter number> | parameter name
<parameters ...>
setlocked <addr> <fru_id> <value>
setpefconfig <parameter name> | <parameter number> [<set selector>]
<parameters ...>
setpowerlevel <addr> <fru_id> [<pwr_lvl>|OFF] [Copy]
setsensordata <addr> [ lun: ]<sensor_id> | <sensor name> [ reading [-
r] <value> ]
[ assertion <mask> ] [ deassertion <mask> ]
[ event_data <b1> <b2> <b3> | event_data_no_offset <b1> <b2>
<b3>]

```

```

    setsensoreventenable <addr> [ lun: ]<sensor_id> | <sensor name>
global [assertion_events [deassertion_events]]
    setthreshold <addr> [ lun: ]<sensor_id> | <sensor name> unc | uc |
unr | lnc | lc | lnr [-r] value
    shelf <parameters>
    shelf cooling_state
    shelf cs
    shelf address_table
    shelf at
    shelf fans_state
    shelf fs
    shelf h110_connectivity
    shelf h110c
    shelf ha_connectivity
    shelf hac
    shelf pci_connectivity
shelf pcic
    shelf point-to-point_connectivity
    shelf ppc
    shelf power_distribution
    shelf pd
    shelf power_management
    shelf pm
shelfaddress [-x] ["<shelf address>"]
shmstatus
showunhealthy
switchover [-force]
terminate [-reboot]
threshold [ <addr> [ [ lun: ]<sensor id> | <sensor name> ] ]
threshold [ <addr> -f <fru id> ]
threshold [ <addr> -f amc <amc number> ]
user [<user id>]
user add <user id> <user name> <flags> <privilege level> <password>
user channel <user id> <channel number> <flags> <privilege level>
user delete <user id>
user enable <user id> 1|0
user name <user id> <user name>
user passwd <user id> <user password>
version
#
# clia help shelf

```

Pigeon Point Shelf Manager Command Line Interpreter

"shelf" command provides access to the dedicated records of the Shelf
FRU Info

```

    Activation <hw-addr> <fru_id> 1/0
    address_table
    Allowance <seconds>
    BDSelGrounded <slot number> 1/0
        1 means Enabled, 0 means Disabled
    cooling_state
    Deactivation <hw-addr> <fru_id> 1/0
    fans_state
    h110_connectivity
    ha_connectivity
    info_refresh

```

```

    info_force_update
    MaxCurrent [feed] <Amps>
    MinVoltage [feed] <Volts>
    pci_connectivity
    point-to-point_connectivity
    power_distribution
    power_management
    PwrCapability <hw-addr> <fru_id> <Watts>
    PwrDelay <hw-addr> <fru_id> <10ths_of_second>
    PwrReorder <hw-addr1> <fru_id1> before/after <hw-addr2>
    <fru_id2>

    shelf <parameters>

```

clia help shelf pwrreorder

Pigeon Point Shelf Manager Command Line Interpreter

Change the order of FRU Activation and Power Descriptors
instead of <addr> <fru_id> user may use:

```

    board <N>
    shm <N>
    power_supply <N> (valid in 2.x systems only)
    fan_tray <N>

```

PwrReorder <addr1> <fru_id1> before/after <addr2> <fru_id2>

3.32 *ipmc*

3.32.1 *Syntax*

```
ipmc [-v] [<IPMB-address>]  
ipmc board <N>  
ipmc shm <N>
```

3.32.2 *Purpose*

This command shows information about the IPM controller at the specified address, or about all IPM controllers known to the Shelf Manager, if **<IPMB-address>** is omitted.

The following information is shown for the IPM controller in standard mode:

- IPMB address of the controller, as two hexadecimal digits
- Entity ID and Entity Instance for the IPM controller.
- Maximum possible FRU device ID for the IPM controller
- PICMG extension version. This version should be 2.X for PICMG 3.0-compliant IPM controllers.
- Current hot swap state, previous hot swap state and cause of the last state change for FRU device 0 of the IPM controller (which represents the IPM controller itself). The hot swap states M0-M7 are defined in the PICMG 3.0 specification as follows:

M0 – Not Installed

M1 – Inactive

M2 – Activation Request

M3 – Activation in Progress

M4 – FRU Active

M5 – Deactivation Request

M6 – Deactivation in Progress

M7 – Communication Lost

The following additional information is shown for the IPM controller in verbose mode:

- Information returned by the “Get Device ID” IPMI command, including manufacturer ID, product ID, device ID, device firmware revision (in both major-minor format and three-part format) and supported IPMI version
- Device ID string from the controller SDR
- Power state notification attribute from the controller SDR, as a hexadecimal number
- Global initialization attribute from the controller SDR, as a hexadecimal number
- Device capabilities attribute from the controller SDR, as a hexadecimal number
- Whether the controller provides Device SDRs
- Supported features mask, with a textual explanation of each bit
- The list of ports subject to E-Keying, with their states (Enabled/Disabled)

This command shows information about IPM controllers in state M1, if they were known previously to the Shelf Manager.

This command can also be issued on the backup Shelf Manager; in that case, the information is only reported for IPM controllers that are local to the backup Shelf Manager.

3.32.3 Examples

Get information about the IPM controller at address 9Ch.

```
# clia ipmc 9c
```

Pigeon Point Shelf Manager Command Line Interpreter

```
9c: Entity: (0xd0, 0x0) Maximum FRU device ID: 0x08
    PICMG Version 2.0
    Hot Swap State: M4 (Active), Previous: M3 (Activation In Process),
    Last State Change Cause: Normal State Change (0x0)
```

```
#
```

Get verbose information about the IPM controller at address 9Ch.

```
# clia ipmc -v 9c
```

Pigeon Point Shelf Manager Command Line Interpreter

```
9c: Entity: (0xd0, 0x0) Maximum FRU device ID: 0x08
    PICMG Version 2.0
    Hot Swap State: M4 (Active), Previous: M3 (Activation In Process),
    Last State Change Cause: Normal State Change (0x0)
    Device ID: 0x00, Revision: 0, Firmware: 1.01 (ver. 1.0.1), IPMI ver
    1.5
    Manufacturer ID: 00315a (PICMG), Product ID: 0000, Auxiliary Rev:
    01ac10ac
    Device ID String: "Pigeon Point 6"
    Global Initialization: 0x0, Power State Notification: 0x0, Device
    Capabilities: 0x29
    Controller provides Device SDRs
    Supported features: 0x29
    "Sensor Device" "FRU Inventory Device" "IPMB Event Generator"
```

```
#
```

Get verbose information about the IPM controller at address 10h.

```
# clia ipmc -v 10
```

Pigeon Point Shelf Manager Command Line Interpreter

```
10: Entity: (0xf0, 0x60) Maximum FRU device ID: 0x08
    PICMG Version 2.1
    Hot Swap State: M4 (Active), Previous: M3 (Activation In Process),
    Last State Change Cause: Normal State Change (0x0)
```

Device ID: 0x00, Revision: 0, Firmware: 2.52 (ver. 2.5.2), IPMI ver
1.5
Manufacturer ID: 00400a, Product ID: 0000, Auxiliary Rev: 00000000
Device ID String: "ShMM-500"
Global Initialization: 0x0, Power State Notification: 0x0, Device
Capabilities: 0x29
Controller provides Device SDRs
Supported features: 0x29
 "Sensor Device" "FRU Inventory Device" "IPMB Event Generator"
10: Base Interface (0x00), Channel: 1
 Link: Disabled Ports: 1
10: Base Interface (0x00), Channel: 2
 Link: Disabled Ports: 1

3.33 *localaddress*

3.33.1 *Syntax*

localaddress

3.33.2 *Purpose*

This command shows the IPMB address of the current Shelf Manager, based on its hardware address (as opposed to its generic BMC address 20h). These addresses will be different between redundant Shelf Managers (while the BMC address is shared between them).

This command can also be issued on the Backup Shelf Manager.

3.33.3 *Examples*

```
# clia localaddress
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Local IPMB Address = 0xFC
```

```
#
```

3.34 *minfanlevel*

3.34.1 *Syntax*

minfanlevel [<level>]

minfanlevel <IPMB-address> <fru_id> [<level>]¹

3.34.2 *Purpose*

This command shows or sets the minimum fan level. Under normal conditions, the cooling management algorithm gradually decreases the level for the fans in the system while thermal conditions stay normal. However, the cooling management algorithm won't try to decrease the fan level below the minimum level specified by the configuration parameter **MIN_FAN_LEVEL**, or by this command.

The default value for the minimum fan level is 1. Setting the minimum fan level to a higher value does not prevent the fan level from being set below that value via the command **clia setfanlevel** or via the ATCA command "Set Fan Level" submitted over RMCP. The minimum fan level affects only the automatic management of the fan level by the cooling management facility.

This command without parameters shows the current minimum fan level.

This command with an integer parameter sets the minimum fan level to the value of the parameter.

In the shelves where zoned cooling is implemented, an alternative variant of this command is available that includes the parameters <IPMB-address> and <fru_id>. This syntax allows setting of the minimum fan level on a per-zone basis. The <IPMB-address> and <fru_id> in that case designate the Fan tray FRU for which the minimum fan level is set or queried. The command without parameters in such shelves shows the current minimum fan levels for all fan trays; the command with a single <level> parameter in such systems sets the same minimum fan level to all fan trays.

3.34.3 *Examples*

In a shelf that does not implement zoned cooling:

```
# clia minfanlevel 3
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Minimal Fan Level is set to 3
```

¹ This variant of the syntax is valid only for shelves that implement zoned cooling


```
# clia minfanlevel
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Minimal Fan Level is 3
```

```
In a shelf with zoned cooling:
```

```
# clia minfanlevel
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
20: FRU # 3
    Current Level: 6
    Minimum Speed Level: 1, Maximum Speed Level: 15    Dynamic minimum
fan level: 3
20: FRU # 4
    Current Level: 6
    Minimum Speed Level: 1, Maximum Speed Level: 15    Dynamic minimum
fan level: 3
20: FRU # 5
    Current Level: 6
    Minimum Speed Level: 1, Maximum Speed Level: 15    Dynamic minimum
fan level: 3
```

```
#
```

```
# clia minfanlevel 5
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Minimal Fan Level is set to 5 for all fan trays
```

```
#
```

```
# clia minfanlevel
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
20: FRU # 3
    Current Level: 6
    Minimum Speed Level: 1, Maximum Speed Level: 15    Dynamic minimum
fan level: 5
20: FRU # 4
    Current Level: 6
    Minimum Speed Level: 1, Maximum Speed Level: 15    Dynamic minimum
fan level: 5
20: FRU # 5
    Current Level: 6
    Minimum Speed Level: 1, Maximum Speed Level: 15    Dynamic minimum
fan level: 5
```

```
#
```

```
# clia minfanlevel 20 4 7
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Minimal Fan Level for (20, 4) is set to 7
```

```
# clia minfanlevel 20 4
```

Pigeon Point Shelf Manager Command Line Interpreter

20: FRU # 4

Current Level: 5

Minimum Speed Level: 1, Maximum Speed Level: 15 Dynamic minimum
fan level: 7

3.35 *networkelementid*

3.35.1 *Syntax*

networkelementid ["<id>"]

3.35.2 *Purpose*

This command is carrier-specific and is not necessarily supported on all ShMM carriers.

This command shows or sets the Network Element Identifier if this parameter is supported by the current carrier. The superuser (UID 0) privilege is required for setting the Network Element Identifier.

The Network Element Identifier specified as the command line parameter **id** must be in the format defined by the specific carrier.

If no parameter is specified in the command line, the current Network Element Identifier is displayed.

3.35.3 *Examples*

#cli networkelementid

Pigeon Point Shelf Manager Command Line Interpreter

Network Element ID: "0123456789A"

#cli networkelementid "01234567890"

Pigeon Point Shelf Manager Command Line Interpreter

Network Element ID is set successfully to "01234567890"

3.36 ***poll***

3.36.1 ***Syntax***

poll

3.36.2 ***Purpose***

This command initiates re-discovery of IPM controllers on IPMB-0 by sending the “Get Device ID” command to all IPMB addresses.

This command is mostly useful in PICMG 2.x shelves, where Hot Swap state machine support for IPM controllers is optional and a new IPM controller on IPMB may not be immediately recognized by the Shelf Manager. The command **poll** causes the Shelf Manager to recognize new IPM controllers.

In AdvancedTCA shelves, this command is not necessary, because a new IPM controller is recognized by the Shelf Manager automatically when it sends its first Hot Swap event. Nevertheless, this command can be used in AdvancedTCA shelves if an IPMB-0 population rediscovery cycle is needed.

3.36.3 ***Examples***

```
# clia poll
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
IPMB polling thread started
```

3.37 *sel*

3.37.1 *Syntax*

```
sel [-v] [ <IPMB-address> [<record-count> [<starting-entry>]  
] ]  
sel clear [ <IPMB-address> ]  
sel info [ <IPMB-address> ]
```

<IPMB-address> can be replaced by the **board** <N> or **shm** <N> abbreviations

3.37.2 *Purpose*

This command shows the contents of the SEL on the specified IPM Controller (at IPMB address 20h by default). The optional parameter <record-count> can be specified that indicates how many records, starting from the record number <starting-entry> in the SEL are shown. The optional parameter <starting-entry> is the entry number of the first SEL record to show, relative to the beginning of the SEL. Both <record-count> and <starting-entry> must be within the range from 1 to the total number of records in the SEL. The default value of the optional parameter <starting-entry> is 1. The <starting-entry> is independent of the RecordID field of the SEL record.

For each SEL record, the following information fields are shown:

- Record ID
- Record type (currently only events are supported, for which the word “Event” is shown)
- Timestamp (for timestamped records)
- Source address parameters: IPMB address, LUN and channel number
- Type and number of the sensor that generated the event
- Event/reading type code
- 3 bytes of event data, in raw and processed (if available) formats.

The command **sel clear** clears the SEL on the specified IPM Controller (at IPMB address 20h by default).

The **-v** option makes the SEL entries output more user-friendly.

3.37.3 *Examples*

Reading the SEL on the Shelf Manager:

```
# clia sel info
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
20: SEL version: 1.5  
    Number of log entries: 43  
    Free space: 15680 bytes
```

Last addition timestamp: Nov 19 17:12:47 2003
 Last erase timestamp: Oct 31 23:59:59 2003
 Supported operations: 0x0f

#

clia sel 20 5

Pigeon Point Shelf Manager Command Line Interpreter

```
0x0027: Event: at Nov 19 17:12:42 2003; from:(0x9c,0,0);
sensor:(0xf0,0); event:0x6f(asserted): HotSwap: FRU 0 M4->M6, Cause=0x1
0x0028: Event: at Nov 19 17:12:42 2003; from:(0x9c,0,0);
sensor:(0xf0,0); event:0x6f(asserted): HotSwap: FRU 0 M6->M1, Cause=0x0
0x0029: Event: at Nov 19 17:12:46 2003; from:(0x9c,0,0);
sensor:(0xf0,0); event:0x6f(asserted): HotSwap: FRU 0 M1->M2, Cause=0x2
0x002A: Event: at Nov 19 17:12:46 2003; from:(0x9c,0,0);
sensor:(0xf0,0); event:0x6f(asserted): HotSwap: FRU 0 M2->M3, Cause=0x1
0x002B: Event: at Nov 19 17:12:47 2003; from:(0x9c,0,0);
sensor:(0xf0,0); event:0x6f(asserted): HotSwap: FRU 0 M3->M4, Cause=0x0
#
```

clia sel b4 5

Pigeon Point Shelf Manager Command Line Interpreter

```
0x00A4: Event: at Nov 19 01:24:25 2003; from:(0x20,0,0);
sensor:(0x02,4); event:0x1(asserted): "Lower Non-Critical", Threshold:
0xb3, Reading: 0xb3
0x00B8: Event: at Nov 19 00:04:11 2003; from:(0x20,0,0);
sensor:(0x02,4); event:0x1(asserted): "Lower Non-Critical", Threshold:
0xb3, Reading: 0xb3
0x00CC: Event: at Nov 19 00:36:32 2003; from:(0x20,0,0);
sensor:(0x02,7); event:0x1(asserted): "Lower Non-Critical", Threshold:
0xae, Reading: 0x94
0x00E0: Event: at Nov 19 00:36:32 2003; from:(0x20,0,0);
sensor:(0x02,7); event:0x1(asserted): "Lower Critical", Threshold:
0xac, Reading: 0x94
0x00F4: Event: at Nov 19 00:02:37 2003; from:(0x20,0,0);
sensor:(0x01,2); event:0x1(asserted): "Upper Critical", Threshold:
0x13, Reading: 0x1c
```

clia sel -v board 3 5

Pigeon Point Shelf Manager Command Line Interpreter

```
0x00A4: Event: at: Nov 19 01:24:25 2003; from IPM Controller: 0x20,
LUN: 0, Channel: 0
    "Voltage" (0x02) sensor # 4
    "Threshold" (0x01) event Asserted
    "Lower Non-Critical Going Low"
    Reading value: 0xb3
    Threshold value: 0xb3

0x00B8: Event: at: Nov 19 00:04:11 2003; from IPM Controller: 0x20,
LUN: 0, Channel: 0
```

```
"Voltage" (0x02) sensor # 4
"Threshold" (0x01) event Asserted
"Lower Non-Critical Going Low"
Reading value: 0xb3
Threshold value: 0xb3
```

```
0x00CC: Event: at: Nov 19 00:36:32 2003; from IPM Controller: 0x20,
LUN: 0, Channel: 0
  "Voltage" (0x02) sensor # 7
  "Threshold" (0x01) event Asserted
  "Lower Non-Critical Going Low"
  Reading value: 0x94
  Threshold value: 0xae
```

```
0x00E0: Event: at: Nov 19 00:36:32 2003; from IPM Controller: 0x20,
LUN: 0, Channel: 0
  "Voltage" (0x02) sensor # 7
  "Threshold" (0x01) event Asserted
  "Lower Critical Going Low"
  Reading value: 0x94
  Threshold value: 0xac
```

```
0x00F4: Event: at: Nov 19 00:02:37 2003; from IPM Controller: 0x20,
LUN: 0, Channel: 0
  "Temperature" (0x01) sensor # 2
  "Threshold" (0x01) event Asserted
  "Upper Critical Going High"
  Reading value: 0x1c
  Threshold value: 0x13
```

#

Getting 5 sel entries, starting with entry # 15 (0x0f).

```
# clia sel 20 5 15
```

Pigeon Point Shelf Manager Command Line Interpreter

```
0x000F: Event: at Nov 19 16:49:21 2003; from:(0x20,0,0);
sensor:(0xf0,3); event:0x6f(asserted): HotSwap: FRU 2 M2->M3, Cause=0x1
0x0010: Event: at Nov 19 16:49:22 2003; from:(0x20,0,0);
sensor:(0xf0,2); event:0x6f(asserted): HotSwap: FRU 1 M2->M3, Cause=0x1
0x0011: Event: at Nov 19 16:49:22 2003; from:(0x20,0,0);
sensor:(0xf0,2); event:0x6f(asserted): HotSwap: FRU 1 M3->M4, Cause=0x0
0x0012: Event: at Nov 19 16:49:22 2003; from:(0xfc,0,0);
sensor:(0xf0,0); event:0x6f(asserted): HotSwap: FRU 0 M3->M4, Cause=0x0
0x0013: Event: at Nov 19 16:49:22 2003; from:(0x20,0,0);
sensor:(0xf0,3); event:0x6f(asserted): HotSwap: FRU 2 M3->M4, Cause=0x0
#
```

Clearing the SEL:

```
# clia sel clear
```

Pigeon Point Shelf Manager Command Line Interpreter

```
SEL clear: issued successfully
```

SEL clearing completed

clia sel

Pigeon Point Shelf Manager Command Line Interpreter

SEL is empty

#

3.38 *sendamc*

3.38.1 *Syntax*

sendamc <addr> <AMC-address> <netfn> <command-code>
[<parameter1> ...<parameterN>]

3.38.2 *Purpose*

This command allows the user to send an IPMI command to an Advanced Management Controller (AMC) that resides behind its correspondent IPM controller in a transparent way. All the parameters of this command are hexadecimal numbers in the range 00h – FFh. The prefix “0x” is not required. The target controller is specified by the <AMC-address> parameter. If it is greater than 70h, this is the actual AMC address on IPMB-L. If it is less than 70h, it is the FRU device ID that represents the corresponding AMC. The NetFn code of the command is specified by the <netfn> parameter. The code of the command is specified by the <command-code> parameter. The request data bytes of the command are represented by <parameter1>, <parameter2>, etc.

The command reports the completion code of the IPMI command and the response data are displayed as hexadecimal bytes.

3.38.3 *Examples*

Send the “Get Device ID” command to the AMC (IPMB address 84h, FRU ID 1). The NetFn of the command is 06h, the code of the command is 01h. Since this command doesn’t require request data, no <parameter1>, <parameter2>, ... are specified.

```
# clia sendamc 84 1 6 1
```

Pigeon Point Shelf Manager Command Line Interpreter

Completion code: 0x0 (0)

Response data: 34 80 01 20 51 29 0A 40 00 EF BE

Send the “Get Device ID” command to the AMC (IPMB address 84h, AMC address 72h). The NetFn of the command is 06h, the code of the command is 01h. Since this command doesn’t require request data, no <parameter1>, <parameter2>, ... are specified.

```
# clia sendamc 84 72 6 1
```

Pigeon Point Shelf Manager Command Line Interpreter

Completion code: 0x0 (0)

Response data: 34 80 01 20 51 29 0A 40 00 EF BE

```
#
```

3.39 *sendcmd*

3.39.1 *Syntax*

sendcmd <IPMB-address> <netfn> <command-code> [<parameter1> ...<parameterN>]

3.39.2 *Purpose*

This command allows the user to send an IPMI command to an IPM controller in a transparent way. All the parameters of this command are hexadecimal numbers in the range 0 – FF. The prefix “0x” is not required. The target controller is specified by the <IPMB-address> parameter. The NetFn code of the command is specified by the <netfn> parameter. The code of the command is specified by the <command-code> parameter. The request data bytes of the command are represented by <parameter1>, <parameter2>, etc.

The command reports the completion code resulting from the IPMI command and the response data, all are displayed as hexadecimal bytes.

3.39.3 *Examples*

Send the “Get Device ID” command to the Shelf Manager (IPMB address 20h). The NetFn of the command is 06h, the code of the command is 01h. Since this command doesn’t require request data, no <parameter1>, <parameter2>, ... are specified.

```
# clia sendcmd 20 6 1
```

Pigeon Point Shelf Manager Command Line Interpreter

Completion code: 0x0 (0)

Response data: 00 80 02 30 51 BF 0A 40 00 00 00

#

3.40 *sensor*

3.40.1 *Syntax*

```

sensor [-v] [ <IPMB-address> [<sensor-name> |
[<lun>:]<sensor-number> ] ]
sensor [-v] board <N> [<sensor-name> | [<lun>:]<sensor-
number> ] ]
sensor [-v] shm <N> [<sensor-name> | [<lun>:]<sensor-
number> ] ]
sensor <IPMB-address> -f <fru_id>
sensor <IPMB-address> -f amc <amc_number>
sensor board <N> -f <fru_id>
sensor board <N> -f amc <amc_number>
sensor shm <N> -f <fru_id>
sensor shm <N> -f amc <amc_number>

```

3.40.2 *Purpose*

This command shows information about specific sensor(s). The target sensor is selected by its IPM controller's IPMB address and by sensor number or by sensor name (device ID string from the sensor SDR, enclosed in double quotes). If neither sensor name nor sensor number is specified, information about all sensors on the specified IPM controller is shown. If no parameters are specified, information about all known sensors is shown.

The option **-f** allows the user to select all sensors that belong to a specific FRU, designated either with its **<fru_id>** or, if it is an AMC, with the **amc <amc_number>** notation.

This command allows the user to qualify the sensor number with the Logical Unit Number (LUN) if the target controller supports sensors on multiple LUNs. If the LUN is omitted, information about sensors with the specified sensor number on all LUNs is shown. **<lun>** can take the value 0, 1 or 3 (LUN 2 is reserved.)

Sensor names are not qualified with LUN numbers, since it is assumed that sensor names will normally be unique within the controller. However, if there are several sensors with the same name within the controller, information is shown about all of them.

The following information is shown for each sensor in standard mode:

- IPMB address of the owning IPM controller
- Sensor number, sensor name (device ID string from the SDR) and the LUN by which the sensor can be accessed
- The sensor type and event/reading type code
- The Entity ID, Entity Instance of the related entity (the FRU device ID if the sensor is associated with a FRU)

The following information is shown for the sensor in verbose mode only (see the IPMI specification for information about these attributes):

- Assertion mask, deassertion mask and settable/readable mask for sensor states (in the case of a discrete sensor) or thresholds (in the case of a threshold-based sensor)

The following information is shown in verbose mode for threshold-based sensors only:

- Sensor units: base and modified
- Unit percentage, modifier and rate
- Analog format and flags
- Linearization parameters, M, B, K1, K2 coefficients
- Tolerance and accuracy coefficients
- Nominal, normal maximum, normal minimum, maximum and minimum values
- Upper thresholds: non-critical, critical and non-recoverable
- Lower thresholds: non-critical, critical and non-recoverable
- Hysteresis values: positive and negative.

This command can also be issued on the backup Shelf Manager; in that case, the information is only shown for sensors that are local to the backup Shelf Manager.

3.40.3 Examples

Get standard information about sensor "FAN 4" on IPM controller FEh.

```
# clia sensor fe "FAN 4"
```

Pigeon Point Shelf Manager Command Line Interpreter

```
fe: LUN: 0, Sensor # 14 ("FAN 4")
    Type: Threshold (0x01), "Fan" (0x04)
    Belongs to entity: (0xd0, 0) [FRU # 0]
```

```
#
```

Get verbose information about sensor 2 on IPM controller 9Ch.

```
# clia sensor -v 9c 2
```

Pigeon Point Shelf Manager Command Line Interpreter

```
9c: LUN: 0, Sensor # 2 ("emulated temp")
    Type: Threshold (0x01), "Temperature" (0x01)
    Belongs to entity: (0xd0, 0) [FRU # 0]
    Assertion Mask: 0x7a95
        Lower Non-Critical Going Low
        Lower Critical Going Low
        Lower Non-Recoverable Going Low
        Upper Non-Critical Going High
        Upper Critical Going High
        Upper Non-Recoverable Going High
        Upper non-critical threshold is comparison returned
        Upper critical threshold is comparison returned
```

```

    Upper non-recoverable threshold comparison is returned
Deassertion Mask: 0x7a95
    Lower Non-Critical Going Low
    Lower Critical Going Low
    Lower Non-Recoverable Going Low
    Upper Non-Critical Going High
    Upper Critical Going High
    Upper Non-Recoverable Going High
    Upper non-critical threshold is comparison returned
    Upper critical threshold is comparison returned
    Upper non-recoverable threshold comparison is returned
Settable / Readable Mask: 0x3f3f
    Lower Non-Critical Threshold is Readable
    Lower Critical Threshold is Readable
    Lower Non-Recoverable Threshold is Readable
    Upper Non-Critical Threshold is Readable
    Upper Critical Threshold is Readable
    Upper Non-Recoverable Threshold is Readable
    Lower Non-Critical Threshold is Settable
    Lower Critical Threshold is Settable
    Lower Non-Recoverable Threshold is Settable
    Upper Non-Critical Threshold is Settable
    Upper Critical Threshold is Settable
    Upper Non-Recoverable Threshold is Settable
Unit Percentage: OFF (0), Unit Modifier: none (0), Unit Rate: none
(0)
Analog Format: 2's complement (signed) (2)
Base Unit: degrees C (1), Modifier Unit: unspecified (0)
Linearization: linear (0), M = 1, B = 0, K1 = 0, K2 = 0
Tolerance = 0, Accuracy = 0, Accuracy EXP = 0
Analog Flags: 0x0
Nominal: 0 (0x00), Normal max: 0 (0x00), Normal min: 0 (0x00)
Sensor max: 127 (0x7f), Sensor min: 128 (0x80)
Upper Thresholds:
    Non-Critical: 70 (0x46) Critical: 80 (0x50) Non-Recoverable: 90
(0x5a)
Lower Thresholds:
    Non-Critical: 3 (0x03) Critical: 0 (0x00) Non-Recoverable: 251
(0xfb)
Hysteresis:
    Positive: 2 (0x02), Negative 2 (0x02)

```

#

Same as above, but explicitly specifying the LUN for the sensor.

clia sensor -v 9c 0:2

Pigeon Point Shelf Manager Command Line Interpreter

```

9c: LUN: 0, Sensor # 2 ("emulated temp")
    Type: Threshold (0x01), "Temperature" (0x01)
    Belongs to entity: (0xd0, 0) [FRU # 0]
    Assertion Mask: 0x7a95
        Lower Non-Critical Going Low
        Lower Critical Going Low

```

```

    Lower Non-Recoverable Going Low
    Upper Non-Critical Going High
    Upper Critical Going High
    Upper Non-Recoverable Going High
    Upper non-critical threshold is comparison returned
    Upper critical threshold is comparison returned
    Upper non-recoverable threshold comparison is returned
Deassertion Mask: 0x7a95
    Lower Non-Critical Going Low
    Lower Critical Going Low
    Lower Non-Recoverable Going Low
    Upper Non-Critical Going High
    Upper Critical Going High
    Upper Non-Recoverable Going High
    Upper non-critical threshold is comparison returned
    Upper critical threshold is comparison returned
    Upper non-recoverable threshold comparison is returned
Settable / Readable Mask: 0x3f3f
    Lower Non-Critical Threshold is Readable
    Lower Critical Threshold is Readable
    Lower Non-Recoverable Threshold is Readable
    Upper Non-Critical Threshold is Readable
    Upper Critical Threshold is Readable
    Upper Non-Recoverable Threshold is Readable
    Lower Non-Critical Threshold is Settable
    Lower Critical Threshold is Settable
    Lower Non-Recoverable Threshold is Settable
    Upper Non-Critical Threshold is Settable
    Upper Critical Threshold is Settable
    Upper Non-Recoverable Threshold is Settable
Unit Percentage: OFF (0), Unit Modifier: none (0), Unit Rate: none
(0)
Analog Format: 2's complement (signed) (2)
Base Unit: degrees C (1), Modifier Unit: unspecified (0)
Linearization: linear (0), M = 1, B = 0, K1 = 0, K2 = 0
Tolerance = 0, Accuracy = 0, Accuracy EXP = 0
Analog Flags: 0x0
Nominal: 0 (0x00), Normal max: 0 (0x00), Normal min: 0 (0x00)
Sensor max: 127 (0x7f), Sensor min: 128 (0x80)
Upper Thresholds:
    Non-Critical: 70 (0x46) Critical: 80 (0x50) Non-Recoverable: 90
(0x5a)
    Lower Thresholds:
        Non-Critical: 3 (0x03) Critical: 0 (0x00) Non-Recoverable: 251
(0xfb)
    Hysteresis:
        Positive: 2 (0x02), Negative 2 (0x02)

```

#

Get standard information about sensors that belong to FRU #1 on IPM controller 20h.

```
## clia sensor 20 -f 1
```

Pigeon Point Shelf Manager Command Line Interpreter

Flag -f at position 1

20: LUN: 0, Sensor # 2 ("FRU 1 HOT_SWAP")
Type: Discrete (0x6f), "Hot Swap" (0xf0)
Belongs to entity (0xf2, 96): [FRU # 1]

20: LUN: 0, Sensor # 194 ("Shelf EEPROM 1")
Type: Discrete (0x6f), "Entity Presence" (0x25)
Belongs to entity (0xf2, 96): [FRU # 1]

3.41 *sensordata*

3.41.1 *Syntax*

```

sensordata [-v] [-t] [ <IPMB-address> [<sensor-name> |
[<lun>:]<sensor-number> ] ]
sensordata [-v] [-t] board <N> [<sensor-name> |
[<lun>:]<sensor-number> ] ]
sensordata [-v] [-t] shm <N> [<sensor-name> |
[<lun>:]<sensor-number> ] ]
sensordata [-v] [-t] <IPMB-address> -f <fru_id>
sensordata [-v] [-t] <IPMB-address> -f amc <amc_number>
sensordata [-v] [-t] board <N> -f <fru_id>
sensordata [-v] [-t] board <N> -f amc <amc_number>
sensordata [-v] [-t] shm <N> -f <fru_id>
sensordata [-v] [-t] shm <N> -f amc <amc_number>

```

3.41.2 *Purpose*

This command shows the actual value of the specified sensor(s) (for a threshold-based sensor) or the currently asserted states (for a discrete sensor). The target sensor is selected by its IPM controller's IPMB address and by sensor number or by sensor name (device ID string from the sensor SDR, enclosed in double quotes). If neither sensor name nor sensor number is specified, values of all sensors on the specified IPM controller are shown. If no parameters are specified, values of all known sensors are shown.

The option **-f** allows the user to select all sensors that belong to a specific FRU, designated either with its **<fru_id>** or, if it is an AMC, with the **amc <amc_number>** notation.

This command allows the user to qualify the sensor number with the Logical Unit Number (LUN) if the target controller supports sensors on multiple LUNs. If the LUN is omitted, information about sensors with the specified sensor number on all LUNs is shown. **<lun>** can take the value 0, 1 or 3 (LUN 2 is reserved.)

Sensor names are not qualified with LUN numbers, since it is assumed that sensor names will normally be unique within the controller. However, if there are several sensors with the same name within the controller, information is shown about all of them.

The following information is shown for each sensor:

- IPMB address of the owning IPM controller
- Sensor number, sensor name (device ID string from the SDR) and the LUN by which the sensor can be accessed
- The sensor type and event/reading type code
- The sensor value (for threshold-based sensors) or the mask of currently asserted states (for discrete sensors) in raw form

- The threshold crossing status, in hexadecimal format and with decoding.
- If the option `-t` is specified, information is displayed only for threshold-based sensors, that have at least one of their thresholds crossed.

The value/asserted states are shown both in raw and processed form. In processed form, the analog value are converted according to M, B and R and shown together with the unit name (e.g., 27 degrees). The discrete value is annotated according to the event/reading code type (e.g. for the event/reading code 2, the asserted state 0 is shown as "Transition to Idle").

This command can also be issued on the backup Shelf Manager; in that case, the information is only shown for sensors that are local to the backup Shelf Manager.

3.41.3 Examples

Get sensor data values for a temperature sensor "Local Temp" on IPM controller FEh.

```
# clia sensordata FE "Local Temp"
```

Pigeon Point Shelf Manager Command Line Interpreter

```
fe: LUN: 0, Sensor # 3 ("Local Temp")
    Type: Threshold (0x01), "Temperature" (0x01)
    Status: 0xc0
        All event messages enabled from this sensor
        Sensor scanning enabled
        Initial update completed
    Raw data: 22 (0x16)
    Processed data: 22.000000 degrees C
    Status: 0x00
```

```
#
```

Get sensor data values for a discrete (Hot Swap) sensor (#0) on IPM controller 9Ch.

```
# clia sensordata 9c 0
```

Pigeon Point Shelf Manager Command Line Interpreter

```
9c: LUN: 0, Sensor # 0 ("FRU 0 HOT_SWAP")
    Type: Discrete (0x6f), "Hot Swap" (0xf0)
    Status: 0xc0
        All event messages enabled from this sensor
        Sensor scanning enabled
        Initial update completed
    Sensor reading: 0x00
    Current State Mask 0x0010
```

```
#
```

Get sensor data values for the same sensor, but qualifying it explicitly with the LUN.

```
# clia sensordata 9c 0:0
```

Pigeon Point Shelf Manager Command Line Interpreter

```

9c: LUN: 0, Sensor # 0 ("FRU 0 HOT_SWAP")
    Type: Discrete (0x6f), "Hot Swap" (0xf0)
    Status: 0xc0
        All event messages enabled from this sensor
        Sensor scanning enabled
        Initial update completed
    Sensor reading: 0x00
    Current State Mask 0x0010

```

#

Get sensor data values for sensors that belong to FRU #1 on IPM controller 20h.

clia sensordata 20 -f 1

Pigeon Point Shelf Manager Command Line Interpreter

Flag -f at position 1

```

20: LUN: 0, Sensor # 2 ("FRU 1 HOT_SWAP")
    Type: Discrete (0x6f), "Hot Swap" (0xf0)
    Belongs to entity (0xf2, 0x60): FRU # 1
    Status: 0xc0
        All event messages enabled from this sensor
        Sensor scanning enabled
        Initial update completed
    Sensor reading: 0x00
    Current State Mask 0x0010

```

```

20: LUN: 0, Sensor # 194 ("Shelf EEPROM 1")
    Type: Discrete (0x6f), "Entity Presence" (0x25)
    Belongs to entity (0xf2, 0x60): FRU # 1
    Status: 0xc0
        All event messages enabled from this sensor
        Sensor scanning enabled
        Initial update completed
    Sensor reading: 0x00
    Current State Mask 0x0001
        Entity Present

```

3.42 *sensorread*

3.42.1 *Syntax*

sensorread <IPMB-address> [**<lun>:**]**<sensor-number>**

3.42.2 *Purpose*

This command shows the raw value of the specified sensor. The only difference between the commands **sensorread** and **sensordata** is that the command **sensorread** does not check the presence of the target IPM controller or the validity of the sensor number, but just sends the “Get Sensor Reading” request directly via IPMB. This command does not retrieve the SDR of the sensor and thus it cannot process the obtained data.

This command allows the user to qualify the sensor number with the Logical Unit Number (LUN) if the target controller supports sensors on multiple LUNs. If the LUN is omitted, LUN 0 is used.

<lun> can take values 0, 1 or 3. (LUN 2 is reserved.)

The following information is shown for each sensor:

- IPMB address of the owning IPM controller
- Sensor number, sensor name (device ID string from the SDR) and the LUN by which the sensor can be accessed
- The sensor type and event/reading type code
- The sensor value (for threshold-based sensors) or the mask of currently asserted states (for discrete sensors), in raw form.

This command can also be issued on the backup Shelf Manager; in that case, the raw values are only shown for sensors that are local to the backup Shelf Manager.

3.42.3 *Examples*

Get sensor data values for sensor 4 on IPM controller FCh. Notice that the **sensorread** command provides only unprocessed sensor values. Also notice the command example with an explicit LUN.

```
# clia sensordata fc 4
```

Pigeon Point Shelf Manager Command Line Interpreter

```
fc: LUN: 0, Sensor # 4 ("3.3STBY voltage")
    Type: Threshold (0x01), "Voltage" (0x02)
    Status: 0xc0
        All event messages enabled from this sensor
        Sensor scanning enabled
        Initial update completed
    Raw data: 193 (0xc1)
    Processed data: 3.396800 Volts
```

Status: 0x00

clia sensorread fc 4

Pigeon Point Shelf Manager Command Line Interpreter

fc: LUN: 0, Sensor # 4
Raw data: 193 (0xc1)
Status: 0xc0
All event messages enabled from this sensor
Sensor scanning enabled
Initial update completed
Threshold Sensor Status: 0x00
Discrete Sensor Current State Mask 0x0000

clia sensorread fc 0:4

Pigeon Point Shelf Manager Command Line Interpreter

fc: LUN: 0, Sensor # 4
Raw data: 193 (0xc1)
Status: 0xc0
All event messages enabled from this sensor
Sensor scanning enabled
Initial update completed
Threshold Sensor Status: 0x00
Discrete Sensor Current State Mask 0x0000

3.43 *session*

3.43.1 *Syntax*

session

3.43.2 *Purpose*

This command shows information about active RMCP sessions. The information includes the following items:

- the maximum possible number of sessions and the number of currently active sessions;
- for each currently active session:
 - session handle
 - the user ID and name used during session activation
 - maximum session privilege level
 - the IPMI channel number and type
 - for LAN sessions, peer IP address and port number.

3.43.3 *Examples*

```
# clia session
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
32 sessions possible, 2 sessions currently active
```

```
Session: 1
```

```
  User: ID 1, Name: ""; Privilege Level: "Administrator"
```

```
  Channel: 1 ("LAN_802_3"); Peer IP address: 172.16.2.203, Port: 1764
```

```
Session: 2
```

```
  User: ID 1, Name: ""; Privilege Level: "Administrator"
```

```
  Channel: 1 ("LAN_802_3"); Peer IP address: 172.16.2.203, Port: 1765
```

```
#
```

3.44 *setbootdev*

3.44.1 *Syntax*

```
setbootdev <IPMB-0-address> <fru_id>| <IPMB-L-address>  
<boot-device>
```

3.44.2 *Purpose*

This command sets the system boot parameter for a designated IPM controller. The second parameter of the command should be set to 0 if the AdvancedMC access is not targeted. If the second parameter exceeds 70h it is treated as an IPMB-L address for an AMC address. Otherwise, the second parameter is treated as a FRU ID and converted to an IPMB-L address via AMC address mapping.

The **<boot-device>** parameter may be:

- **1** or **pxe** (Pre-Boot Execution Environment)
- **2** or **disk** (Default Hard Drive)
- **3** or **safe** (Default Hard Drive, Safe Mode)
- **4** or **diag** (Default Diagnostic Partition)
- **5** or **cd** (Default CD/DVD)
- **14** or **bios** (BIOS)
- **15** or **floppy** (Floppy/Primary Removable Media).

3.44.3 *Examples*

Set the system boot parameter for an IPM controller at IPMB-0 address 82h as **pxe** (Pre-Boot Execution Environment).

```
# clia setbootdev 82 0 1
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Set boot device option: status = 0x0 (0)  
Boot device set to 1 (Force PXE)  
Response data (raw): A2
```

3.45 *setextracted*

3.45.1 *Syntax*

```
setextracted <IPMB-address> <fru_id>
setextracted shm <N>
setextracted board <N>
setextracted power_supply <N>
setextracted pem <N>
setextracted fan_tray <N>
setextracted <IPMB-address> amc <M>
setextracted board <N> amc <M>
```

3.45.2 *Purpose*

This command notifies the Shelf Manager that the specified FRU has been physically extracted from the shelf. If the specified FRU is in state M7, the Shelf Manager places it in state M0 (FRU physically absent).

3.45.3 *Examples*

```
# clia setextracted 9c 0
```

Pigeon Point Shelf Manager Command Line Interpreter

Set FRU extracted state successfully

```
# clia setextracted 96 amc 1
```

Pigeon Point Shelf Manager Command Line Interpreter

Set FRU extracted state successfully

```
#
```

3.46 *setfanlevel*

3.46.1 *Syntax*

```
setfanlevel <IPMB-address> <fru_id> <level>
setfanlevel shm <N> <level>
setfanlevel board <N> <level>
setfanlevel power_supply <N> <level>
setfanlevel pem <N> <level>
setfanlevel fan_tray <N> <level>
setfanlevel all <level>
```

3.46.2 *Purpose*

This command sets a new level for the fan controlled by the FRU specified in the command parameters.

The version of this command with an **all** qualifier attempts to set the same level for all known fans in the shelf.

3.46.3 *Examples*

Set fan level for the fan controlled by FRU #2 at IPMB address 20h to 5.

```
# clia setfanlevel 20 2 5
```

Pigeon Point Shelf Manager Command Line Interpreter

```
20: FRU # 2 Set Fan Level to: 5
#
```

Set fan level to 4 for all known fans in the shelf:

```
# clia setfanlevel all 4
```

Pigeon Point Shelf Manager Command Line Interpreter

```
72: FRU # 0 Set Fan Level to: 4
76: FRU # 0 Set Fan Level to: 4
#
```


3.47 *setfanpolicy*

3.47.1 *Syntax*

```
setfanpolicy <fan tray addr> <fan tray fru_id>
ENABLE|DISABLE [timeout] [-s <addr>|<site_type>
<fru_id>|<site_number>]
```

3.47.2 *Purpose*

This command enables or disables Shelf Manager control over fan trays for cooling management purposes. This control is enabled by default; it can be disabled temporarily or for an indefinite period of time. In addition, for shelves with zoned cooling management, control can be enabled or disabled with respect to a specific FRU; in that case, the Shelf Manager does not react to thermal events from that FRU by changing the fan level of the specified fan.

The parameters **<fan tray addr>** and **<fan tray fru id>** specify a fan tray. If the **DISABLE** policy for the fan tray is specified, the additional parameter **<timeout>** may be used to specify the duration of the policy. The **<timeout>** parameter is treated in seconds, but rounded to 5 second units in accordance with the PICMG 3.0 specification. The value of the **<timeout>** parameter may not be greater than 21 minutes (1260 seconds) and the minimum value of **<timeout>** is 5 seconds. If the **<timeout>** variable is not specified, the **DISABLE** period is assumed to be infinite.

The flag **-s** precedes the parameters that define a site covered by the fan tray.

The **<site_type>** parameter can accept one of the following values: **Board**, **PEM**, **ShelfFRU**, **ShelfManager**, **FanTray**, **FanFilterTray**, **Alarm**, **Mezzanine**, **PMC**, **RTM**.

If a numeric argument is expected to be treated as a hexadecimal, the "0x" prefix should be used, otherwise the error will be returned.

3.47.3 *Examples*

Disable Shelf Manager control over the fan for 60 seconds with respect to a specific FRU. The fan tray is at IPMB address 20h, FRU ID 3. The designated FRU site (which is assumed to be cooled by that fan tray) is at IPMB address 12h, FRU ID 0.

```
# clia setfanpolicy 0x20 3 DISABLE 60 -s 0x12 0
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Fan policy updated successfully
```

Disable Shelf Manager control over the fan for infinite time with respect to a specific site. The fan tray is at IPMB address 20h, FRU ID 3. The site covered by the fan tray is defined by Site Type "PICMG Board" and Site Number 7.

```
# clia setfanpolicy 0x20 3 DISABLE -s board 7
```

Pigeon Point Shelf Manager Command Line Interpreter

Fan policy updated successfully

Enable fan policy for the fan tray at IPMB address 20h, FRU ID 3, and for all sites covered by this fan.

```
# clia setfanpolicy 0x20 3 ENABLE
```

Pigeon Point Shelf Manager Command Line Interpreter

Fan policy updated successfully

3.48 *setfruledstate*

3.48.1 *Syntax*

```
setfruledstate <IPMB-address> <fru_id> <LedId> | ALL
<LedOp> [<LedColor
>]
<LedOp> ::= ON | OFF | LOCAL | BLINK <onTime> <offTime> |
TEST <onTime>
<LedColor> ::= BLUE | RED | GREEN | AMBER | ORANGE | WHITE
| NONE | <number>
<IPMB-address> <fru_id> can be replaced with any of the following alternatives:
board <N>
shm <N>
power_supply <N>
pem <N>
fan_tray <N>
<IPMB-address> amc <M>
board <N> amc <M>
```

3.48.2 *Purpose*

This command allows the user to set the state of a specific LED or all LEDs for the given FRU. The first argument **<IPMB-address>** is the IPMB-address of an IPM controller. The second argument **<fru_id>** is the FRU device ID. The third argument can be either an LED ID (a numerical value) or **ALL**. In the latter case, the specified operation applies to all LEDs.

The argument **<LedOP>** specifies the operation applied to the FRU(s), based on the PICMG 3.0 specification. The operations are defined as follows:

- **ON** – turn on the LED
- **OFF** – turn off the LED
- **LOCAL** – revert to local control of the LED
- **BLINK** – cause the LED to blink, repeatedly turning it on for **<onTime>** milliseconds and then turning it off for **<offTime>** milliseconds
- **TEST** – run a lamp test for **<onTime>** milliseconds.

For the **TEST** operation **<onTime>** must be less than 12800 ms (12.8 sec); for the **BLINK** operation both **<onTime>** and **<offTime>** values must be within 10 – 2500 ms range.

The optional parameter **<LedColor>** designates a color, either via a symbolic name or a decimal value. Symbolic names of colors correspond to decimal values in accordance with the PICMG 3.0 specification, as listed below. (If the parameter is not specified, the default LED color is used.)

- **BLUE** = 1
- **RED** = 2
- **GREEN** = 3
- **AMBER** = 4
- **ORANGE** = 5
- **WHITE** = 6
- **NONE** = 14 (doesn't change color).

This command can also be issued on the backup Shelf Manager; in that case, the FRU LED state can only be set for FRU LEDs that are local to the backup Shelf Manager.

3.48.3 *Examples*

Turn off LED #1 of FRU #0 of IPM controller at IPMB address 20h.

```
# clia setfruledstate 20 0 1 OFF
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Setting FRU's led state completed successfully, status = 0x0
```

Enable local control for LED #1 of FRU #0 of IPM controller at IPMB address 20h.

```
# clia setfruledstate 20 0 1 LOCAL
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Setting FRU's led state completed successfully, status = 0x0
```

Enable blinking on LED #1 of FRU #0 of IPM controller at IPMB address 20h. The blinking is in the default colour. The on duration is 100 ms and the off duration is 200 ms.

```
# clia setfruledstate 20 0 0 BLINK 100 200
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Setting FRU's led state completed successfully, status = 0x0
```

3.49 *sethysteresis*

3.49.1 *Syntax*

```
sethysteresis <IPMB-address> [<lun>:] <sensor_id> |  
<sensor_name> (pos | neg) [-r] <value>
```

3.49.2 *Purpose*

This command sets the value for the specified hysteresis for the specified sensor. The sensor must be a threshold-based sensor. It must support the designated threshold hysteresis and the hysteresis must be settable.

The command allows the user to qualify the sensor number with the Logical Unit Number (LUN) if the target controller supports sensors on multiple LUNs. The command sets the positive hysteresis if the **pos** argument is present and sets the negative hysteresis if the **neg** argument is present.

This command can also be issued on the backup Shelf Manager; in that case, the hysteresis values can only be set for sensors that are local to the backup Shelf Manager.

3.49.3 *Examples*

Set positive hysteresis for sensor #2 of the IPM controller at IPMB address FCh.

```
# clia sethysteresis FC 2 pos 10
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Positive hysteresis set successfully to 0xA, previous: 0x0
```

3.50 *setipmbstate*

3.50.1 *Syntax*

setipmbstate <IPMB-address> A|B [<link>] 1|0 (in radial IPMB-0 environment)

setipmbstate <IPMB-address> A|B 1|0 (in bused IPMB-0 environment)

3.50.2 *Purpose*

This command enables/disables an IPMB link on the target IPM controller. The second argument defines the bus (IPMB-A or IPMB-B) to be enabled/disabled. The last argument defines the operation to be performed: **1** – to enable link, **0** – to disable link.

The command works differently in bused and radial context. In a bused environment, and in radial shelf for target IPM controllers other than an IPMB Hub, the argument **<link>** is not used. For an IPMB hub controller in a radial shelf, the argument **<link>** is optional.

If **<link>** is present, the command enables/disables the specific radial IPMB link (1 to 95). If **<link>** is omitted, the command enables/disables all the links on the IPMB hub.

This command can also be issued on the backup Shelf Manager; in that case, an IPMB link can only be enabled/disabled for an IPM controller that is local to the backup Shelf Manager.

3.50.3 *Examples*

Disable IPMB-A link on the IPM controller at IPMB address 92h

```
# clia setipmbstate 92 A 0
```

Pigeon Point Shelf Manager Command Line Interpreter

Command executed successfully

Enable radial IPMB link 3, bus B on the Shelf Manager (which is an IPMB hub):

```
# clia setipmbstate 20 B 3 1
```

Pigeon Point Shelf Manager Command Line Interpreter

Command executed successfully

3.51 *setlanconfig*

3.51.1 *Syntax*

```
setlanconfig <channel> <parameter-name> <additional-
parameters>
setlanconfig <channel> <parameter-number> <additional-
parameters>
```

3.51.2 *Purpose*

This command sets the value of the specified LAN configuration parameter on the specified channel. The channel number, the configuration parameter name or number, and the parameter value should be explicitly specified.

The following table lists names and numbers of LAN configuration parameters supported by the **setlanconfig** command:

Table 10 Names and Numbers of LAN Configuration Parameters Supported by the setlanconfig Command

PARAMETER NAME	NUMBER	DESCRIPTION
auth_enables	2	Five 8-bit values that contain authentication types enable flags for Callback, User, Operator, Administrator, and OEM privilege levels for the LAN channel.
Ip	3	A string value that contains the IP address assigned to the LAN channel in dotted decimal notation.
subnet_mask	6	A string value that contains the subnet mask assigned to the LAN channel in dotted decimal notation.
Ipv4_hdr_param	7	Three 8-bit values that contain various IPv4 header parameters for sending RMCP packets: Time-to-live IP header flags (bits [7:5]) Precedence (bits [7:5]) and type of service (bits [4:1])
arp_control	10	Two flags that control ARP behavior on the LAN channel: Enable responding to ARP requests Enable sending Gratuitous ARPs
arp_interval	11	The Gratuitous ARP interval in a fixed-point format (where the integral part represents seconds and the fractional part represents milliseconds)

PARAMETER NAME	NUMBER	DESCRIPTION
dft_gw_ip	12	A string value that contains the IP address of the default gateway in dotted decimal notation.
backup_gw_ip	14	A string value that contains the IP address of the backup gateway in dotted decimal notation.
community	16	A string value (up to 18 symbols) that is put into the "Community String" field in PET Traps.
destination_type	18	The destination type identified by the specified set selector. Set selector must be specified for this parameter. Each destination type entry contains the following fields: destination type (0-7) alert acknowledge flag alert acknowledge timeout / retry interval in seconds (1-256) number of retries (0-7)
destination_address	19	The destination addresses associated with the specified set selector. Set selector must be specified for this parameter. Each destination address entry contains the following fields: gateway selector: 0 – use default, 1 – use backup IP address (string in dotted decimal format) MAC address (string of 6 hexadecimal byte values delimited by ':' symbols)

3.51.3 *auth_enables*

3.51.3.1 Syntax

```
setlanconfig <channel> auth_enables <value1> <value2>
<value3> <value4> <value5>
setlanconfig <channel> 2 <value1> <value2> <value3>
<value4> <value5>
```

3.51.3.2 Purpose

This command sets the value of the LAN parameter **auth_enables**. This parameter specifies which authentication types are currently enabled by the Shelf Manager for each of five supported privilege levels (Callback, User, Administrator, Operator and OEM) and is represented by a sequence of five bytes, each corresponding to the respective privilege level, treated as a bit mask with the following meaning of the bits:

- 0x01 None
- 0x02 MD2
- 0x04 MD5
- 0x10 Straight password/key

- 0x20 OEM proprietary

Parameters <value1> to <value5> should represent the values of these bytes, in hexadecimal. The Shelf Manager does not currently support callback and OEM privilege levels. Therefore, the <value1> and <value5> parameters corresponding to these privilege levels should be specified as 0.

3.51.3.3 Examples

```
# clia setlanconfig 1 auth_enables 0 1 1 1 0
```

Pigeon Point Shelf Manager Command Line Interpreter

Authentication Type Enables set successfully

```
#
```

3.51.4 *ip*

3.51.4.1 Syntax

```
setlanconfig <channel> ip <value>  
setlanconfig <channel> 3 <value>
```

3.51.4.2 Purpose

This command sets the IP address used by the channel. The value should represent an IP address in dotted decimal notation.

3.51.4.3 Examples

```
# clia setlanconfig 1 ip 172.16.2.203
```

Pigeon Point Shelf Manager Command Line Interpreter

IP set successfully

```
#
```

3.51.5 *subnet_mask*

3.51.5.1 Syntax

```
setlanconfig <channel> subnet_mask <value>  
setlanconfig <channel> 6 <value>
```

3.51.5.2 Purpose

This command sets the IP subnet mask used by the channel. The value should represent a subnet mask in dotted decimal notation.

3.51.5.3 Examples

```
# clia setlanconfig 1 subnet_mask 255.255.255.0
```

Pigeon Point Shelf Manager Command Line Interpreter

Subnet Mask set successfully

```
#
```

3.51.6 *ipv4_hdr_param*

3.51.6.1 Syntax

```
setlanconfig <channel> ipv4_hdr_param <value1> <value2>  
<value3>
```

```
setlanconfig <channel> 7 <value1> <value2> <value3>
```

3.51.6.2 Purpose

This command sets the IP 4 header parameters for the Shelf Manager. They are represented as 3 single-byte values in hexadecimal notation: <value1>, <value2> and <value3>. The content of the bytes conforms to section 19.2 of the IPMI 1.5 specification and contains the following attributes:

- Time-to-live in byte 1
- IP header flags (bits [7:5]) in byte 2
- Precedence (bits [7:5]) and type of service (bits [4:1]) in byte 3

3.51.6.3 Examples

```
# clia setlanconfig 1 ipv4_hdr_param 37 E0 11
```

Pigeon Point Shelf Manager Command Line Interpreter

IPv4 Header Parameters set successfully

```
#
```

3.51.7 *arp_control*

3.51.7.1 Syntax

```
setlanconfig <channel> arp_control <value>
```

```
setlanconfig <channel> 10 <value>
```

3.51.7.2 Purpose

This command sets the current value of the LAN parameter **arp_control**. This parameter specifies additional ARP support provided by the Shelf Manager, and is represented by a single byte, treated as a bit mask with the following meaning of the bits:

- 0x01 Enable Shelf Manager-generated Gratuitous ARPs
- 0x02 Enable Shelf Manager-generated ARP responses

Other bits are reserved and should be set to 0.

3.51.7.3 Examples

```
# clia setlanconfig 1 arp_control 3
```

Pigeon Point Shelf Manager Command Line Interpreter

BMC-generated ARP control set successfully

```
#
```

3.51.8 *arp_interval*

3.51.8.1 Syntax

```
setlanconfig <channel> arp_interval <value>  
setlanconfig <channel> 11 <value>
```

3.51.8.2 Purpose

This command sets the current ARP interval used by the channel. The value should represent the number of seconds/milliseconds in fixed-point numeric format (with a possible fractional part). Due to the definition of this parameter in IPMI, it is truncated to the largest time interval that is divisible by 500 milliseconds.

3.51.8.3 Examples

```
# clia setlanconfig 1 arp_interval 3.5
```

Pigeon Point Shelf Manager Command Line Interpreter

Gratuitous ARP interval set successfully

```
#
```

3.51.9 *dft_gw_ip*

3.51.9.1 Syntax

```
setlanconfig <channel> dft_gw_ip <value>  
setlanconfig <channel> 12 <value>
```

3.51.9.2 Purpose

This command sets the IP address of the default gateway used by the channel. The value should represent an IP address in dotted decimal notation.

3.51.9.3 Examples

```
# clia setlanconfig 1 dft_gw_ip 172.16.2.100  
  
Pigeon Point Shelf Manager Command Line Interpreter  
  
Default Gateway Address set successfully  
  
#
```

3.51.10 *backup_gw_ip*

3.51.10.1 Syntax

```
setlanconfig <channel> backup_gw_ip <value>  
setlanconfig <channel> 14 <value>
```

3.51.10.2 Purpose

This command sets the IP address of the backup gateway used by the channel. The value should represent an IP address in dotted decimal notation.

3.51.10.3 Examples

```
# clia setlanconfig 1 backup_gw_ip 172.16.2.100  
  
Pigeon Point Shelf Manager Command Line Interpreter  
  
Backup Gateway Address set successfully  
  
#
```

3.51.11 *community*

3.51.11.1 Syntax

```
setlanconfig <channel> community <value>  
setlanconfig <channel> 16 <value>
```

3.51.11.2 Purpose

This command sets the community string parameter used in PET traps. The value should be a string enclosed in double quotes.

3.51.11.3 Examples

```
# clia setlanconfig 1 community "Community"
```

Pigeon Point Shelf Manager Command Line Interpreter

Community string set successfully

```
#
```

3.51.12 *destination_type*

3.51.12.1 Syntax

```
setlanconfig <channel> destination_type <set-selector>  
<value1> <value2> <value3>  
setlanconfig <channel> 18 <set-selector> <value1> <value2>  
<value3>
```

3.51.12.2 Purpose

This command sets the element of the destination table with the index **<set-selector>**. Indexes are 0-based. Selector 0 is used to address the volatile destination. Values **<value1>**, **<value2>** and **<value3>** supply information about the new destination according to section 19.2 of the IPMI specification. The following information is supplied:

- the alert destination type (PET Trap or OEM destination; whether the alert should be acknowledged)
- alert acknowledge timeout
- retry count

3.51.12.3 Examples

```
# clia setlanconfig 1 destination_type 2 80 3 5
```

Pigeon Point Shelf Manager Command Line Interpreter

Destination Type set successfully

```
#
```

3.51.13 *destination_address*

3.51.13.1 Syntax

```
setlanconfig <channel> destination_address <set-selector>
<gateway-sel> <IP-address> <MAC-address>
setlanconfig <channel> 19 <set-selector> <gateway-sel> <IP-
address> <MAC-address>
```

3.51.13.2 Purpose

This command sets the element of the destination address table with the index **<set-selector>**. Indexes are 0-based. Selector 0 is used to address the volatile destination. The command parameters supply the necessary information:

- **<gateway-sel>** - gateway to use: 0 for default gateway, 1 for backup gateway
- **<IP-address>** - the destination IP address in dotted-decimal notation
- **<MAC-address>** - the destination MAC address, six hexadecimal bytes separated by colons

3.51.13.3 Examples

```
# clia setlanconfig 1 destination_address 2 0 172.16.2.100
90:93:93:93:93:93
```

Pigeon Point Shelf Manager Command Line Interpreter

Destination Addresses set successfully

#

3.52 *setlocked*

3.52.1 *Syntax*

```
setlocked <IPMB-address> <fru_id> 0 | 1
setlocked board <N> 0 | 1
setlocked shm <N> 0 | 1
setlocked power_supply <N> 0 | 1
setlocked pem <N> 0 | 1
setlocked fan_tray <N> 0 | 1
setlocked <IPMB-address> amc <M> 0 | 1
setlocked board <N> amc <M> 0 | 1
```

3.52.2 *Purpose*

This command sets the Locked bit for the specified FRU to the specified state (0 for unlock or 1 for lock). The FRU is specified using the IPMB address of the owning IPM controller and the FRU device ID. FRU device ID 0 designates the IPM controller proper in PICMG 3.0 contexts.

The Locked bit controls, according to the PICMG 3.0 specification, whether the FRU is allowed to autonomously progress from state M1 to state M2. If the Locked bit is set, this transition is not allowed. When the Shelf Manager sends the “Deactivate” command to the FRU, the FRU transitions to the state M1 and sets the Locked bit, preventing subsequent state transitions.

This command can be used to re-activate a previously manually deactivated FRU by clearing the Locked bit for it.

This command can also be issued on the backup Shelf Manager; in that case, the Locked bit can only be set to the specified state for FRUs that are local to the backup Shelf Manager.

3.52.3 *Examples*

Clear the Locked bit for the IPM controller proper at address 9Ch, thus allowing it to reactivate.

```
# clia setlocked 9c 0 0
```

Pigeon Point Shelf Manager Command Line Interpreter

```
    Lock set successfully to 0x0
```

```
#
```

3.53 *setpefconfig*

3.53.1 *Syntax*

```
setpefconfig <parameter-name> <additional-parameters>  
setpefconfig <parameter-number> <additional-parameters>
```

3.53.2 *Purpose*

This command sets a new value of the specified PEF configuration parameter. The following table lists names and numbers of PEF configuration parameters that can be set via this command.

Table 11 Names and Numbers of PEF Configuration Parameters Supported by the *setpefconfig* Command

PARAMETER NAME	NUMBER	DESCRIPTION
control	1	An 8-bit value that represents control flags for PEF (enable PEF, enable PEF startup delay, etc.)
action_control	2	An 8-bit value that represents action global control flags for PEF (enable reset, enable power down, etc.)
startup_delay	3	Time to delay PEF after system power-ups and resets, in seconds
alert_startup_delay	4	Time to delay alerts after system power-ups and resets, in seconds

PARAMETER NAME	NUMBER	DESCRIPTION
event_filter	6	An event filter table entry identified by the specified set selector. Consists of the following 19 numeric values, in hexadecimal, encoded according to the definition in table 15-2 of the IPMI specification version 1.5: filter configuration event filter action alert policy number event severity generator ID byte 1 generator ID byte 2 sensor type sensor number event trigger (event/reading type) event data 1 event offset mask event data 1 AND mask event data 1 compare 1 event data 1 compare 2 event data 2 AND mask event data 2 compare 1 event data 2 compare 2 event data 3 AND mask event data 3 compare 1 event data 3 compare 2
event_filter_data1	7	The first byte of the event filter table entry identified by the specified set selector.
alert_policy	9	An alert policy table entry identified by the specified set selector. Consists of the following 5 numeric values, in hexadecimal, encoded according to the definition in table 15-4 of IPMI 1.5: policy number (4 bit value) policy (4 bit value); includes the enable/disable bit channel number (4 bit value) destination selector (4 bit value) alert string set/selector
system-guid	10	A GUID used to fill in the GUID field in the PET trap
alert_string_key	12	An alert string key identified by the specified set selector. Consists of two 8-bit values: event filter number and alert string set.
alert_string	13	An alert string identified by the specified set selector.

PARAMETER NAME	NUMBER	DESCRIPTION
oem_filter	97	An OEM filter table entry identified by the specified set selector. Consists of the following 3 numeric values: Byte 1: SEL Record Type Range Low boundary Byte 2: SEL Record type Range high boundary Byte 3: Alert policy number that will be invoked for SEL entries that have record types matching the range above.
pet_format	98	Format of the Platform Event Traps that are sent by the Shelf Manager as the Alert action initiated by event processing in the Platform Event Filtering facility. The values are defined as follows: 0 = the default IPMI format defined by IPMI Platform Event Trap Format v1.0 specification. 1 = plain text format; all the event details are sent as plain ASCII text in a single variable. 2 = multi-variable format; each event field is encoded as a separate variable.

3.53.3 control

3.53.3.1 Syntax

```
setpefconfig control <value>
setpefconfig 1 <value>
```

3.53.3.2 Purpose

This command sets a new value of the PEF parameter **control**. This parameter is a single byte, treated as a bit mask with the following meaning for the bits:

- 0x01 Enable PEF
- 0x02 Enable generation of event messages for PEF actions
- 0x04 Enable PEF startup delays on system power-ups and resets
- 0x08 Enable PEF Alert Startup delays

Other bits are reserved and should be set to 0. The value should be entered in hexadecimal.

3.53.3.3 Examples

```
# clia setpefconfig control 7
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
PEF control set successfully
```

#

3.53.4 *action_control*

3.53.4.1 Syntax

```
setpefconfig action_control <value>  
setpefconfig 2 <value>
```

3.53.4.2 Purpose

This command sets a new value of the PEF parameter **action_control**. This parameter is a single byte, treated as a bit mask with the following meaning for the bits:

- 0x01 Enable alert action
- 0x02 Enable power down action
- 0x04 Enable reset action
- 0x08 Enable power cycle action
- 0x10 Enable OEM action
- 0x20 Enable diagnostic interrupt

Other bits are reserved and should be set to 0. The value should be entered in hexadecimal

3.53.4.3 Examples

```
# clia setpefconfig action_control 3f
```

Pigeon Point Shelf Manager Command Line Interpreter

PEF action control set successfully

#

3.53.5 *startup_delay*

3.53.5.1 Syntax

```
setpefconfig startup_delay <value>  
setpefconfig 3 <value>
```

3.53.5.2 Purpose

This command sets the new value of the PEF parameter **startup_delay**. This parameter is a single byte, representing the number of seconds that the PEF facility delays at startup. The value is specified as a decimal number of seconds.

3.53.5.3 Examples

```
# clia setpefconfig startup_delay 45
```

Pigeon Point Shelf Manager Command Line Interpreter

PEF startup delay set successfully

#

3.53.6 *alert_startup_delay*

3.53.6.1 Syntax

setpefconfig startup_delay <value> | setpefconfig 4 <value>

3.53.6.2 Purpose

This command sets the current value of the PEF parameter **alert_startup_delay**. This parameter is a single byte, representing the number of seconds that the alerting facility delays at startup. The value is specified as a decimal number of seconds.

3.53.6.3 Examples

```
# clia setpefconfig alert_startup_delay 45
```

Pigeon Point Shelf Manager Command Line Interpreter

Alert startup delay set successfully

#

3.53.7 *event_filter*

3.53.7.1 Syntax

**setpefconfig event_filter <set-selector> <value1> ...
<value19>
setpefconfig 6 <set-selector> <value1> ... <value19>**

3.53.7.2 Purpose

This command sets the element of the event filter table with the index **<set-selector>**. Indexes are 1-based. The contents of the new element are specified by 19 numeric values **<value1>** to **<value19>**, in hexadecimal, encoded according to the definition in table 15-2 of the IPMI specification, version 1.5:

- filter configuration
- event filter action
- alert policy number
- event severity
- generator ID byte 1
- generator ID byte 2
- sensor type

- sensor number
- event trigger (event/reading type)
- event data 1 event offset mask
- event data 1 AND mask
- event data 1 compare 1
- event data 1 compare 2
- event data 2 AND mask
- event data 2 compare 1
- event data 2 compare 2
- event data 3 AND mask
- event data 3 compare 1
- event data 3 compare 2

3.53.7.3 Examples

Setting event filter 2 to trigger an alert action when an IPM Controller at address 9Ch, FRU 0, reaches state M0 (the alert will be sent according with the Alert Policy #1):

```
# clia setpefconfig event_filter 2 80 1 1 10 9C FF F0 FF FF FF FF 0F FF
0 0 0 0 FF FF 0
```

Pigeon Point Shelf Manager Command Line Interpreter

Event filter set successfully

#

3.53.8 *event_filter_data1*

3.53.8.1 Syntax

```
setpefconfig event_filter_data1 <set-selector> <value>
setpefconfig 7 <set-selector> <value>
```

3.53.8.2 Purpose

This command sets the first byte of the element of the event filter table with the index **<set-selector>**. Indexes are 1-based. This byte should be specified in hexadecimal. Bits in this byte have the following meaning:

- 0x80 This filter is enabled
- 0x40 This filter is pre-configured by the manufacturer and should not be altered by software

Other bits are reserved and should be 0.

This command can be used to quickly toggle the enabled/disabled state of an event filter, that is, turn it on and off without rewriting the whole table entry.

3.53.8.3 Examples

Turn on event filter 2.

```
# clia setpefconfig event_filter_data1 2 80
```

Pigeon Point Shelf Manager Command Line Interpreter

Event filter data1 set successfully

```
#
```

Turn off event filter 2.

```
# clia setpefconfig event_filter_data1 2 0
```

Pigeon Point Shelf Manager Command Line Interpreter

Event filter data1 set successfully

```
#
```

3.53.9 *alert_policy*

3.53.9.1 Syntax

```
setpefconfig alert_policy <set-selector> <value1> <value2>  
<value3> <value4> <value5>  
setpefconfig 9 <set-selector> <value1> <value2> <value3>  
<value4> <value5>
```

3.53.9.2 Purpose

This command sets an alert policy table entry identified by the specified set selector. The contents of the new element are specified by the following 5 numeric values **<value1>** to **<value5>**, in hexadecimal, encoded according to the definition in table 15-4 of IPMI 1.5:

- policy number (4 bit value)
- policy (4 bit value); includes the enable/disable bit
- channel number (4 bit value)
- destination selector (4 bit value)
- alert string set/selector

3.53.9.3 Examples

The following example sets up the alert policy table entry 2 with the following attributes:

- Policy number = 5,
- Enabled,
- Policy = always send alert to this destination
- Destination channel = 1
- Destination selector = 1

- Alert String selector = use string 1 for all events.

```
# clia setpefconfig alert_policy 2 5 8 1 1 1
```

Pigeon Point Shelf Manager Command Line Interpreter

Policy set successfully

```
#
```

3.53.10 *system_guid*

3.53.10.1 Syntax

```
setpefconfig system_guid <guid-value>
```

```
setpefconfig 10 <guid-value>
```

```
setpefconfig system_guid none
```

```
setpefconfig 10 none
```

3.53.10.2 Purpose

This command sets the current value of the PEF parameter **system_guid**. This parameter represents the GUID that is sent in a PET Trap PDU to an alert destination. This GUID may be defined as a separate GUID or as being equal to the System GUID.

The **<guid-value>** can be specified as an actual GUID, conforming to the standard GUID format "xxxxxxxx-xxxx-xxxx-xxxxxxxxxxxx", or as a symbolic value **none**. In the first case, the PEF facility uses the specified GUID in PET Traps. In the second case, the PEF facility defaults to the System GUID (the result of the IPMI "Get System GUID" command) for PET Traps.

3.53.10.3 Examples

```
# clia setpefconfig system_guid 23662F7F-BA1B-4b65-8808-94CA09C9BBB0
```

Pigeon Point Shelf Manager Command Line Interpreter

GUID set successfully

```
# clia setpefconfig system_guid none
```

Pigeon Point Shelf Manager Command Line Interpreter

Using the system GUID

```
#
```

3.53.11 *alert_string_key*

3.53.11.1 Syntax

```
setpefconfig alert_string_key <set-selector> <value1>  
<value2>  
setpefconfig 12 <set-selector> <value1> <value2>
```

3.53.11.2 Purpose

This command sets the element of the alert string key table with the index **<set-selector>**. Indexes are 1-based. Set selector 0 can be used to designate the volatile alert string. Each key associates an event filter with an alert string for alert generation purposes, and consists of the event filter number and the alert string number. Both values are 8-bit values and are specified by the parameters **<value1>** and **<value2>** respectively, in hexadecimal.

3.53.11.3 Examples

```
# clia setpefconfig alert_string_key 2 10 11
```

Pigeon Point Shelf Manager Command Line Interpreter

Alert string keys set successfully

#

3.53.12 *alert_string*

3.53.12.1 Syntax

```
setpefconfig alert_string <set-selector> <string-value>  
setpefconfig 13 <set-selector> <string-value>
```

3.53.12.2 Purpose

This command sets the element of the alert string table with the index **<set-selector>**. Indexes are 1-based. Index 0 can be used to designate the volatile alert string. The string value should be enclosed in double quotes (") and may contain special characters and line feeds inside.

3.53.12.3 Examples

```
# clia setpefconfig alert_string 2 "This string has  
> a line feed inside."
```

Pigeon Point Shelf Manager Command Line Interpreter

Alert string set successfully

#

3.53.13 *oem_filter*

3.53.13.1 Syntax

```
setpefconfig oem_filter <set-selector> <value1> <value2>
<value3>
setpefconfig 97 <set-selector> <value1> <value2> <value3>
```

3.53.13.2 Purpose

The OEM filter table is a Pigeon Point Systems-defined OEM extension of the IPMI specification. It allows PEF to be applied, in addition to platform events, also to OEM timestamped and non-timestamped SEL entries (record type range C0h-FFh).

Each entry of the OEM filter table defines the range of record types (in the range of OEM record types), to which this OEM filter applies, and the alert policy number that is to be invoked when a record with the matching record type is placed in the SEL.

This command sets an OEM filter table entry, the number of which is identified by the specified set selector. The entry consists of the following 3 numeric values:

- Byte 1: SEL Record Type Range Low boundary
- Byte 2: SEL Record type Range high boundary
- Byte 3: Alert policy number that will be invoked for SEL entries that have record types matching the range above.

3.53.13.3 Examples

```
# clia getpefconfig oem_filter
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Active OEM Filters:
0x01: OEM range boundary 0xff:0xff, alert policy # 1
```

```
#
# clia setpefconfig oem_filter 4 0xdc 0xf3 5
```

Pigeon Point Shelf Manager Command Line Interpreter

OEM filter set successfully

```
# clia getpefconfig oem_filter
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Active OEM Filters:
0x01: OEM range boundary 0xff:0xff, alert policy # 1
0x04: OEM range boundary 0xdc:0xf3, alert policy # 5
```

3.53.14 *pet_format*

3.53.14.1 Syntax

setpefconfig pet_format <format>

3.53.14.2 Purpose

Specifies the format of the Platform Event Traps that are sent by the Shelf Manager as the Alert action initiated by event processing in the Platform Event Filtering facility. The values of **<format>** parameter are defined as follows:

0 = the default IPMI format defined by IPMI Platform Event Trap Format v1.0 specification.

1 = plain text format; all the event details are sent as plain ASCII text in a single variable.

2 = multi-variable format; each event field is encoded as a separate variable.

3.53.14.3 Examples

```
# clia setpefconfig pet_format 0
```

Pigeon Point Shelf Manager Command Line Interpreter

Platform Event Trap format set successfully

3.54 *setpowerlevel*

3.54.1 *Syntax*

```
setpowerlevel <IPMB-address> <fru_id> [<pwr_lvl>|OFF]
[COPY]
```

<IPMB-address> <fru_id> can be replaced with any of the following alternatives:

```
board <N>
shm <N>
power_supply <N>
pem <N>
fan_tray <N>
```

3.54.2 *Purpose*

This command allows controlling the power level of a FRU and results in the Shelf Manager issuing a “Set Power Level” command on IPMB-0 to the designated IPM controller. Since the Shelf Manager core is responsible for managing power levels and tracking the corresponding power budgets, this command must be used with extreme care, especially when specifying a non-zero power level. Users of this command must be thoroughly familiar with the AdvancedTCA power management architecture as defined in the AdvancedTCA specification.

The target FRU is specified by the IPMB address of its IPM controller, plus the FRU device ID. Alternatively, the board number or a dedicated Shelf Manager number can be used to designate the target FRU.

The third argument <pwr_lvl> is a power level. The power levels allowed are 0h to 14h, if available. A zero power level is equivalent to the keyword **OFF**; in that case, the command performs a power off of the designated FRU, if possible.

If no power level is specified, the command does not change the current power level of the FRU; this is equivalent to specifying 0xFF as the power level value. If specified, the power level is an index that selects one of the previously arranged power draw values for the designated FRU. Each power draw value corresponds to a maximum power draw (in Watts) that the FRU is authorized to use.

At any given time, an AdvancedTCA FRU that has been powered on has a set of up to 20 (14h) power draws that have been established between the FRU (actually, the IPM controller that represents the FRU) and the Shelf Manager. The <pwr_lvl> argument selects one of this set of power draws as the maximum power that the FRU is authorized to use.

Thereafter until another change is made, that FRU must not draw more than that authorized amount of power. The current and maximum power levels, plus the associated authorized power draw (in Watts) associated with the current power level, are available for any FRU via the **cli fru -v** command.

The optional parameter **COPY** specifies whether to “copy” desired power levels to present power levels (see the AdvancedTCA specification for background). If this parameter is not specified, the command does not copy desired to present power levels.

3.54.3 *Examples*

Turn off power for the board at 84h:

```
# clia setpowerlevel 84 0 OFF
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Operation completed with status = 0x0
```

3.55 *setsensordata*

3.55.1 *Syntax*

```
setsensordata <IPMB-address> <sensor-name> [reading [-r]
<value>] [assertion_<mask>] [deassertion_<mask>]
[ event_data <b1> <b2> <b3> | event_data_no_offset <b1>
<b2> <b3>]
```

```
setsensordata <IPMB-address> [<lun>:]<sensor-number>
[reading [-r] <value>] [assertion_<mask>]
[deassertion_<mask>] [ event_data <b1> <b2> <b3> |
event_data_no_offset <b1> <b2> <b3>]
```

<IPMB-address> can be replaced with either of the following alternatives:

board <N>

shm <N>

3.55.2 *Purpose*

This command changes the reading, assertion/deassertion mask or event data bytes for the specified sensor. The sensor must be defined as settable, as defined in Addendum E372 to the IPMI specification v 2.0 (that is, bit [7] must be set to 1 in the Sensor Initialization byte of the corresponding SDR).

The sensor is specified by the IPMB address of the owning IPM controller and the sensor name or number. Alternatively, the board number or the dedicated Shelf Manager number can be used to designate the target IPM controller.

This command allows the user to qualify the sensor number with the Logical Unit Number (LUN) if the target controller supports sensors on multiple LUNs. <lun> can take the value 0, 1 or 3. (LUN 2 is reserved.) If the LUN is omitted, the command is applied to the sensor with the specified sensor number on the lowest LUN. (For example, if the command specifies sensor 3 without explicit LUN qualification, and the target controller exposes sensor 3 on LUN 1 and another sensor 3 on LUN 3, the command is applied to the sensor 3 on LUN 1.)

The parameters of this command follow the conventions of the IPMI command “Set Sensor Reading and Event Status”, defined in the Addendum E372 to the IPMI specification v 2.0.

The clause **reading [-r] <value>** specifies the new reading for the sensor. If the option **-r** is supplied, the <value> is interpreted as a raw value. Otherwise it is interpreted as a processed value and translated to the raw value using the SDR data (linearization, M, B, etc).

The clauses **assertion <mask>** and **deassertion <mask>** specify the current assertion/deassertion condition masks for the sensor, as 16-bit values. Their meaning is defined as follows:

For threshold-based sensors:

- [15:12] – reserved, must be 0000
- [11] - 1b = assertion/deassertion condition for upper non-recoverable going high
- [10] - 1b = assertion/deassertion condition for upper non-recoverable going low
- [9] - 1b = assertion/deassertion condition for upper critical going high
- [8] - 1b = assertion/deassertion condition for upper critical going low
- [7] - 1b = assertion/deassertion condition for upper non-critical going high
- [6] - 1b = assertion/deassertion condition for upper non-critical going low
- [5] - 1b = assertion/deassertion condition for lower non-recoverable going high
- [4] - 1b = assertion/deassertion condition for lower non-recoverable going low
- [3] - 1b = assertion/deassertion condition for lower critical going high
- [2] - 1b = assertion/deassertion condition for lower critical going low
- [1] - 1b = assertion/deassertion condition for lower non-critical going high
- [0] - 1b = assertion/deassertion condition for lower non-critical going low

For discrete sensors:

- [15] – reserved, must be 0
- [14] - 1b = state 14 assertion/deassertion event occurred
- [13] - 1b = state 13 assertion/deassertion event occurred
- [12] - 1b = state 12 assertion/deassertion event occurred
- [11] - 1b = state 11 assertion/deassertion event occurred
- [10] - 1b = state 10 assertion/deassertion event occurred
- [9] - 1b = state 9 assertion/deassertion event occurred
- [8] - 1b = state 8 assertion/deassertion event occurred
- [7] - 1b = state 7 assertion/deassertion event occurred
- [6] - 1b = state 6 assertion/deassertion event occurred
- [5] - 1b = state 5 assertion/deassertion event occurred
- [4] - 1b = state 4 assertion/deassertion event occurred
- [3] - 1b = state 3 assertion/deassertion event occurred
- [2] - 1b = state 2 assertion/deassertion event occurred
- [1] - 1b = state 1 assertion/deassertion event occurred
- [0] - 1b = state 0 assertion/deassertion event occurred

The clauses **event_data** <b1> <b2> <b3> and **event_data_no_offset** <b1> <b2> <b3> are used to specify the event data bytes that are sent in the IPMI Platform Event request when the sensor generates an event. If the variant **event_data** is used, the event offset (the lower nibble of the event data byte 1) is taken from <b1>; if the variant **event_data_no_offset** is used, the even offset is generated automatically when the event happens, and the lower nibble of the byte <b1> is ignored.

This command can also be issued on the backup Shelf Manager; in that case, the command can apply only to sensors that are local to the backup Shelf Manager.

3.55.3 Examples

In the following examples, the settable sensor “Eth0 Front” has the type “Entity Presence” and both monitors and controls the state of the Ethernet connection on the front panel of the carrier board. The command **setsensordata** is issued to change the sensor state from “Entity Present” to “Entity Absent”, which effectively turns off the Ethernet connection on the front panel.

```
# clia sensordata 10 10
```

Pigeon Point Shelf Manager Command Line Interpreter

```
10: LUN: 0, Sensor # 10 ("Eth0 Front")
    Type: Discrete (0x6f), "Entity Presence" (0x25)
    Belongs to entity (0xf0, 0x60): FRU # 0
    Status: 0xc0
        All event messages enabled from this sensor
        Sensor scanning enabled
        Initial update completed
    Sensor reading: 0x00
    Current State Mask 0x0001
        Entity Present
```

```
#
```

```
# clia setsensordata 10 10 assertion 2
```

Pigeon Point Shelf Manager Command Line Interpreter

```
    Sensor data set successfully
```

```
#
```

```
# clia sensordata 10 10
```

Pigeon Point Shelf Manager Command Line Interpreter

```
10: LUN: 0, Sensor # 10 ("Eth0 Front")
    Type: Discrete (0x6f), "Entity Presence" (0x25)
    Belongs to entity (0xf0, 0x60): FRU # 0
    Status: 0xc0
        All event messages enabled from this sensor
        Sensor scanning enabled
        Initial update completed
    Sensor reading: 0x00
    Current State Mask 0x0002
        Entity Absent
```

3.56 *setsensoreventenable*

3.56.1 *Syntax*

```
setsensoreventenable <IPMB-address> <sensor-name> <global>
[<assertion_events> [<deassertion_events>]]
setsensoreventenable <IPMB-address> [<lun>:]<sensor-number>
<global> [<assertion_events> [<deassertion_events>]]
```

<IPMB-address> can be replaced with any of the following alternatives:

board <N>

shm <N>

3.56.2 *Purpose*

This command changes the event enable mask for the specified sensor. The sensor is specified by the IPMB address of the owning IPM controller and the sensor name or number. Alternatively, the board number or the dedicated Shelf Manager number can be used to designate the target IPM controller.

This command allows the user to qualify the sensor number with the Logical Unit Number (LUN) if the target controller supports sensors on multiple LUNs. <lun> can take value 0, 1 or 3. (LUN 2 is reserved.) If the LUN is omitted, the command is applied to the sensor with the specified sensor number on the lowest LUN. (For example, if the command specifies sensor 3 without explicit LUN qualification, and the target controller exposes sensor 3 on LUN 1 and another sensor 3 on LUN 3, the command is applied to the sensor 3 on LUN 1.)

The parameters of this command follow the conventions of the IPMI command “Set Sensor Event Enable”.

The parameter <global> directly corresponds to the second byte of the command request parameters and is a bit mask with the following meanings of the bits:

- [7] - 0b = disable all Event Messages from this sensor (optional; does not impact individual enable/disable status)
- [6] - 0b = disable scanning on this sensor (optional)
- [5:4] - 00b = do not change individual enables
- 01b = enable selected event messages
- 10b = disable selected event messages
- 11b = reserved
- [3:0] - reserved

The parameters <assertion_events> and <deassertion_events> are 16-bit bit masks representing individual events to enable or disable, as follows:

For threshold-based sensors:

- [15:12] – reserved, must be 0000

- [11] - 1b = select event for upper non-recoverable going high
- [10] - 1b = select event for upper non-recoverable going low
- [9] - 1b = select event for upper critical going high
- [8] - 1b = select event for upper critical going low
- [7] - 1b = select event for upper non-critical going high
- [6] - 1b = select event for upper non-critical going low
- [5] - 1b = select event for lower non-recoverable going high
- [4] - 1b = select event for lower non-recoverable going low
- [3] - 1b = select event for lower critical going high
- [2] - 1b = select event for lower critical going low
- [1] - 1b = select event for lower non-critical going high
- [0] - 1b = select event for lower non-critical going low

For discrete sensors:

- [15] – reserved, must be 0
- [14] - 1b = select event for state bit 14
- [13] - 1b = select event for state bit 13
- [12] - 1b = select event for state bit 12
- [11] - 1b = select event for state bit 11
- [10] - 1b = select event for state bit 10
- [9] - 1b = select event for state bit 9
- [8] - 1b = select event for state bit 8
- [7] - 1b = select event for state bit 7
- [6] - 1b = select event for state bit 6
- [5] - 1b = select event for state bit 5
- [4] - 1b = select event for state bit 4
- [3] - 1b = select event for state bit 3
- [2] - 1b = select event for state bit 2
- [1] - 1b = select event for state bit 1
- [0] - 1b = select event for state bit 0

This command can be used both to control individual event enables and to disable/enable sensor scanning and event generation globally.

In the first case, the two most significant bits of the parameter `<global>` should be set. Typical values are:

- 0xD0 to enable events specified by the masks `<assertion_events>` and `<deassertion_events>`
- 0xE0 to disable events specified by the masks `<assertion_events>` and `<deassertion_events>`

In the second case, the parameters `<assertion_events>` and `<deassertion_events>` can be omitted and the parameter `<global>` controls the

global attributes of the sensor. Only bits 7 and 6 are used, bits 5:0 are set to 0 in that case. Typical values of the `<global>` parameter in that case are:

- 0 to disable both sensor scanning and event generation
- 0x40 to enable sensor scanning but disable event generation
- 0xC0 to enable both sensor scanning and event generation

However the combination of the two cases above is also possible. More information can be found in the section of the IPMI specification that is dedicated to the command “Set Sensor Event Enable”.

This command can also be issued on the backup Shelf Manager; in that case, the event enable mask is only set for sensors that are local to the backup Shelf Manager.

3.56.3 Examples

Enable the “Lower Non-Critical Going Low” event on the temperature sensor “Local Temp” on the IPM controller FEh.

```
# clia setsensoreventenable fe "Local Temp" 0xD0 0x01 0x00
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Event enable mask set successfully
```

```
#
```

```
# clia getsensoreventenable -v fe "Local Temp"
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
fe: LUN: 0, Sensor # 3 ("Local Temp")
    Type: Threshold (0x01), "Temperature" (0x01)
    Assertion event mask: 0x0001
        Assertion event for "Lower Non-Critical Going Low" enabled
    Deassertion event mask: 0x0000
#
```

Perform the same operation on the same sensor, but specify the sensor using LUN and sensor number:

```
# clia setsensoreventenable fe 0:3 0xD0 0x01 0x00
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Event enable mask set successfully
```

```
#
```

3.57 *setthreshold*

3.57.1 *Syntax*

```
setthreshold <IPMB-address> <sensor-name> <threshold-type>
[-r] <value>
setthreshold <IPMB-address> [<lun>:]<sensor-number>
<threshold-type> [-r] <value>
```

<IPMB-address> can be replaced with any of the following alternatives:

```
board <N>
shm <N>
```

3.57.2 *Purpose*

This command changes the current threshold value for the specified threshold of the specified sensor. The sensor is specified by the IPMB address of the owning IPM controller and the sensor name or number. The target sensor must be a threshold-based sensor. The parameter <threshold-type> can be specified as one of the following symbolic values:

- **upper_non_recoverable** (can be abbreviated to **unr**)
- **upper_critical** (can be abbreviated to **uc**)
- **upper_non_critical** (can be abbreviated to **unc**)
- **lower_non_recoverable** (can be abbreviated to **lnr**)
- **lower_critical** (can be abbreviated to **lc**)
- **lower_non_critical** (can be abbreviated to **lnc**)

By default, the target value is specified in processed form (e.g. in Volts for voltage sensors or in Celsius degrees for temperature sensors). Option **-r** means that a raw value is used instead (usually a byte-size quantity, converted according to sensor-specific rules).

This command allows the user to qualify the sensor number with the Logical Unit Number (LUN) if the target controller supports sensors on multiple LUNs. <lun> can take the value 0, 1 or 3. (LUN 2 is reserved.) If the LUN is omitted, the command is applied to the sensor with the specified sensor number on the lowest LUN. (For example, if the command specifies sensor 3 without explicit LUN qualification, and the target controller exposes sensor 3 on LUN 1 and another sensor 3 on LUN 3, the command is applied to the sensor 3 on LUN 1.)

This command can also be issued on the backup Shelf Manager; in that case, threshold values can only be set for sensors that are local to the backup Shelf Manager.

3.57.3 *Examples*

Set the upper non-critical threshold value for the temperature sensor “emulated temp” on IPM controller 9Ch to 99 degrees Celsius.

clia threshold 9c 2

Pigeon Point Shelf Manager Command Line Interpreter

```
9c: LUN: 0, Sensor # 2 ("emulated temp")
    Type: Threshold (0x01), "Temperature" (0x01)
        Lower Non-Critical Threshold, Raw Data: 0x03, Processed Data:
3.000000 degrees C
        Lower Critical Threshold, Raw Data: 0x14, Processed Data:
20.000000 degrees C
        Lower Non-Recoverable Threshold, Raw Data: 0xfb, Processed
Data: -5.000000 degrees C
        Upper Non-Critical Threshold, Raw Data: 0x46, Processed Data:
70.000000 degrees C
        Upper Critical Threshold, Raw Data: 0x50, Processed Data:
80.000000 degrees C
        Upper Non-Recoverable Threshold, Raw Data: 0x5a, Processed
Data: 90.000000 degrees C
```

#

clia setthreshold 9c 0:2 unc 99

Pigeon Point Shelf Manager Command Line Interpreter

Threshold set successfully

#

clia threshold 9c 0:2

Pigeon Point Shelf Manager Command Line Interpreter

```
9c: LUN: 0, Sensor # 2 ("emulated temp")
    Type: Threshold (0x01), "Temperature" (0x01)
        Lower Non-Critical Threshold, Raw Data: 0x03, Processed Data:
3.000000 degrees C
        Lower Critical Threshold, Raw Data: 0x14, Processed Data:
20.000000 degrees C
        Lower Non-Recoverable Threshold, Raw Data: 0xfb, Processed
Data: -5.000000 degrees C
        Upper Non-Critical Threshold, Raw Data: 0x63, Processed Data:
99.000000 degrees C
        Upper Critical Threshold, Raw Data: 0x50, Processed Data:
80.000000 degrees C
        Upper Non-Recoverable Threshold, Raw Data: 0x5a, Processed
Data: 90.000000 degrees C
```

#

3.58 *shelf*

3.58.1 *Syntax*

shelf <subcommand>

The following subcommands are supported.

- **address_table**
- **cooling_state**
- **fans_state**
- **power_distribution**
- **power_management**
- **pci_connectivity**
- **ha_connectivity**
- **h110_connectivity**
- **point-to-point_connectivity**
- **MaxCurrent** [feed] <Amps>
- **MinVoltage** [feed] <Volts>
- **Activation** <addr> <fru_id> 1|0
- **Deactivation** <addr> <fru_id> 1|0
- **BDSelGrounded** <slot number> 1|0
- **PwrCapability** <addr> <fru_id> <Watts>
- **PwrDelay** <addr> <fru_id> <10ths_of_second>
- **Allowance** <seconds>
- **PwrReorder** <addr1> <fru_id1> before|after <addr2>
 <fru_id2>
- **info_refresh**
- **info_force_update**

3.58.2 *Purpose*

The command **shelf** shows key Shelf FRU information, plus selected current operating data for the shelf, and allows modifying some fields in the Shelf FRU information. The type of the information this command shows or modifies is specified in the command parameter.

The following subsections describe the syntax of the **shelf** command for different applications of it.

3.58.3 *Displaying Shelf FRU Information*

3.58.3.1 *Syntax*

```
shelf [cooling_state | fans_state | address_table |
power_distribution | power_management | pci_connectivity |
```

```
ha_connectivity | h110_connectivity | point-to-
point_connectivity ]
```

3.58.3.2 Purpose

The variants of the **shelf** command show key Shelf FRU information, plus selected current operating data for the shelf. The type of the information shown is specified in the subcommand.

The following table lists the subcommands and parameters used to display shelf information:

Table 12 Parameters Supported by the shelf Command

PARAMETER NAME	DESCRIPTION
cooling_state (can be abbreviated to cs)	Shows the current cooling state of the shelf: Normal – all temperature sensors show normal operating temperature. Minor Alert – at least one temperature sensor is in minor alert state. None of the sensors is in major or critical alert state. Major Alert – at least one temperature sensor is in major alert state. None of the sensors is in critical alert state. Critical Alert – at least one temperature sensor is in critical alert state.
fans_state (can be abbreviated to fs)	Shows the current state of the fan tachometers in the shelf: Normal – all fan tachometer sensors show normal operating speed. Minor Alert – at least one fan tachometer sensor is in minor alert state. None of the sensors is in major or critical alert state. Major Alert – at least one fan tachometer sensor is in major alert state. None of the sensors is in critical alert state. Critical Alert – at least one fan tachometer sensor is in critical alert state. In addition, a message is printed if any of the fan trays listed in the Address Table are not operational (missing or deactivated).
address_table (can be abbreviated to at)	Shows the Address Table record in the Shelf FRU Info. The following information is provided: Shelf Address (shown according to its type) List of address table entries, showing Hardware Address, Site Type, and Site Number for each of them.
power_distribution (can be abbreviated to pd)	The following information is provided for each of the power feeds (mostly from the Shelf Power Distribution record of the Shelf FRU Information): Maximum External Available Current Maximum Internal Current Minimum Expected Operating Voltage Actual Power Available Currently Used Power List of FRUs connected to the feed, showing Hardware Address and FRU Device ID for each of them

PARAMETER NAME	DESCRIPTION
power_management (can be abbreviated to pm)	The Shelf Power Management record in the Shelf FRU Info. This record contains a list of FRU Power Descriptors. For each descriptor the following information is provided: Hardware Address FRU Device ID Maximum FRU Power Capability Shelf Manager Controlled Activation Delay Before Next Power On
pci_connectivity (can be abbreviated to pcic)	The Shelf PCI Connectivity record in the Shelf FRU Info. The following information is provided: PCI Slot Descriptor IDSEL Connection Segment ID Extended PCI Slot Descriptor Geographic Address Interface Number System Slot Capable
ha_connectivity (can be abbreviated to ha)	The Shelf HAConnectivity record in the Shelf FRU Info. The following information is provided: Radial Connectivity Support
h110_connectivity (can be abbreviated to h110c)	The Shelf H110 Connectivity record in the Shelf FRU Info. The following information is provided: Geographic Address Segment ID
point-to-point_connectivity (can be abbreviated to ppc)	The Shelf Point-to-Point Connectivity record in the Shelf FRU Info. The following information is provided: Channel Type Channel Count Slot/ Hw Address Channel Descriptor

For the subcommands **cooling_state**, **fans_state**, and **power_management**, the verbosity option **-v** is available. It should be entered before the subcommand: **clia shelf -v cooling_state**. In verbose mode, the subcommands **cooling_state** or **fans_state** will display the list of sensors (temperature or fan tachometers) that contribute to the current state. Each sensor is shown as a tuple (IPMB-address, sensor_number). The verbose variant of the **power_management** subcommand displays the amount of power currently assigned to each of the FRUs covered by FRU Power Descriptors in the Shelf FRU Info.

3.58.3.3 Examples

Get shelf cooling status.

```
# clia shelf cooling_state
```

Pigeon Point Shelf Manager Command Line Interpreter

#

```
# clia shelf -v fans_state
```

```
Fans state: "Major Alert"
Sensor(s) at this state: (0x7e,10) (0x7e,11) (0x7e,12) (0x7e,13)
                        (0x7e,14) (0x7e,15) (0x7e,16) (0x7e,17)
1 fan tray(s) (out of 3) are not operational
```

#

```
# clia shelf address_table
```

```
Hw Addr: 41, Site # 1, Type: "AdvancedTCA Board" 00
Hw Addr: 42, Site # 2, Type: "AdvancedTCA Board" 00
Hw Addr: 43, Site # 3, Type: "AdvancedTCA Board" 00
Hw Addr: 44, Site # 4, Type: "AdvancedTCA Board" 00
Hw Addr: 45, Site # 5, Type: "AdvancedTCA Board" 00
Hw Addr: 46, Site # 6, Type: "AdvancedTCA Board" 00
Hw Addr: 47, Site # 7, Type: "AdvancedTCA Board" 00
Hw Addr: 48, Site # 8, Type: "AdvancedTCA Board" 00
Hw Addr: 49, Site # 9, Type: "AdvancedTCA Board" 00
Hw Addr: 4a, Site # 10, Type: "AdvancedTCA Board" 00
Hw Addr: 4b, Site # 11, Type: "AdvancedTCA Board" 00
Hw Addr: 4c, Site # 12, Type: "AdvancedTCA Board" 00
Hw Addr: 4d, Site # 13, Type: "AdvancedTCA Board" 00
Hw Addr: 4e, Site # 14, Type: "AdvancedTCA Board" 00
Hw Addr: 4f, Site # 15, Type: "AdvancedTCA Board" 00
Hw Addr: 50, Site # 16, Type: "AdvancedTCA Board" 00
```

#

```
# clia shelf power_distribution
```

April 30, 2008


```

FRU Addr: 41, FRU ID: fe
FRU Addr: 42, FRU ID: fe
FRU Addr: 43, FRU ID: fe
FRU Addr: 44, FRU ID: fe
FRU Addr: 45, FRU ID: fe
FRU Addr: 46, FRU ID: fe
FRU Addr: 47, FRU ID: fe
FRU Addr: 48, FRU ID: fe
FRU Addr: 49, FRU ID: fe
FRU Addr: 4a, FRU ID: fe
FRU Addr: 4b, FRU ID: fe
FRU Addr: 4c, FRU ID: fe
FRU Addr: 4d, FRU ID: fe
FRU Addr: 4e, FRU ID: fe
FRU Addr: 4f, FRU ID: fe
FRU Addr: 50, FRU ID: fe

```

#

Get power management information.

clia shelf -v pm

Pigeon Point Shelf Manager Command Line Interpreter

PICMG Shelf Activation And Power Management Record (ID=0x12)

Version = 0

Allowance for FRU Activation Readiness: 10 seconds

FRU Activation and Power Description Count: 16

Hw Address: 41, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
Watts

Shelf Manager Controlled Activation: Enabled

Delay Before Next Power On: 0.0 seconds

Currently Assigned Power: 70 Watts

Hw Address: 42, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
Watts

Shelf Manager Controlled Activation: Enabled

Delay Before Next Power On: 0.0 seconds

Currently Assigned Power: 0 Watts

Hw Address: 43, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
Watts

Shelf Manager Controlled Activation: Enabled

Delay Before Next Power On: 0.0 seconds

Currently Assigned Power: 0 Watts

Hw Address: 44, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
Watts

Shelf Manager Controlled Activation: Enabled

Delay Before Next Power On: 0.0 seconds

Currently Assigned Power: 0 Watts

Hw Address: 45, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
Watts

Shelf Manager Controlled Activation: Enabled

Delay Before Next Power On: 0.0 seconds

Currently Assigned Power: 0 Watts

Hw Address: 46, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds
Currently Assigned Power: 0 Watts

Hw Address: 47, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds
Currently Assigned Power: 0 Watts

Hw Address: 48, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds
Currently Assigned Power: 0 Watts

Hw Address: 49, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds
Currently Assigned Power: 0 Watts

Hw Address: 4a, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds
Currently Assigned Power: 0 Watts

Hw Address: 4b, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds
Currently Assigned Power: 0 Watts

Hw Address: 4c, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds
Currently Assigned Power: 0 Watts

Hw Address: 4d, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds
Currently Assigned Power: 0 Watts

Hw Address: 4e, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds
Currently Assigned Power: 0 Watts

Hw Address: 4f, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds
 Currently Assigned Power: 0 Watts

Hw Address: 50, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds
 Currently Assigned Power: 20 Watts

#

3.58.4 *Modifying Maximum External Available Current*

3.58.4.1 Syntax

shelf maxcurrent [<feed>] <current>

3.58.4.2 Purpose

This command sets the Maximum External Available Current for the specified feed number and updates all known instances of Shelf FRU Info in the shelf. If the <feed> parameter is omitted, the value is set for the first feed (feed 0) in the Shelf FRU Info.

The parameter <feed> is a 0-based feed number in the Shelf FRU Info based on the sequential order of the descriptor for that feed.

The parameter <current> is the desired current value in Amps.

3.58.4.3 Examples

Changing the Maximum Available External Current for Feed 0 from -40.5 to -59.

```
# clia shelf pd
```

Pigeon Point Shelf Manager Command Line Interpreter

```
PICMG Shelf Power Distribution Record (ID=0x11)
  Version = 0
  Feed count: 1
  Feed 00:
    Maximum External Available Current: 50.0 Amps
    Maximum Internal Current: Not specified
    Minimum Expected Operating Voltage: -40.5 Volts
    Actual Power Available: 2025.000 Watts
    Currently Used Power: 200.000 Watts
    Feed-to-FRU Mapping entries count: 16
      FRU Addr: 41, FRU ID: 0xfe
      FRU Addr: 42, FRU ID: 0xfe
      FRU Addr: 43, FRU ID: 0xfe
      FRU Addr: 44, FRU ID: 0xfe
      FRU Addr: 45, FRU ID: 0xfe
      FRU Addr: 46, FRU ID: 0xfe
```

```
FRU Addr: 47, FRU ID: 0xfe
FRU Addr: 48, FRU ID: 0xfe
FRU Addr: 49, FRU ID: 0xfe
FRU Addr: 4a, FRU ID: 0xfe
FRU Addr: 4b, FRU ID: 0xfe
FRU Addr: 4c, FRU ID: 0xfe
FRU Addr: 4d, FRU ID: 0xfe
FRU Addr: 4e, FRU ID: 0xfe
FRU Addr: 4f, FRU ID: 0xfe
FRU Addr: 50, FRU ID: 0xfe
```

clia shelf maxcurrent 0 99

Pigeon Point Shelf Manager Command Line Interpreter

Updating Shelf FRU Info

Cached information updated

clia shelf pd

Pigeon Point Shelf Manager Command Line Interpreter

PICMG Shelf Power Distribution Record (ID=0x11)

Version = 0

Feed count: 1

Feed 00:

Maximum External Available Current: 99.0 Amps

Maximum Internal Current: Not specified

Minimum Expected Operating Voltage: -40.5 Volts

Actual Power Available: 2025.000 Watts

Currently Used Power: 200.000 Watts

Feed-to-FRU Mapping entries count: 16

```
FRU Addr: 41, FRU ID: 0xfe
FRU Addr: 42, FRU ID: 0xfe
FRU Addr: 43, FRU ID: 0xfe
FRU Addr: 44, FRU ID: 0xfe
FRU Addr: 45, FRU ID: 0xfe
FRU Addr: 46, FRU ID: 0xfe
FRU Addr: 47, FRU ID: 0xfe
FRU Addr: 48, FRU ID: 0xfe
FRU Addr: 49, FRU ID: 0xfe
FRU Addr: 4a, FRU ID: 0xfe
FRU Addr: 4b, FRU ID: 0xfe
FRU Addr: 4c, FRU ID: 0xfe
FRU Addr: 4d, FRU ID: 0xfe
FRU Addr: 4e, FRU ID: 0xfe
FRU Addr: 4f, FRU ID: 0xfe
FRU Addr: 50, FRU ID: 0xfe
```

#

3.58.5 *Modifying Minimum Expected Operating Voltage*

3.58.5.1 Syntax

shelf minvoltage [<feed>] <voltage>

3.58.5.2 Purpose

This command sets the Minimum Expected Operating Voltage for the specified feed number and updates all known Shelf FRU Info instances in the shelf. If the <feed> parameter is omitted, the value is set for the first feed (feed 0) in the Shelf FRU Info.

The parameter <feed> is a 0-based feed number in the Shelf FRU Info based on the sequential order of the description of that feed.

The parameter <voltage> is the desired value.

3.58.5.3 Examples

Changing the Minimum Expected Operating Voltage for the Feed 0 -40.5 to -59

```
# clia shelf pd
```

Pigeon Point Shelf Manager Command Line Interpreter

```
PICMG Shelf Power Distribution Record (ID=0x11)
  Version = 0
  Feed count: 1
  Feed 00:
    Maximum External Available Current: 99.0 Amps
    Maximum Internal Current: Not specified
    Minimum Expected Operating Voltage: -40.5 Volts
    Actual Power Available: 2025.000 Watts
    Currently Used Power: 200.000 Watts
    Feed-to-FRU Mapping entries count: 16
      FRU Addr: 41, FRU ID: 0xfe
      FRU Addr: 42, FRU ID: 0xfe
      FRU Addr: 43, FRU ID: 0xfe
      FRU Addr: 44, FRU ID: 0xfe
      FRU Addr: 45, FRU ID: 0xfe
      FRU Addr: 46, FRU ID: 0xfe
      FRU Addr: 47, FRU ID: 0xfe
      FRU Addr: 48, FRU ID: 0xfe
      FRU Addr: 49, FRU ID: 0xfe
      FRU Addr: 4a, FRU ID: 0xfe
      FRU Addr: 4b, FRU ID: 0xfe
      FRU Addr: 4c, FRU ID: 0xfe
      FRU Addr: 4d, FRU ID: 0xfe
      FRU Addr: 4e, FRU ID: 0xfe
      FRU Addr: 4f, FRU ID: 0xfe
      FRU Addr: 50, FRU ID: 0xfe
```

```
#
```

```
# clia shelf minvoltage 0 -59
```

Pigeon Point Shelf Manager Command Line Interpreter

Updating Shelf FRU Info

Cached information updated

#

clia shelf pd

Pigeon Point Shelf Manager Command Line Interpreter

PICMG Shelf Power Distribution Record (ID=0x11)

Version = 0

Feed count: 1

Feed 00:

Maximum External Available Current: 99.0 Amps

Maximum Internal Current: Not specified

Minimum Expected Operating Voltage: -59.0 Volts

Actual Power Available: 2025.000 Watts

Currently Used Power: 200.000 Watts

Feed-to-FRU Mapping entries count: 16

FRU Addr: 41, FRU ID: 0xfe

FRU Addr: 42, FRU ID: 0xfe

FRU Addr: 43, FRU ID: 0xfe

FRU Addr: 44, FRU ID: 0xfe

FRU Addr: 45, FRU ID: 0xfe

FRU Addr: 46, FRU ID: 0xfe

FRU Addr: 47, FRU ID: 0xfe

FRU Addr: 48, FRU ID: 0xfe

FRU Addr: 49, FRU ID: 0xfe

FRU Addr: 4a, FRU ID: 0xfe

FRU Addr: 4b, FRU ID: 0xfe

FRU Addr: 4c, FRU ID: 0xfe

FRU Addr: 4d, FRU ID: 0xfe

FRU Addr: 4e, FRU ID: 0xfe

FRU Addr: 4f, FRU ID: 0xfe

FRU Addr: 50, FRU ID: 0xfe

#

3.58.6 *Modifying Shelf Manager Controlled Activation Flag*

3.58.6.1 Syntax

shelf activation <hardware addr> <fru_id> [1|0]

shelf activation board <N> [1|0]

shelf activation board all [1|0]

shelf activation power_supply <N> [1|0]

shelf activation pem <N> [1|0]

shelf activation fan_tray <N> [1|0]

3.58.6.2 Purpose

These variants of the **shelf** command display or change the Shelf Manager Controlled Activation field for the specified FRU of the specified IPM controller. The command modifies the Shelf Manager Controlled Activation flag only for already existing entries in the Shelf Activation and Power Management record. This command also updates the cached version of the Shelf FRU Information used by the Shelf Manager. Thus, the new value of the Shelf Manager Controlled Activation field becomes effective immediately without the need to restart the Shelf Manager.

The parameter **<hardware addr>** is the 7-bit hardware address in hexadecimal format. The parameter **<fru_id>** is a FRU ID in hexadecimal format; 0xFE means all FRUs at that hardware address. The final parameter enables (when the value is **1**) or disables (when the value is **0**) Shelf Manager Controlled Activation for the specified FRU of the specified IPM controller.

3.58.6.3 Examples

Enabling Shelf Manager Controlled Activation on an IPM Controller with hardware address 42h (IPMB address 84h).

```
# clia shelf pm
```

Pigeon Point Shelf Manager Command Line Interpreter

```
PICMG Shelf Activation And Power Management Record (ID=0x12)
  Version = 0
  Allowance for FRU Activation Readiness: 10 seconds
  FRU Activation and Power Description Count: 16
  Hw Address: 41, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
Watts
  Shelf Manager Controlled Activation: Enabled
  Delay Before Next Power On: 0.0 seconds

  Hw Address: 42, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
Watts
  Shelf Manager Controlled Activation: Enabled
  Delay Before Next Power On: 0.0 seconds

  Hw Address: 43, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
Watts
  Shelf Manager Controlled Activation: Enabled
  Delay Before Next Power On: 0.0 seconds

  Hw Address: 44, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
Watts
  Shelf Manager Controlled Activation: Enabled
  Delay Before Next Power On: 0.0 seconds

  Hw Address: 45, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
Watts
  Shelf Manager Controlled Activation: Enabled
  Delay Before Next Power On: 0.0 seconds
```

Hw Address: 46, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 47, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 48, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 49, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 4a, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 4b, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 4c, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 4d, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 4e, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 4f, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 50, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

#

clia shelf activation 42 0xfe 0

Pigeon Point Shelf Manager Command Line Interpreter

Updating Shelf FRU Info, address: 0x42, FRU ID # 254
 Cached information updated
 Wrote Information to the Shelf FRU

#

clia shelf pm

Pigeon Point Shelf Manager Command Line Interpreter

PICMG Shelf Activation And Power Management Record (ID=0x12)
 Version = 0
 Allowance for FRU Activation Readiness: 10 seconds
 FRU Activation and Power Description Count: 16
 Hw Address: 41, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150

Watts

Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 42, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts

Shelf Manager Controlled Activation: Disabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 43, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts

Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 44, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts

Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 45, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts

Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 46, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts

Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 47, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts

Shelf Manager Controlled Activation: Enabled
 Delay Before Next Power On: 0.0 seconds

Hw Address: 48, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150
 Watts

Shelf Manager Controlled Activation: Enabled

Delay Before Next Power On: 0.0 seconds

Hw Address: 49, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 4a, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 4b, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 4c, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 4d, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 4e, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 4f, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

Hw Address: 50, FRU ID: 0xfe, Maximum FRU Power Capabilities: 150 Watts

Shelf Manager Controlled Activation: Enabled
Delay Before Next Power On: 0.0 seconds

#

3.58.7 *Modifying Shelf Manager Controlled Deactivation Flag*

3.58.7.1 Syntax

```
shelf deactivation <hardware addr> <fru_id> [1|0]
shelf deactivation board <N> [1|0]
shelf deactivation board all [1|0]
shelf deactivation power_supply <N> [1|0]
shelf deactivation pem <N> [1|0]
shelf deactivation fan_tray <N> [1|0]
```

3.58.7.2 Purpose

These variants of the **shelf** command display or change the Shelf Manager Controlled Deactivation field for the specified FRU of the specified IPM controller. The command modifies the Shelf Manager Controlled Deactivation flag only for already existing entries in the Shelf Deactivation and Power Management record. This command also updates the cached version of the Shelf FRU Information used by the Shelf Manager. Thus, the new value of the Shelf Manager Controlled Deactivation field becomes effective immediately without the need to restart the Shelf Manager.

The parameter **<hardware addr>** is the 7-bit hardware address in hexadecimal format. The parameter **<fru_id>** is a FRU ID in hexadecimal format; 0xFE means all FRUs at that hardware address. The final parameter enables (when the value is 0) or disables (when the value is 1) Shelf Manager Controlled Deactivation for the specified FRU of the specified IPM controller. Note the unusual use of a zero parameter value to enable a function; this is the approach used in the ATCA specification for this function. The approach is preserved here for consistency.

3.58.7.3 Examples

Enabling Shelf Manager Controlled Deactivation on an IPM Controller with hardware address 42h (IPMB address 84h).

```
# clia shelf pm
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Power Management:
Allowance for FRU Activation Readiness: 10 seconds
FRU Activation and Power Description Count: 2s
Hw Address: 41, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
    Shelf Manager Controlled Auto-Activation: Disabled
    Shelf Manager Controlled Auto-Deactivation: Enabled
    Delay Before Next Power On: 2.2 seconds

Hw Address: 42, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
    Shelf Manager Controlled Auto-Activation: Disabled
    Shelf Manager Controlled Auto-Deactivation: Disabled
    Delay Before Next Power On: 2.2 seconds
```

```
#
```

```
# clia shelf deactivation 42 0xfe 0
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Updating Shelf FRU Info
Cached information updated
```

```
#
```

```
# clia shelf pm
```

Pigeon Point Shelf Manager Command Line Interpreter

```

Power Management:
Allowance for FRU Activation Readiness: 10 seconds
FRU Activation and Power Description Count: 2
Hw Address: 41, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
    Shelf Manager Controlled Auto-Activation: Disabled
    Shelf Manager Controlled Auto-Deactivation: Enabled
Delay Before Next Power On: 2.2 seconds

Hw Address: 42, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
    Shelf Manager Controlled Auto-Activation: Disabled
    Shelf Manager Controlled Auto-Deactivation: Enabled
    Delay Before Next Power On: 2.2 seconds

#

```

3.58.8 *Modifying Shelf Manager BDSelGrounded Flag*

3.58.8.1 Syntax

```

shelf bdselgrounded <slot number>[1|0]
shelf bdselgrounded board <N> [1|0]
shelf bdselgrounded board all [1|0]

```

3.58.8.2 Purpose

These variants of the **shelf** command allow specifying whether the BD_SEL# signal is grounded for a slot. Some shelves may have BD_SEL# lines grounded for some slots, while operational for other slots. If BD_SEL# line is grounded, it is not possible for the Shelf Manager to discover if a board is present in the slot or turn on/off power for this slot. In the case of a grounded BD_SEL# line, the Shelf Manager uses a different control algorithm for the slot; thus it is important to have this information.

The BD SEL# Grounded flags for slots are stored in Shelf FRU Information in the HA Connectivity record. The command modifies this flag only for already existing entries in that record. This command also updates the cached version of the Shelf FRU Information used by the Shelf Manager.

The parameter **<slot number>** is the ordinary number that may be specified in either decimal or hexadecimal form.

3.58.8.3 Examples

Configuring normal BD SEL# signal operation for slot 2.

```
# clia shelf bdselgrounded board all
```

Pigeon Point Shelf Manager Command Line Interpreter

```

Slot # 1, "Normal BD_SEL# operation"
Slot # 2, "BD_SEL# is grounded for this slot by hardware"
Slot # 3, "Normal BD_SEL# operation"
Slot # 4, "Normal BD_SEL# operation"
Slot # 5, "Normal BD_SEL# operation"
Slot # 6, "BD_SEL# is grounded for this slot by hardware"
Slot # 7, "Normal BD_SEL# operation"
Slot # 8, "Normal BD_SEL# operation"
Slot # 9, "Normal BD_SEL# operation"
Slot # 10, "Normal BD_SEL# operation"
Slot # 11, "Normal BD_SEL# operation"
Slot # 12, "Normal BD_SEL# operation"
Slot # 13, "Normal BD_SEL# operation"
Slot # 14, "Normal BD_SEL# operation"
Slot # 15, "Normal BD_SEL# operation"
Slot # 16, "BD_SEL# is grounded for this slot by hardware"
Slot # 17, "Normal BD_SEL# operation"
Slot # 18, "Normal BD_SEL# operation"
Slot # 19, "Normal BD_SEL# operation"
Slot # 20, "Normal BD_SEL# operation"
Slot # 21, "BD_SEL# is grounded for this slot by hardware"

```

#

clia shelf bdselgrounded b 2 0

Pigeon Point Shelf Manager Command Line Interpreter

```

Updating Shelf FRU Info, slot # 2
Wrote Information to the Shelf FRU

```

#

clia shelf bdselgrounded board all

Pigeon Point Shelf Manager Command Line Interpreter

```

Slot # 1, "Normal BD_SEL# operation"
Slot # 2, "Normal BD_SEL# operation"
Slot # 3, "Normal BD_SEL# operation"
Slot # 4, "Normal BD_SEL# operation"
Slot # 5, "Normal BD_SEL# operation"
Slot # 6, "BD_SEL# is grounded for this slot by hardware"
Slot # 7, "Normal BD_SEL# operation"
Slot # 8, "Normal BD_SEL# operation"
Slot # 9, "Normal BD_SEL# operation"
Slot # 10, "Normal BD_SEL# operation"
Slot # 11, "Normal BD_SEL# operation"
Slot # 12, "Normal BD_SEL# operation"
Slot # 13, "Normal BD_SEL# operation"
Slot # 14, "Normal BD_SEL# operation"
Slot # 15, "Normal BD_SEL# operation"
Slot # 16, "BD_SEL# is grounded for this slot by hardware"
Slot # 17, "Normal BD_SEL# operation"
Slot # 18, "Normal BD_SEL# operation"
Slot # 19, "Normal BD_SEL# operation"

```

```
Slot # 20, "Normal BD_SEL# operation"
Slot # 21, "BD_SEL# is grounded for this slot by hardware"
```

```
#
```

3.58.9 *Modifying Maximum FRU Power Capability*

3.58.9.1 Syntax

```
shelf pwrcapability <hardware addr> <fru_id> <value>
shelf pwrcapability shm <N> <value>
shelf pwrcapability board <N> <value>
shelf pwrcapability power_supply <N> <value>
shelf pwrcapability pem <N> <value>
shelf pwrcapability fan_tray <N> <value>
```

3.58.9.2 Purpose

These variants of the **shelf** command change the Maximum FRU Power Capability field for the specified FRU of the specified IPM controller.

Note: Never set the Maximum FRU Power Capability field to a larger value than is safe for your shelf environment.

The command modifies this field only for already existing entries in the Shelf Activation and Power Management record. This command also updates the cached version of the Shelf FRU Information used by the Shelf Manager. Thus, the new value of the Maximum FRU Power Capability field becomes effective immediately without the need to restart the Shelf Manager.

The parameter **<hardware addr>** is a 7-bit hardware address in hexadecimal format.

The parameter **<fru_id>** is a FRU ID in hexadecimal format; 0xFE means all FRUs at that hardware address.

The parameter **<value>** is the new value for the field in Watts. The range of the possible values is 0..65535.

3.58.9.3 Examples

Setting Maximum FRU Power Capability on an IPM Controller with hardware address 42h (IPMB address 84h) to 150 Watts.

```
# clia shelf pm
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Power Management:
```

```
Allowance for FRU Activation Readiness: 10 seconds
```

```
FRU Activation and Power Description Count: 2
```

```
Hw Address: 41, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
```

```

    Shelf Manager Controlled Activation: Disabled
    Delay Before Next Power On: 2.2 seconds

    Hw Address: 42, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
    Shelf Manager Controlled Activation: Disabled
    Delay Before Next Power On: 2.2 seconds

#

# clia shelf pwrcapability 42 0xfe 150

Pigeon Point Shelf Manager Command Line Interpreter

    Updating Shelf FRU Info
    Cached information updated

#

# clia shelf pm

Pigeon Point Shelf Manager Command Line Interpreter

    Power Management:
    Allowance for FRU Activation Readiness: 10 seconds
    FRU Activation and Power Description Count: 2
    Hw Address: 41, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
    Shelf Manager Controlled Activation: Disabled
    Delay Before Next Power On: 2.2 seconds

    Hw Address: 42, FRU ID: fe, Maximum FRU Power Capabilities: 150
Watts
    Shelf Manager Controlled Activation: Disabled
    Delay Before Next Power On: 2.2 seconds

#

```

3.58.10 *Modifying Delay Before Next Power On*

3.58.10.1 Syntax

```

shelf pwrdelay <hardware addr> <fru_id> <value>
shelf pwrdelay shm <N> <value>
shelf pwrdelay board <N> <value>
shelf pwrdelay power_supply <N> <value>
shelf pwrdelay pem <N> <value>
shelf pwrdelay fan_tray <N> <value>

```

3.58.10.2 Purpose

These variants of the **shelf** command change the Delay Before Next Power On field for the specified FRU of the specified IPM controller. The command modifies this field only for already existing entries in the Shelf Activation and Power Management record. This command also updates the cached version of the Shelf FRU Information used by the Shelf Manager. Thus the

new value of the Delay Before Next Power On field becomes effective immediately without the need to restart the Shelf Manager.

The parameter **<hardware addr>** is a 7-bit hardware address in hexadecimal format.

The parameter **<fru_id>** is a FRU ID in hexadecimal format; 0xFE means ALL FRUs at that hardware address.

The parameter **<value>** is the new value for the field in tenths of a second. The range of the possible values is 0..63.

3.58.10.3 Examples

Setting Delay Before Next Power On for an IPM Controller with hardware address 42h (IPMB address 84h) to 5 seconds.

```
# clia shelf pm
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Power Management:
Allowance for FRU Activation Readiness: 10 seconds
FRU Activation and Power Description Count: 2
Hw Address: 41, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
    Shelf Manager Controlled Activation: Disabled
    Delay Before Next Power On: 2.2 seconds

Hw Address: 42, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
    Shelf Manager Controlled Activation: Disabled
    Delay Before Next Power On: 2.2 seconds
```

```
#
```

```
# clia shelf pwrdelay 42 0xfe 50
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Updating Shelf FRU Info
Cached information updated
```

```
#
```

```
# clia shelf pm
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Power Management:
Allowance for FRU Activation Readiness: 10 seconds
FRU Activation and Power Description Count: 2
Hw Address: 41, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
    Shelf Manager Controlled Activation: Disabled
```



```
Delay Before Next Power On: 2.2 seconds
```

```
Hw Address: 42, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
```

```
Shelf Manager Controlled Activation: Disabled
Delay Before Next Power On: 5.0 seconds
```

```
#
```

3.58.11 *Modifying Allowance for FRU Activation Readiness*

3.58.11.1 Syntax

```
shelf allowance <value>
```

3.58.11.2 Purpose

This variant of the **shelf** command changes the Allowance for FRU Activation Readiness parameter.

The parameter **<value>** is the new value for the parameter in seconds.

The range of the possible values is 0..255.

3.58.11.3 Examples

Setting Allowance for FRU Activation Readiness to 5 seconds.

```
# clia shelf pm
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Power Management:
Allowance for FRU Activation Readiness: 10 seconds
FRU Activation and Power Description Count: 2
Hw Address: 41, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
```

```
Shelf Manager Controlled Activation: Disabled
Delay Before Next Power On: 2.2 seconds
```

```
Hw Address: 42, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
```

```
Shelf Manager Controlled Activation: Disabled
Delay Before Next Power On: 2.2 seconds
```

```
#
```

```
# clia shelf allowance 5
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Updating Shelf FRU Info
```

#

clia shelf pm

Pigeon Point Shelf Manager Command Line Interpreter

Power Management:

Allowance for FRU Activation Readiness: 5 seconds

FRU Activation and Power Description Count: 2

Hw Address: 41, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts

Shelf Manager Controlled Activation: Disabled

Delay Before Next Power On: 2.2 seconds

Hw Address: 42, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts

Shelf Manager Controlled Activation: Disabled

Delay Before Next Power On: 2.2 seconds

#

3.58.12 *Reorder the FRU Activation and Power Descriptors*

3.58.12.1 Syntax

shelf pwrreorder <hardware addr 1> <fru_id 1> before/after
<hardware addr 2> <fru id 2>

As usual, <hardware addr x> <fru_id x> can be replaced with any the following alternatives:

shm <N>**board** <N>**power_supply** <N>**pem** <N>**fan_tray** <N>

3.58.12.2 Purpose

This variant of the **shelf** command changes the order of the FRU Activation and Power Descriptors in the Shelf FRU Information. The command can reorder only the already existing descriptors. The current implementation is also limited to reordering the descriptors only inside a single Shelf Activation and Power Management record. This command also updates the cached version of the Shelf FRU Information used by the Shelf Manager. Thus, the new order of the descriptors becomes effective immediately without the need to restart the Shelf Manager.

The parameter <**hardware addr 1**> is a 7-bit hardware address in hexadecimal format of the descriptor that needs to be moved to a new place.

The parameter **<fru_id 1>** is a FRU ID in hexadecimal format of the descriptor that needs to be moved to a new place; 0xFE means all FRUs at that hardware address.

The parameter **<hardware_addr 2>** is the 7-bit hardware address in hexadecimal format of the descriptor, before or after which the **<hardware_addr 1>** **<fru_id 1>** descriptor should be placed.

The parameter **<fru_id 2>** is a FRU ID in hexadecimal format of the descriptor, before or after which the **<hardware_addr 1>** **<fru_id 1>** descriptor should be placed.

3.58.12.3 Examples

Placing the descriptor for an IPM Controller with hardware address 42h (IPMB address 84h) before the descriptor for an IPM Controller with hardware address 41h (IPMB address 82h).

```
# clia shelf pm
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Power Management:
```

```
Allowance for FRU Activation Readiness: 10 seconds
```

```
FRU Activation and Power Description Count: 2
```

```
Hw Address: 41, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
```

```
Shelf Manager Controlled Activation: Disabled
```

```
Delay Before Next Power On: 2.2 seconds
```

```
Hw Address: 42, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
```

```
Shelf Manager Controlled Activation: Disabled
```

```
Delay Before Next Power On: 2.2 seconds
```

```
#
```

```
# clia shelf pwrreorder 42 0xfe before 41 0xfe
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Updating Shelf FRU Info
```

```
Cached information updated
```

```
#
```

```
# clia shelf pm
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Power Management:
```

```
Allowance for FRU Activation Readiness: 10 seconds
```

```
FRU Activation and Power Description Count: 2
```

```
Hw Address: 42, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
```

```
Shelf Manager Controlled Activation: Disabled
```

```
Delay Before Next Power On: 2.2 seconds
```

```
Hw Address: 41, FRU ID: fe, Maximum FRU Power Capabilities: 200
Watts
```

```
Shelf Manager Controlled Activation: Disabled
Delay Before Next Power On: 2.2 seconds
```

```
#
```

3.58.13 Refresh the Shelf FRU Info

3.58.13.1 Syntax

```
shelf info_refresh
```

3.58.13.2 Purpose

This command causes the Shelf Manager to re-read the previously found sources of Shelf FRU Information in the shelf and reassess which of the sources contain valid Shelf FRU Information. Assuming that valid Shelf FRU Information is confirmed, all of the Shelf FRU Information storage devices and the cached master copy of the Shelf FRU Information are updated with the contents of the new Shelf FRU Information.

As specified by PICMG 3.0, the Shelf Manager tries to find possible Shelf FRU Information storage devices during initialization. If the Shelf Manager finds at least two FRU Information devices that contain valid Shelf FRU Information, the Shelf Manager performs an "election" to determine which Shelf FRU Information sources to use.

This election is based on validating the data the storage devices contain and comparing the contents. After a successful election, the Shelf Manager creates a cached master copy of the Shelf FRU Info (in volatile memory) which is used for any updating of Shelf FRU Info sources and is treated as the sole source of the Shelf FRU information. Thus, all Shelf FRU Info related operations work with the master copy and changes of the master copy are automatically propagated to all Shelf FRU Info source devices as incremental updates.

However, dynamic reconfiguration is not supported. If the new Shelf FRU Information is different from the previous Shelf FRU Information, the changes will become fully effective only after the reboot of the Shelf Manager.

3.58.13.3 Examples

Successful refresh: two matching sources of the Shelf FRU Info.

```
# clia shelf info_refresh
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Read 0x20 # 2, size = 1024
```

```
Read 0x20 # 1, size = 1024
```

```
Found 2 Matching Shelf FRU Info
```

```
0x20 # 2, size = 1024 (data size = 775), "Valid" Shelf FRU, "Matching"
```

```
0x20 # 1, size = 1024 (data size = 775), "Valid" Shelf FRU, "Matching"  
Shelf FRU Info was not changed
```

```
#
```

Unsuccessful refresh: both data sources contain non-matching or invalid data.

```
# clia shelf info_refresh
```

Pigeon Point Shelf Manager Command Line Interpreter

```
Read 0x20 # 2, size = 1024  
Read 0x20 # 1, size = 1024  
No Matching Shelf FRU Info found
```

```
0x20 # 2, size = 1024 (data size = 293), "Invalid" Shelf FRU, "Non-  
Matching"  
0x20 # 1, size = 1024 (data size = 529), "Valid" Shelf FRU, "Non-  
Matching"  
Refresh was not done because system found only 1 (of 2) Matching Shelf  
FRU info
```

```
#
```

3.58.14 *Updating the Shelf FRU Info Storage Devices*

3.58.14.1 Syntax

```
shelf info_force_update
```

3.58.14.2 Purpose

This command causes a check of the Shelf FRU Info source devices and copying the contents of the Shelf FRU Info master copy to all of them. This command is useful in the case of a conflict between the Shelf FRU Info master copy and the non-volatile source devices, where the conflict is not resolved automatically (for example both EEPROMs and the master copy are different from each other).

In that case, the operator can forcibly synchronize the EEPROMs with the contents of the master copy, using this command. Also, this command clears the error condition that has occurred due to the original conflict; that is, after this command has been issued, subsequent updates to the Shelf FRU will resume being propagated to the SEEPROMs.

This command initiates an update of the Shelf FRU Info source devices in an asynchronous fashion.

3.58.14.3 Examples

```
# clia shelf info_force_update
```

Pigeon Point Shelf Manager Command Line Interpreter

Starting the Shelf FRU Info source device update

#

3.59 *shelfaddress*

3.59.1 *Syntax*

shelfaddress [<up to 20 characters of the shelf address>]
shelfaddress -x <byte1> ... <byteN>

3.59.2 *Purpose*

This command gets or sets the Shelf Address field of the Address Table within Shelf FRU Info. Without the option **-x**, the new shelf address is specified by a double quoted string that can contain any ASCII characters and can be as long as 20 characters.

If the option **-x** is specified, the new shelf address is specified as a sequence of hexadecimal bytes separated with spaces. Up to 20 bytes can be specified, each byte is represented with two hexadecimal digits (the "0x" prefix is optional).

The shelf address is stored with a type indicator that differentiates between text and binary data. If the shelf address is specified as text, it is stored as text. If the shelf address is specified in hexadecimal, it is stored as binary data.

When the shelf address is displayed using this command, it is printed as text or as a sequence of hexadecimal bytes, depending on the type indicator.

3.59.3 *Examples*

```
# clia shelfaddress
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Shelf Address Info: "1234"
```

```
#
```

```
# clia shelfaddress "NEW SHELF ADDRESS"
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Shelf Address Info set successfully
```

```
#
```

```
# clia shelfaddress
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Shelf Address Info: "NEW SHELF ADDRESS"
```

```
#
```

```
# clia shelfaddress -x 01 02 03 04 05
```

Pigeon Point Shelf Manager Command Line Interpreter

Shelf Address Info set successfully

#

clia shelfaddress

Pigeon Point Shelf Manager Command Line Interpreter

Shelf Address Info: " 0x01 0x02 0x03 0x04 0x05 "

#

3.60 *shmstatus*

3.60.1 *Syntax*

shmstatus

3.60.2 *Purpose*

This command returns the Shelf Manager status in redundant configurations: Active or Backup. In verbose mode it reports a more detailed picture: status of the Shelf FRU Info, status of the RMCP interface and state of the backup Shelf Manager (if the Shelf Manager being queried is the active one). The ready for operation flag is a parameter that shows as "Yes":

- on the active Shelf Manager if it finds valid Shelf FRU Info and successfully initializes its RMCP interface.
- on the backup Shelf Manager if it successfully received the redundancy state information from the active Shelf Manager.

3.60.3 *Examples*

```
# clia shmstatus -v
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
Shelf Manager status: "Active"
```

```
Ready For Operation: Yes
```

```
Detailed State Flags: "Shelf FRU Found" "RMCP Up" "Backup Healthy"
```

```
#
```

3.61 *showunhealthy*

3.61.1 *Syntax*

showunhealthy

3.61.2 *Purpose*

This command shows the list of FRUs that appear to have a problem. In the PICMG 3.0 context, this list includes FRUs for which the cause of last hot swap state change is “Communication Lost”, “Communication lost due to local failure”, “Unexpected deactivation”. In CompactPCI shelves, this command checks Board, Fan Tray and Power Supply healthy status bits as well.

For each FRU, the following information is shown: IPMB address and FRU device ID, Current Hot Swap state, previous hot swap state and cause of the last state change.

3.61.3 *Examples*

Show the list of unhealthy components in the system.

```
# clia showunhealthy
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
There are no unhealthy components in the shelf.
```

```
#
```

3.62 *switchover*

3.62.1 *Syntax*

switchover [-force]

3.62.2 *Purpose*

This command initiates switchover of the redundant Shelf Manager instances. This command can be executed on either the active or the backup instance of the Shelf Manager.

This command with the option **-force** can be executed only on the backup instance of the Shelf Manager and performs forced switchover. That is, the backup Shelf Manager immediately turns on the hardware Active bit and becomes active without any negotiations with the active Shelf Manager. The active Shelf Manager (if still alive) immediately reboots in that case.

3.62.3 *Examples*

Initiate the switchover from either the active or backup instance.

```
# clia switchover
```

```
    This Shelf Manager is now active, but is shutting down to trigger a  
    switchover.
```

```
#
```

3.63 *terminate*

3.63.1 *Syntax*

terminate [-reboot]

3.63.2 *Purpose*

This command terminates the Shelf Manager. Also, it causes the ShMM to unconditionally reboot if the option **-reboot** is specified.

If the option **-reboot** is omitted, this command terminates the Shelf Manager without rebooting the ShMM.

3.63.3 *Examples*

Terminate the Shelf Manager on ShMM-500 without rebooting the ShMM.

```
# clia terminate  
    Terminating the Shelf Manager.  
  
#
```

3.64 *user*

3.64.1 *Syntax*

user [**<subcommand>**]

The following subcommands are supported:

- **add**
- **delete**
- **enable**
- **name**
- **passwd**
- **channel**

3.64.2 *Purpose*

The **user** command shows information about the RMCP user accounts on the Shelf Manager and provides a simple way to add, delete and modify the user accounts.

The following subsections describe the syntax of the **user** command for different applications of this command.

3.64.3 *Displaying User Information*

3.64.3.1 *Syntax*

user [**-v**] [**<user id>**]

3.64.3.2 *Purpose*

This command shows information about users. When it is launched with a **-v** option, it also shows information about disabled users. (By default, only enabled users are listed.) If the optional User ID is specified, only information about the user with that ID is shown.

The following items of information are shown:

- user ID;
- user name;
- channel access information for each IPMI channel: the maximum privilege level of that user on that channel, and channel access flags

If the channel access information is the same for several channels, the output is coalesced and the range of channels is shown.

3.64.3.3 Examples

```
# clia user -v
```

Pigeon Point Shelf Manager Command Line Interpreter

```
1: ""
    Channels 0-15 Privilege level: "Administrator"
    Flags: "IPMI Messaging"
```

```
# clia user -v
```

Pigeon Point Shelf Manager Command Line Interpreter

```
1: ""
    Channels 0-15 Privilege level: "Administrator"
    Flags: "IPMI Messaging"

7: "TEST1" Disabled
    Channels 0-15 Privilege level: "NO ACCESS"
```

3.64.4 Adding a New User

3.64.4.1 Syntax

```
user add <user id> <user name> <channel access flags>
<privilege level> <password>
```

3.64.4.2 Purpose

This command adds a new user to the system. It sets the same maximum privilege level and channel access flags for all channels, as specified in the command. The command returns an error if the specified user does not exist. Command parameters have the following meaning:

<user id> - is a valid user ID;
<user name> - is a user name (which is truncated to the 16 characters without notice);
<channel access flags> - is the first byte of the SetUserInfo commands (only bits 4,5,6 are meaningful)
 bit 6 – IPMI messaging enabled,
 bit 5 – Link authentication enabled,
 bit 4 – Restricted to callback
<privilege level> - is the user privilege level
<password> - is a password (which is truncated to the 16 characters without notice)

3.64.4.3 Examples

Adding user 9 with the name “root”, administrator privilege level and password “PICMG guru”.

```
# clia user
```

Pigeon Point Shelf Manager Command Line Interpreter

```
1: ""
   Channels 0-15 Privilege level: "Administrator"
   Flags: "IPMI Messaging"

# clia user add 9 "root" 0x40 4 "PICMG guru"

Pigeon Point Shelf Manager Command Line Interpreter

   User 9 added successfully

# clia user

Pigeon Point Shelf Manager Command Line Interpreter

1: ""
   Channels 0-15 Privilege level: "Administrator"
   Flags: "IPMI Messaging"

9: "root"
   Channels 0-15 Privilege level: "Administrator"
   Flags: "IPMI Messaging"
```

3.64.5 *Deleting a User*

3.64.5.1 Syntax

user delete <user id>

3.64.5.2 Purpose

This command deletes the user specified by the **<user id>**.

3.64.5.3 Examples

Deleting the user with user ID = 10.

```
# clia user

Pigeon Point Shelf Manager Command Line Interpreter

1: ""
   Channels 0-15 Privilege level: "Administrator"
   Flags: "IPMI Messaging"

9: "root"
   Channels 0-15 Privilege level: "Administrator"
   Flags: "IPMI Messaging"

10: "root2"
   Channels 0-15 Privilege level: "Administrator"
   Flags: "IPMI Messaging"

# clia user delete 10

Pigeon Point Shelf Manager Command Line Interpreter
```

```
User 10 deleted successfully
```

```
# clia user
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
1: ""
    Channels 0-15 Privilege level: "Administrator"
    Flags: "IPMI Messaging"

9: "root"
    Channels 0-15 Privilege level: "Administrator"
    Flags: "IPMI Messaging"
```

3.64.6 *Enabling and Disabling a User*

3.64.6.1 Syntax

```
user enable <user id> 1 | 0
```

3.64.6.2 Purpose

This command enables or disables a user by user ID. The last command parameter specifies the requested action, as follows:

- **0** - disable the specified user
- **1** - enable the specified user

3.64.6.3 Examples

Disabling and enabling user with user ID 9.

```
# clia user
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```

```
1: ""
    Channels 0-15 Privilege level: "Administrator"
    Flags: "IPMI Messaging"

9: "root"
    Channels 0-15 Privilege level: "Administrator"
    Flags: "IPMI Messaging"
```

```
# clia user enable 9 0
```

```
Pigeon Point Shelf Manager Command Line Interpreter
User 9 disabled successfully
```

```
# clia user -v
```

```
Pigeon Point Shelf Manager Command Line Interpreter
```



```
1: ""
  Channels 0-15 Privilege level: "Administrator"
  Flags: "IPMI Messaging"

9: "root" Disabled
  Channels 0-15 Privilege level: "Administrator"
  Flags: "IPMI Messaging"

# clia user enable 9 1
```

Pigeon Point Shelf Manager Command Line Interpreter

User 9 enabled successfully

```
# clia user
```

Pigeon Point Shelf Manager Command Line Interpreter

```
1: ""
  Channels 0-15 Privilege level: "Administrator"
  Flags: "IPMI Messaging"

9: "root"
  Channels 0-15 Privilege level: "Administrator"
  Flags: "IPMI Messaging"
```

3.64.7 *Modifying a User Name*

3.64.7.1 Syntax

```
user name <user id> <user name>
```

3.64.7.2 Purpose

This command is used to modify the user name for the specified user. (The user is specified by a user ID.) The command parameters have the following meanings:

<user id>	- is a valid user ID ;
<user name>	- is a user name (which will be truncated to 16 characters without notice)

3.64.7.3 Examples

Changing the name of user 9 to “newby”.

```
# clia user
```

Pigeon Point Shelf Manager Command Line Interpreter

```
1: ""
  Channels 0-15 Privilege level: "Administrator"
  Flags: "IPMI Messaging"
```

```
9: "root"
  Channels 0-15 Privilege level: "Administrator"
  Flags: "IPMI Messaging"

# clia user name 9 newby

Pigeon Point Shelf Manager Command Line Interpreter

  User 9, name changed successfully

# clia user

Pigeon Point Shelf Manager Command Line Interpreter

1: ""
  Channels 0-15 Privilege level: "Administrator"
  Flags: "IPMI Messaging"

9: "newby"
  Channels 0-15 Privilege level: "Administrator"
  Flags: "IPMI Messaging"
```

3.64.8 *Modifying a User's Password*

3.64.8.1 Syntax

user passwd <user id> <password>

3.64.8.2 Purpose

This command is used to modify the password for the specified user. (The user is specified by the user ID.) The command parameters have the following meanings:

<user id> - is the valid user ID;
<password> - is the user password (which will be truncated to 16 characters without any notice)

3.64.8.3 Examples

Changing the password of user ID 9 to "RIP"

```
# clia user

Pigeon Point Shelf Manager Command Line Interpreter

1: ""
  Channels 0-15 Privilege level: "Administrator"
  Flags: "IPMI Messaging"

9: "newby"
  Channels 0-15 Privilege level: "Administrator"
  Flags: "IPMI Messaging"
```

```
# clia user passwd 9 RIP
```

Pigeon Point Shelf Manager Command Line Interpreter

User 9, password changed successfully

```
# clia user
```

Pigeon Point Shelf Manager Command Line Interpreter

```
1: ""
    Channels 0-15 Privilege level: "Administrator"
    Flags: "IPMI Messaging"

9: "newby"
    Channels 0-15 Privilege level: "Administrator"
    Flags: "IPMI Messaging"
```

3.64.9 *Modify Channel Access Settings*

3.64.9.1 Syntax

user channel <user id> <channel number> <flags> <privilege level>

3.64.9.2 Purpose

This command is used to modify the channel access setting for a specified channel and user. (The user is specified by the user ID.) The command parameters have the following meanings:

<user id>	- is the valid user ID;
<channel number>	- is the channel number;
<flags>	- is the first byte of the "Set User Info" commands (only bits 4,5,6 are meaningful) bit 6 – IPMI messaging enabled, bit 5 – Link authentication enabled, bit 4 – Restricted to callback
<privilege level>	- is the user privilege level

3.64.9.3 Examples

Changing the maximum privilege level for user 9 on channel 5 to "User"

```
# clia user 9
```

Pigeon Point Shelf Manager Command Line Interpreter

```
9: "newby"
    Channels 0-15 Privilege level: "Administrator"
    Flags: "IPMI Messaging"
```

```
# clia user channel 9 5 0x60 2
```

Pigeon Point Shelf Manager Command Line Interpreter

User 9, channel 5 access updated successfully

```
# clia user 9
```

Pigeon Point Shelf Manager Command Line Interpreter

```
9: "newby"
  Channels 0-4 Privilege level: "Administrator"
    Flags: "IPMI Messaging"
  Channel 5 Privilege level: "User"
    Flags: "Link Authentication" "IPMI Messaging"
  Channels 6-15 Privilege level: "Administrator"
    Flags: "IPMI Messaging"
```

3.65 *version*

3.65.1 *Syntax*

version

3.65.2 *Purpose*

This command shows the version information for the Shelf Manager software. This command can also be issued on the backup Shelf Manager.

3.65.3 *Examples*

```
# clia version
Pigeon Point Shelf Manager Command Line Interpreter

Pigeon Point Shelf Manager ver. 2.5.3
Pigeon Point is a trademark of Pigeon Point Systems.
Copyright (c) 2002-2008 Pigeon Point Systems
All rights reserved
Build date/time: April 23, 2008 16:39:37
Carrier: PPS; Subtype: 0; Subversion: 0
#
```

4 Web Interface

The Web interface can be used to communicate with the intelligent management controllers of the shelf, with boards, and with the Shelf Manager itself remotely over the network, using a Web browser. The Web interface is based on the Command Line Interface (CLI) and is essentially a front-end to the CLI.

In redundant configurations, the external IP address is always maintained by the active Shelf Manager and is switched over to the backup Shelf Manager when the general switchover takes place. Therefore, the client always communicates to the active Shelf Manager via the Web interface in redundant configurations.

4.1 *Starting the Web Interface*


Before using the Web interface, the following prerequisites should be satisfied on the ShMM:

- one of the Ethernet interfaces should be configured and up
- the Web server “boa” should be running
- the Shelf Manager software (shelfman) should be running.

To use the Web interface, start any Web browser (Internet Explorer, Netscape or something else) and point it to URL **http://<Shelf-Manager-IP-Address>**. In the case of redundant Shelf Manager instances for a single shelf, the IP address should be the one exported outside the shelf and used for RMCP access to the Shelf Manager (instances). For example, if the Shelf Manager IP address is 192.168.1.204, the URL will look like **http://192.168.1.204**. The main page shows up in the browser and provides a menu of choices.

To fill a field of a Web form with a parameter value that includes the space symbol the user should enclose the value in backslashed quotes. For example, sensor “Local Temp” should be entered as **\“Local Temp\”** in the field “Sensor Name or LUN:Sensor #:” on the page “Set Sensor Hysteresis”.


The main page contains a list of links to other pages, each of which corresponds to one of the commands available through the Web interface. These commands and the corresponding pages are described in detail in subsequent sections. The documentation relating to the command line interface can also be very helpful as the web interface provides the same functionality via a Web browser.

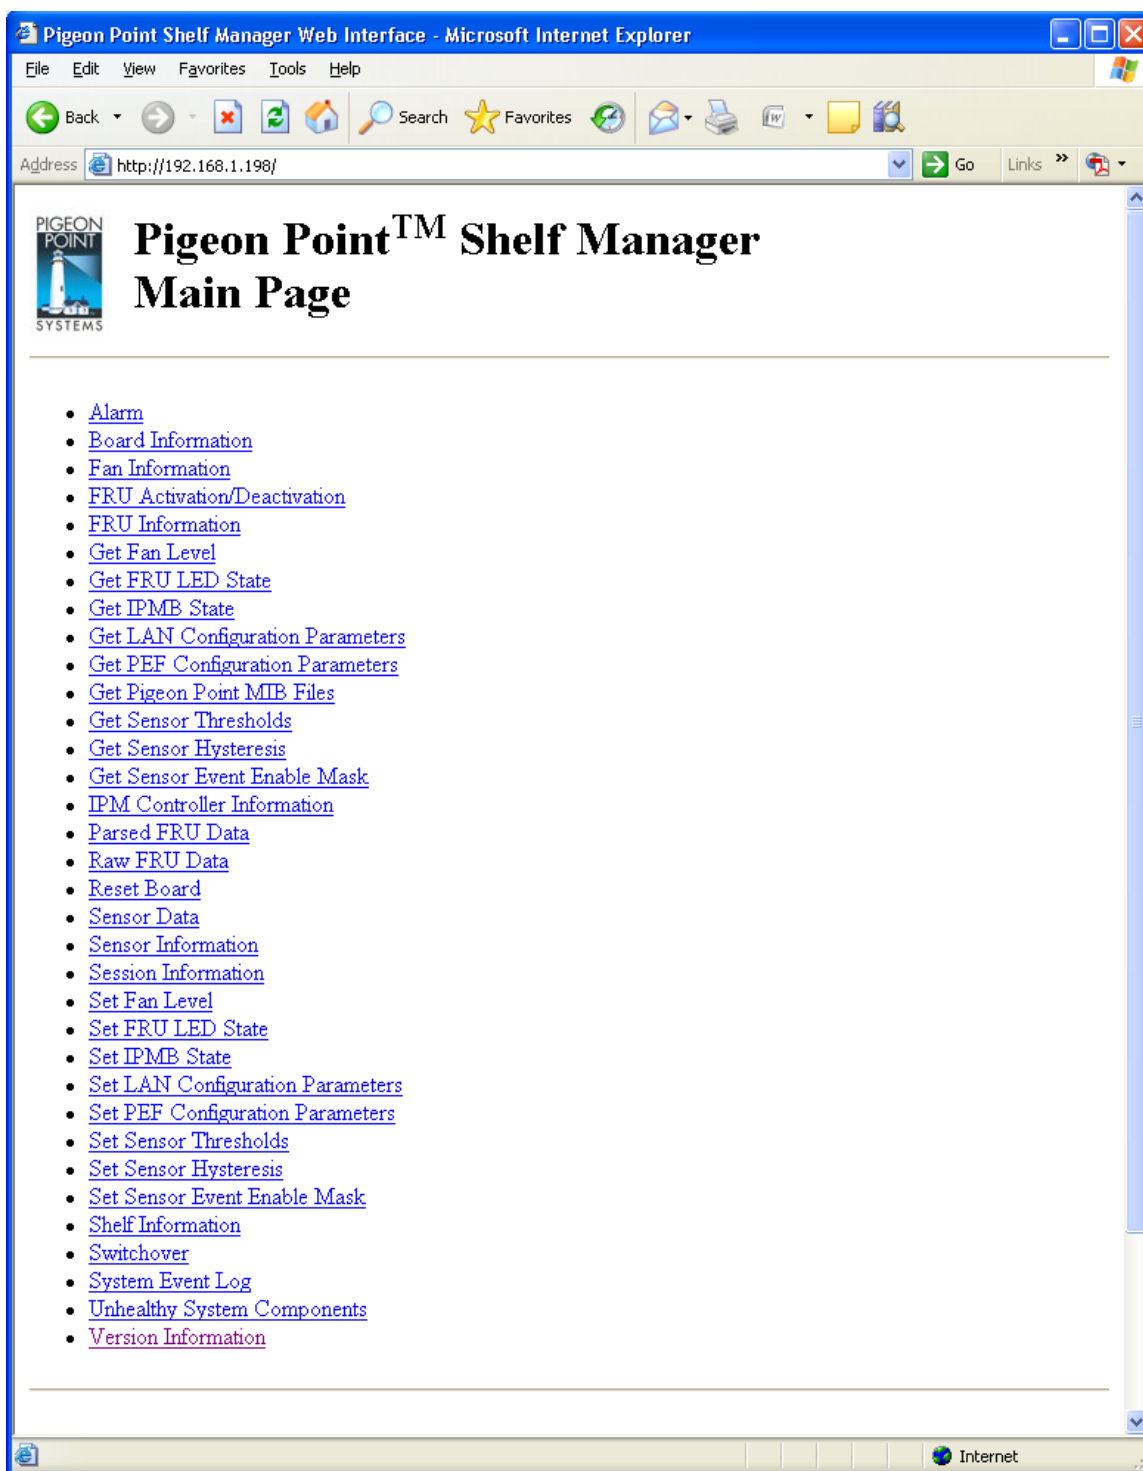


4.2 Alarm

The page “Alarm” allows the user to access to the TELCO alarm outputs. One of the following actions is specified:

- Status
- Major
- Minor
- Critical
- Clear
- Info

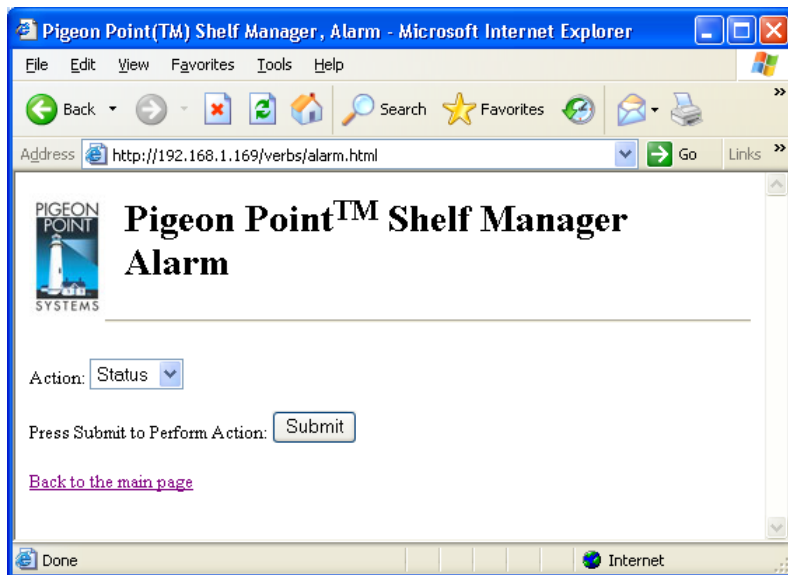

After the user selects one of the actions specified and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. The output is essentially equal to the output produced by the CLI command **alarm** with a corresponding parameter.

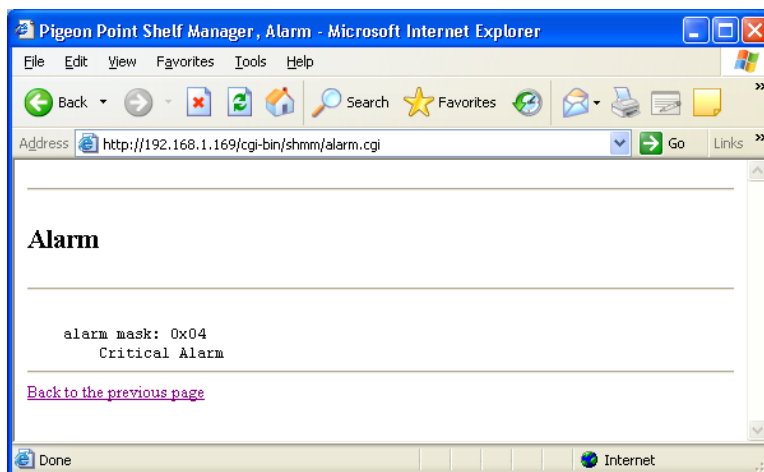

4.3 Fan Information

The page “Fan Information” allows the user to specify the IPM controller address and the FRU device ID for a fan information request. Some of the fields may be left blank; in that case:

- if all of the fields are left blank, information about all known fans in the shelf is provided.
- if only the IPM controller address is specified, information about all fans controlled by the specified IPM controller is provided.

The screenshot shows a web browser window titled "Pigeon Point(TM) Shelf Manager, Fan Information - Microsoft Internet Ex...". The address bar shows "http://192.168.1.169/verbs/fans.html". The page content includes the Pigeon Point Systems logo and the title "Pigeon Point™ Shelf Manager Fan Information". Below the title is a form with the following elements:

- A section titled "Choose the request type" with two radio buttons: "Standard" (selected) and "By Site Type / Number".
- Two input fields: "IPMB Address:" and "FRU ID:".
- A dropdown menu labeled "Fan Tray" and an input field labeled "Site Number:".
- A "Submit" button.
- A link: [Back to the main page](#).

The status bar at the bottom shows "Done" and "Internet".

After the user fills in desired fields and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. The output is essentially equal to the output produced by the CLI command `fans`.

The screenshot shows a web browser window titled "Pigeon Point Shelf Manager, Fan Information - Microsoft Internet Explorer". The address bar shows "http://192.168.1.169/cgi-bin/shmm/fans.cgi". The page content includes the title "Fan Information". Below the title is the following output:

```


20: FRU # 3
    Current Level: 3
    Minimum Speed Level: 0, Maximum Speed Level: 15
  
```

Below the output is a link: [Back to the previous page](#). The status bar at the bottom shows "Done" and "Internet".


4.4 FRU Activation/Deactivation

The page “FRU Activation/Deactivation” allows the user to request activation/deactivation actions for the specified FRU. The IPM controller address and the FRU device ID identify the FRU. Both fields must be filled in. Additionally, one of the following actions is specified:

- Activate FRU
- Deactivate FRU
- Set Locked Bit
- Clear Locked Bit.

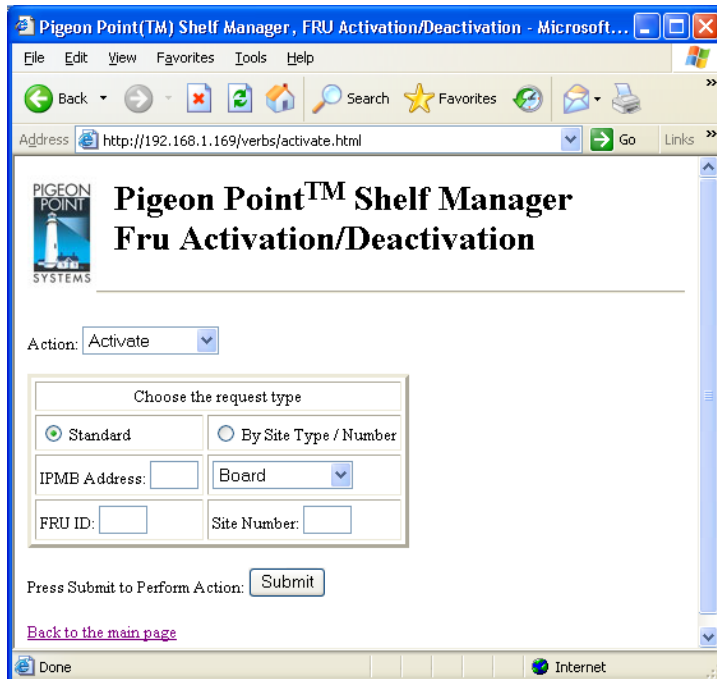

After the user fills in all fields and clicks the “Submit” button, the request is executed and the results page is produced, similar to the one below. This command is essentially equal to one of the CLI commands **activate**, **deactivate** or **setlocked**, depending on the action chosen.

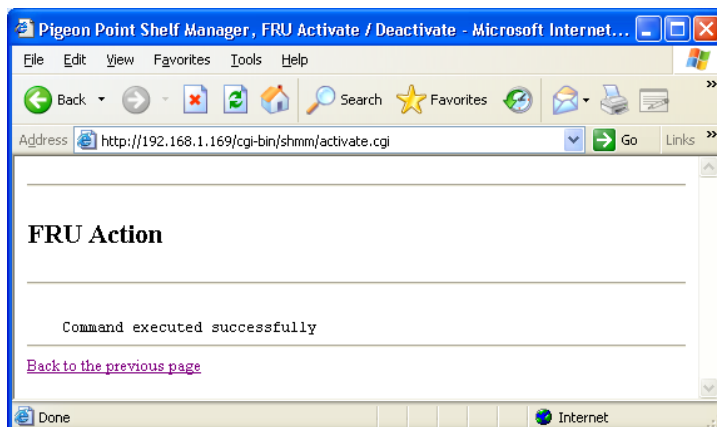

4.5 FRU Information

The page “FRU Information” allows the user to specify the IPM controller address, FRU device ID or site type, and verbosity mode for the FRU information request. Some of the fields may be left blank; in that case:

- if all of the fields are left blank, information about all known FRUs is provided
- if only the IPM controller address is specified, information about all FRUs of the specified IPM controller is provided.
- if only the site type is specified, information about all FRUs with the specified site type is provided.

Pigeon Point(TM) Shelf Manager, FRU Information - Microsoft Internet E...

File Edit View Favorites Tools Help

Back Forward Stop Home Search Favorites Go Links

Address http://192.168.1.169/verbs/fru.html

PIGEON POINT SYSTEMS

Pigeon Point™ Shelf Manager FRU Information

Choose the request type

☒ Standard ☐ Using Site Type ☐ by Site Type / Number

IPMB Address: IPMB Address: Site Type:

FRU ID: Site Type: Site Number:

Choose verbosity level:


☐ Verbose Mode ☒ Ordinary Mode

Press Submit to retrieve the FRU information:

[Back to the main page](#)


Done Internet

After the user fills in the desired fields and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. The output is essentially equal to the output produced by the CLI command **fru**.

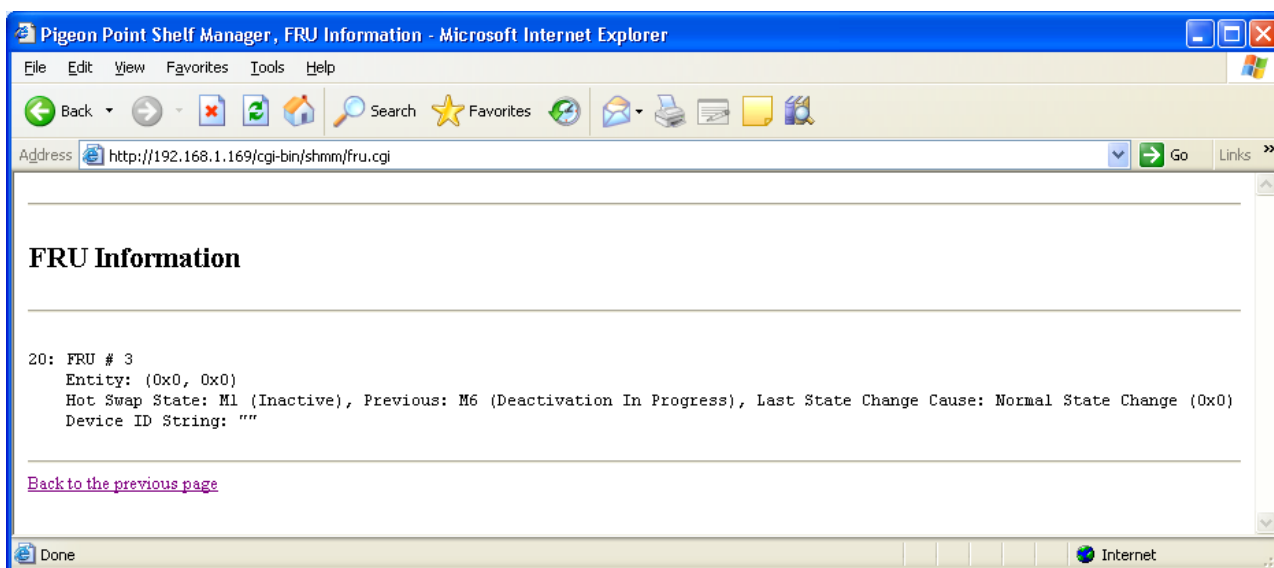


4.6 Get Board Information

The page “Get Board Information” allows the user to specify physical slot number and verbosity mode for the board information request. One of the options for the physical slot number is “all slots”.

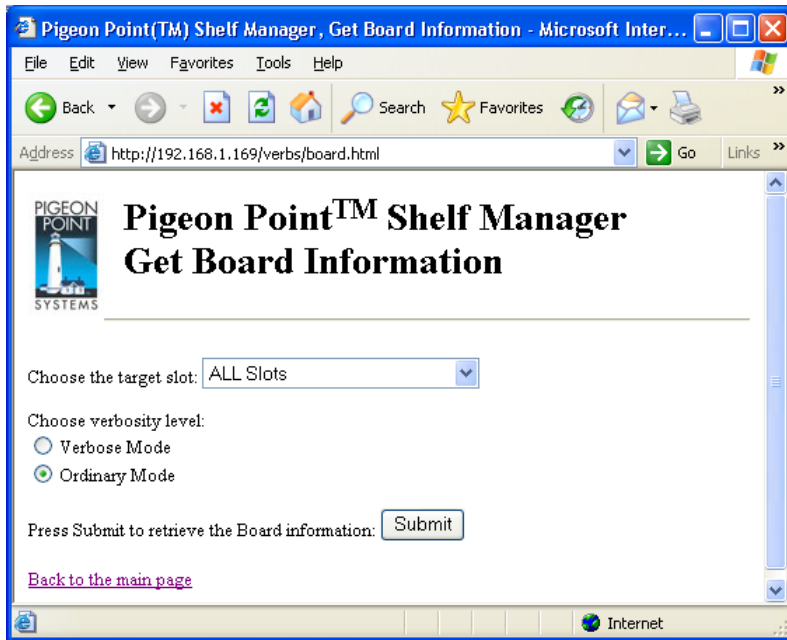

After the user fills in all fields and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. The output is essentially equal to the output produced by the CLI command **board**.

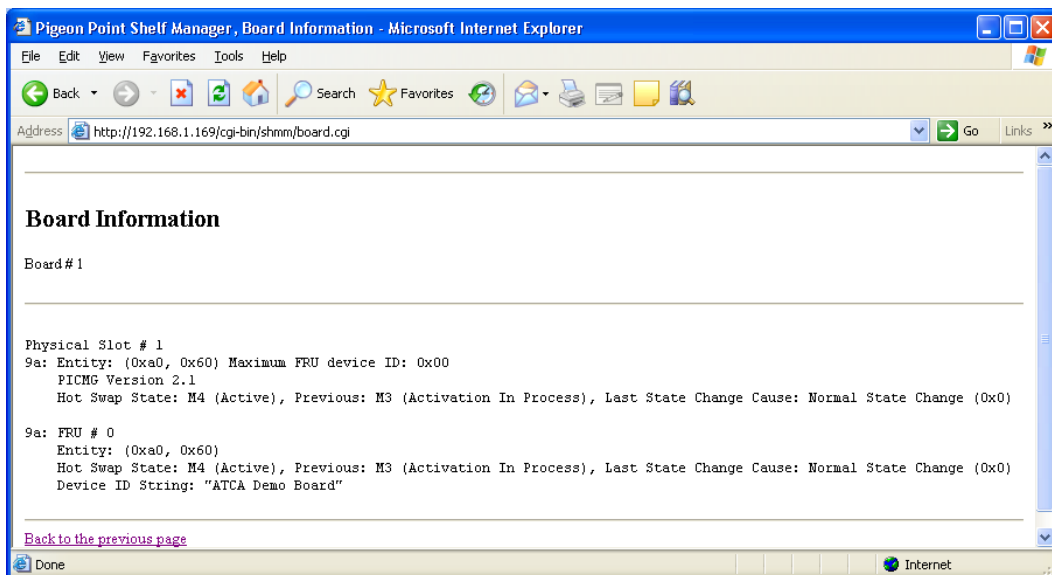

4.7 Get Fan Level

The page “Get Fan Level” allows the user to specify the IPM controller address and the FRU ID to retrieve the fan level of the specified fan.

The screenshot shows a web browser window titled "Pigeon Point(TM) Shelf Manager, Get Fan Level - Microsoft Internet Expl...". The address bar shows "http://192.168.1.169/verbs/getfanlevel.html". The page content includes the Pigeon Point Systems logo and the title "Pigeon Point™ Shelf Manager Get Fan Level". Below the title is a form titled "Choose the request type" with two radio buttons: "Standard" (selected) and "By Site Type / Number". The form also contains input fields for "IPMB Address:", "FRU ID:", and "Site Number:", along with a "Fan Tray" dropdown menu. A "Submit" button is located below the form. A message "Press Submit to retrieve the Get Fan Level:" is displayed. At the bottom, there is a link "Back to the main page".

After the user fills in the desired fields and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. The output is essentially equal to the output produced by the CLI command **getfanlevel**.

The screenshot shows a web browser window titled "Pigeon Point Shelf Manager, Fan Level - Microsoft Internet Explorer". The address bar shows "http://192.168.1.169/cgi-bin/shmm/getfanlevel.cgi". The page content includes the title "Get Fan Level". Below the title, the output is displayed: "20: FRU # 5 Override Fan Level: 15, Local Fan Level: 15". At the bottom, there is a link "Back to the previous page".

4.8 Get FRU LED State

The page “Get FRU LED State” allows the user to obtain the current FRU LED state on all levels of control that are enabled for the LED(s). In verbose mode, information about the colors supported by the LED(s) is also shown. Information can be shown about a specific LED or all LEDs for the given FRU if the correspondent fields are filled. Some of the fields may be left blank.

In that case, if FRU ID is omitted, information is shown about all LEDs on all FRUs of the given IPM controller. If IPMB address is also omitted, information is shown about all known LEDs in the shelf.

The screenshot shows a web browser window titled "Pigeon Point(TM) Shelf Manager, Get FRU LED State - Microsoft Int...". The address bar shows the URL "http://192.168.1.169/verbs/getfruledstate.html". The page content includes the Pigeon Point Systems logo and the title "Pigeon Point™ Shelf Manager Get FRU LED State". Below the title is a form with the following fields and options:


- Choose the request type:**
 - ☒ Standard
 - ☐ By Site Type / Number
- IPMB Address:** [text input]
- Board:** [dropdown menu]
- FRU#:** [text input]
- Site Number:** [text input]
- LED ID:** [text input]

Below the form, there is a section for **Choose verbosity level:**

- ☐ Verbose Mode
- ☒ Ordinary Mode


At the bottom, there is a text label "Press Submit to retrieve the FRU LED State:" followed by a **Submit** button. A link "[Back to the main page](#)" is also present.

After the user fills in the request information and clicks the “Submit” button, the request is executed and the results page is generated, similar to the one below. The output produced by this command is essentially the same as the output produced by the CLI command **getfruledstate**.

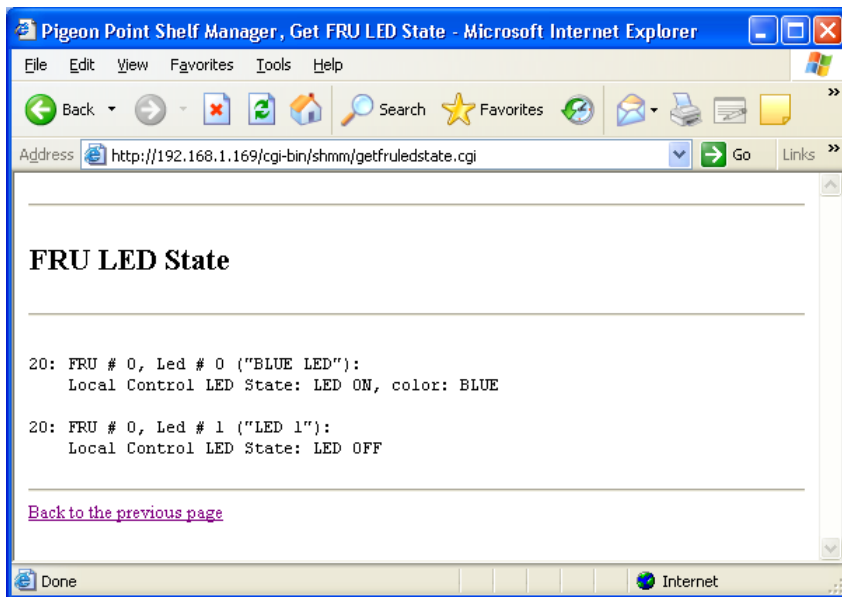


4.9 Get IPMB State

The page “Get IPMB State” allows the user to obtain the current state of IPMB-0 on the target IPM controller. The IPMB Address must be specified. In a bused environment, or in a radial environment if the target IPM controller is not an IPMB hub, the field “Radial IPMB link# (1-95)” must be left empty. Information about the state of IPMB-A and IPMB-B on the target IPM controller is reported.

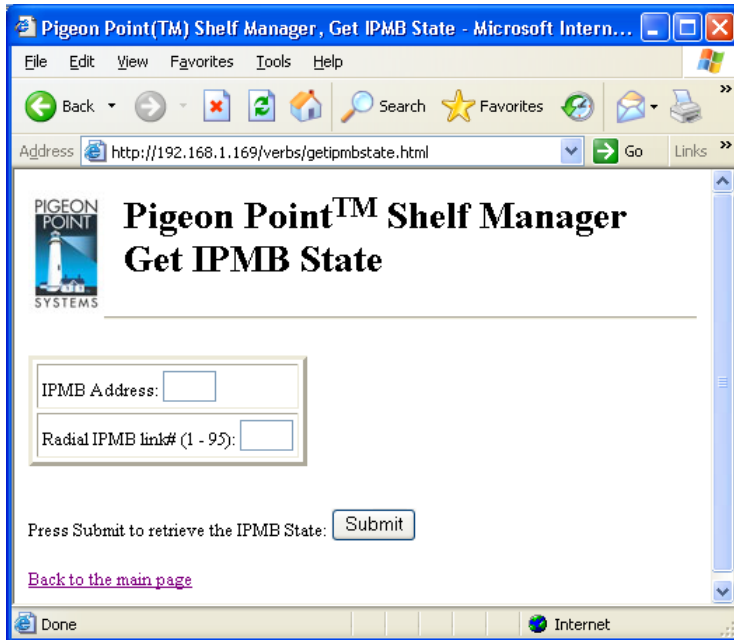


After the user fills in the request information and clicks the “Submit” button, the request is executed and the results page is generated, similar to the one below. The output produced by this command is essentially the same as the output produced by the CLI command `getipmbstate`.

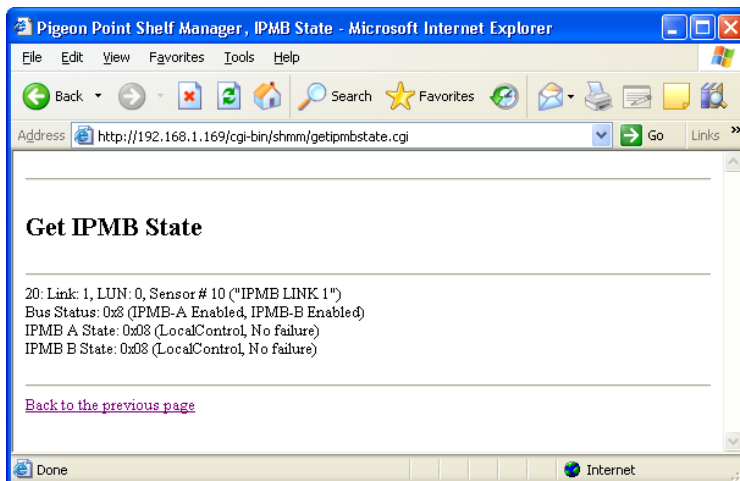


4.10 *Get LAN Configuration Information*

The page “Get LAN Configuration Information” allows the user to retrieve LAN configuration information for the specified channel. The user can request the value of one of the defined parameters or of all LAN parameters.

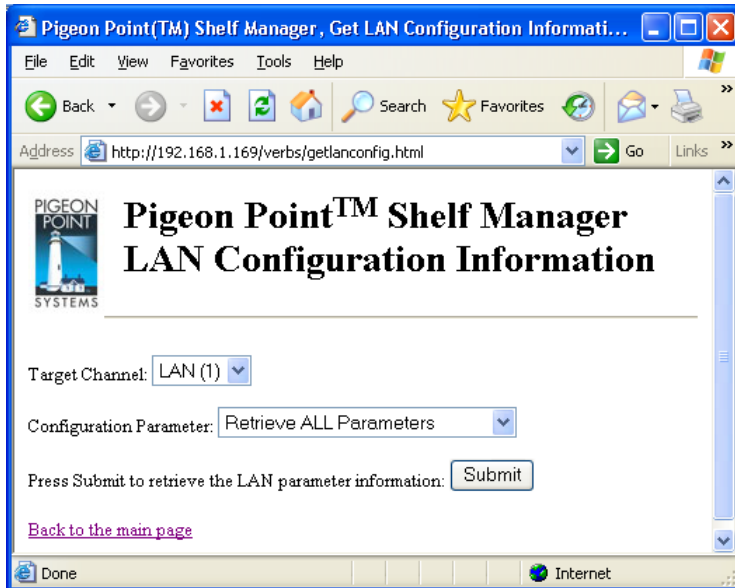


After the user fills in the request information and clicks the “Submit” button, the request is executed and the results page is generated, similar to the one below. The output produced by this command is essentially the same as the output produced by the CLI command **getlanconfig**.

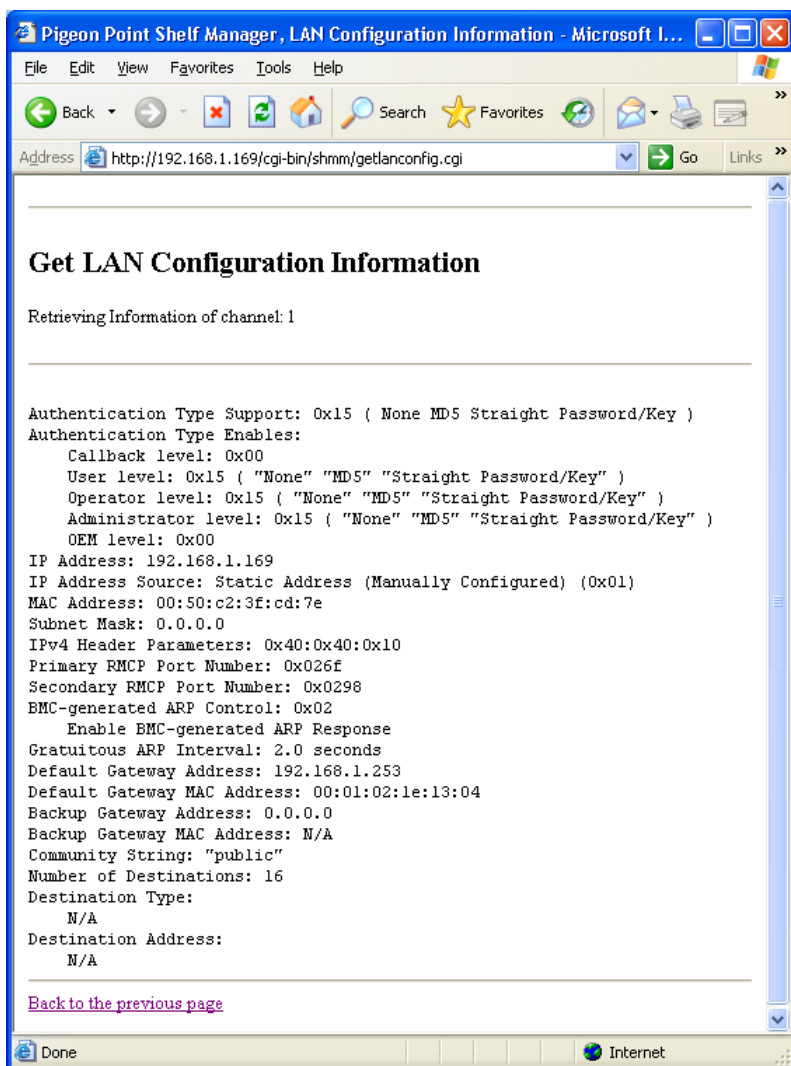

4.11 Get Pigeon Point MIB Files

The “Get Pigeon Point MIB Files” page allows the user to obtain the contents of the Pigeon Point SNMP MIB files.

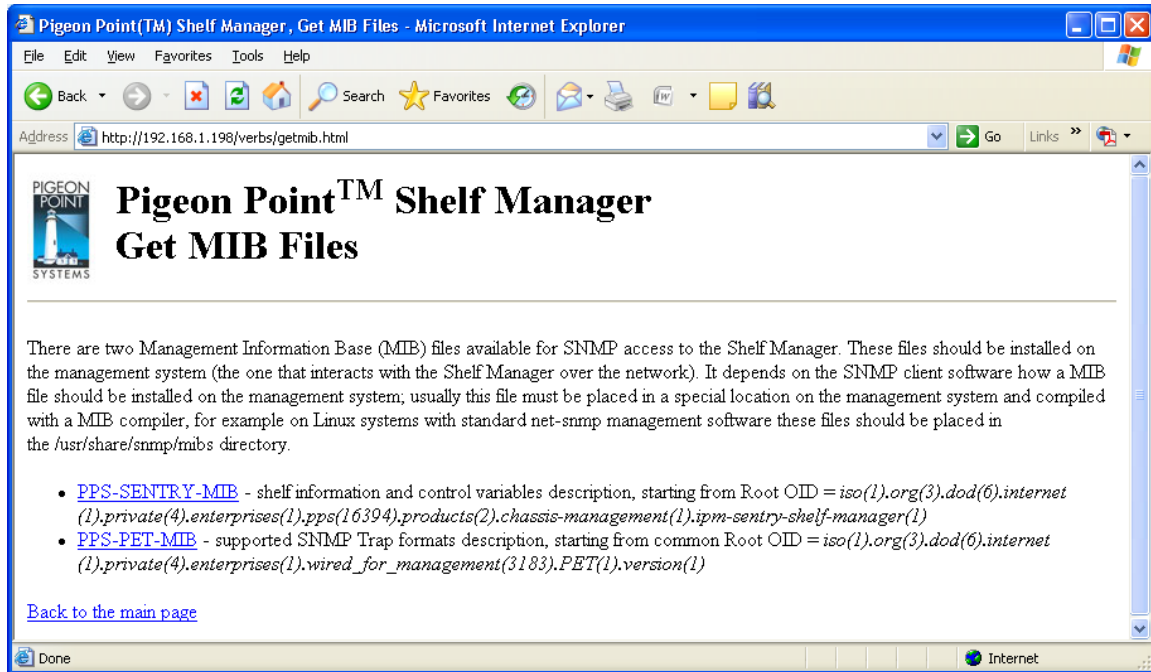

When the user clicks on a MIB file name, a page appears with the contents of the corresponding MIB file, similar to the one below.

```

-- $Id: PPS-SENTRY-MIB.txt,v 1.6 2007/06/20 15:56:42 archy Exp $
--
-- PPS-SENTRY-MIB MODULE-IDENTITY
--   Copyright (c) 2003-2007 Pigeon Point Systems.
--   All rights reserved.
--
-- DESCRIPTION
--   This MIB file defines objects that can be managed on
--   Pigeon Point Shelf Manager.
--
-- LAST-UPDATED
--   20030205 - Initial revision
--   20030601 - Added PICMG 2.x subtrees
--   20040519 - Integrated extension MIB into board-basic subtree
--   20040805 - Cosmetic changes for Mgssoft compiler
--   20050722 - Writable threshold/hysteresis support
--   20070301 - Added fatray-level variable
--   20070607 - Added shelf-manager-status and shelf-manager-version branches
--   20070611 - Filled in DESCRIPTION section for some variables
--
-- ORGANIZATION
--   Pigeon Point Systems
--
-- CONTACT-INFO
--   E-mail: support@pigeonpoint.com
--

PPS-SENTRY-MIB DEFINITIONS ::= BEGIN

IMPORTS
    OBJECT-TYPE
    FROM RFC-1212
    Counter, enterprises
    FROM RFC1155-SMI
    DisplayString
    FROM RFC1213-MIB;

MacAddress ::= OCTET STRING ( SIZE(6) )

pps                OBJECT IDENTIFIER ::= { enterprises 16394 }
products           OBJECT IDENTIFIER ::= { pps 2 }
chassis-management OBJECT IDENTIFIER ::= { products 1 }
ipm-sentry-shmm    OBJECT IDENTIFIER ::= { chassis-management 1 }

-- ipm-controller   OBJECT IDENTIFIER ::= { ipm-sentry-shmm 1 }

ipm-controller OBJECT-TYPE
    SYNTAX  SEQUENCE OF Ipm-controller-entry
    ACCESS  not-accessible
    STATUS  mandatory

```

4.12 Get Sensor Event Enable Mask

The page “Set Sensor Event Enable Mask” allows to the user to obtain the current event enable mask values of the specified sensor(s).

The user may qualify the sensor number with the Logical Unit Number (LUN) if the target controller supports sensors on multiple LUNs. If the LUN is omitted, information about sensors with the specified sensor number on all LUNs is shown. Sensor names are not qualified with LUN numbers, since it is assumed that sensor names will normally be unique within the controller. However, if there are several sensors with the same name within the controller, information is shown about all of them.

Pigeon Point(TM) Shelf Manager, Get Sensor Event Enable Mask - ...

File Edit View Favorites Tools Help

Back Forward Stop Home Search Favorites Go Links

Address http://192.168.1.169/verbs/getsensoreventenable.html

Pigeon Point™ Shelf Manager
Get Sensor Event Enable Mask

Choose the request type

☒ Standard ☐ By Site Type / Number

IPMB Address: Board

Site Number:


Sensor Name or LUN:Sensor#:

Press Retrieve to retrieve the Sensor Event Enable Mask:

[Back to the main page](#)

Done Internet


After the user fills in the request information and clicks the “Submit” button, the request is executed and the results page is generated, similar to the one below. The output produced by this command is essentially the same as the output produced by the CLI command **getsensoreventenable**.

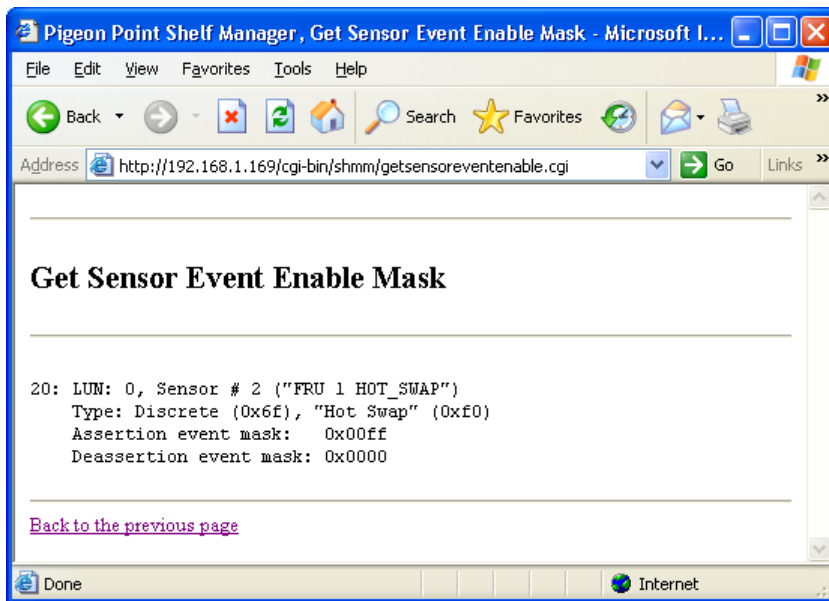

4.13 Get Sensor Thresholds


The page “Get Sensor Thresholds” allows the user to specify the IPM controller address and the sensor number or name for a threshold information request. Some of the fields may be left blank; in that case:

- if all of the fields are left blank, threshold information for all known sensors on all IPM controllers is provided.
- if only the IPM controller address is specified, threshold information for all sensors of the specified IPM controller is provided.

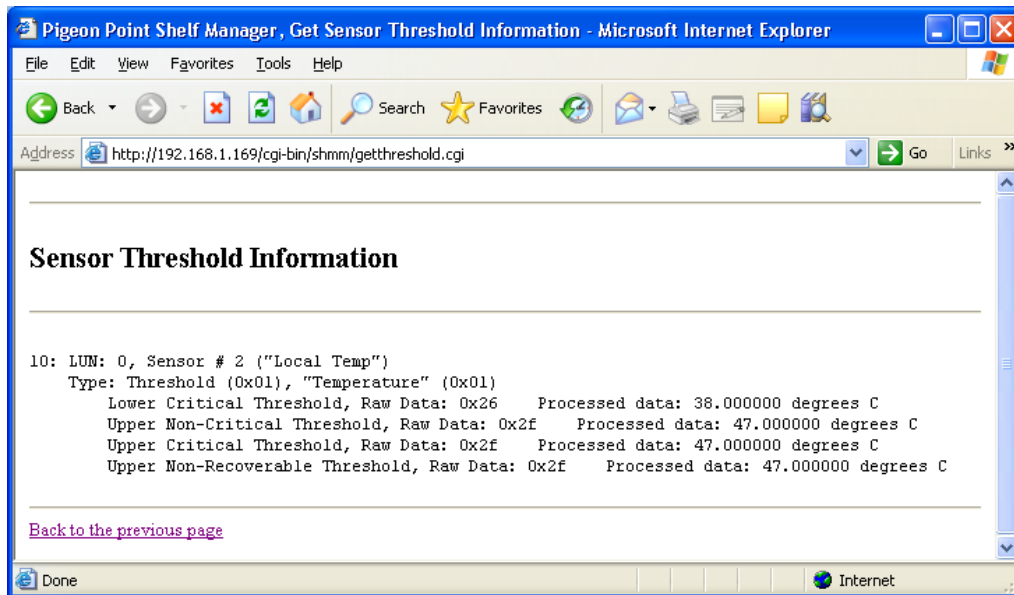

In the field “Sensor Name or LUN:Sensor #”, the user can identify the target sensor by specifying the sensor name or specifying the sensor LUN and sensor number. In the last case, the LUN is optional; if specified, it is separated from the sensor number with a colon. If the user specifies only the sensor number, information is returned about known sensors with the specified sensor number on all LUNs. Valid values for the LUN are 0, 1 and 3. (LUN 2 is reserved.)

After the user fills in the desired fields and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. The output is essentially equal to the output produced by the CLI command `getthreshold`.

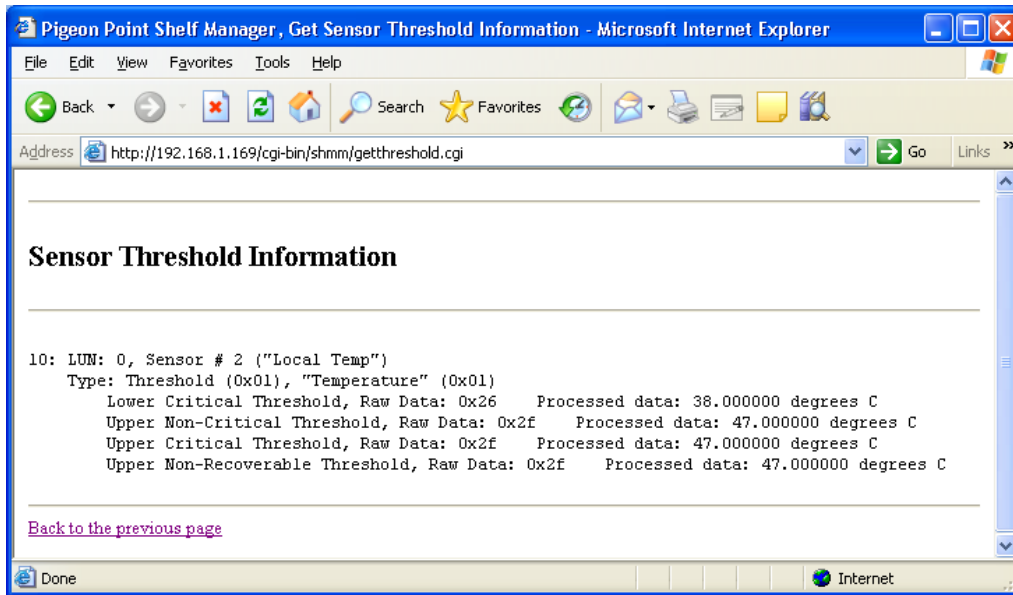

4.14 Get Sensor Hysteresis

The page “Get Sensor Hysteresis” allows the user to retrieve the positive-going and negative-going hystereses for the specified sensor. In the field “Sensor Name or LUN:Sensor #”, the user can identify the target sensor by specifying the sensor name or specifying the sensor LUN and sensor number.

In the last case, the LUN is optional; if specified, it is separated from the sensor number with a colon. If the user specifies only the sensor number, information is returned about known sensors with the specified sensor number on all LUNs. Valid values for the LUN are 0, 1 and 3. (LUN 2 is reserved.).

Pigeon Point(TM) Shelf Manager, Get Sensor Hysteresis - Microsoft...

File Edit View Favorites Tools Help

Back Forward Stop Home Search Favorites Refresh Print

Address http://192.168.1.169/verbs/gethysteresis.html Go Links

Pigeon Point™ Shelf Manager
Get Sensor Hysteresis

Choose the request type

☒ Standard ☐ By Site Type / Number

IPMB Address: Board

Site Number:


Sensor Name or LUN:Sensor #:

Press Submit to retrieve the Sensor Hysteresis:

[Back to the main page](#)

Done Internet


After the user fills in the desired fields and clicks the “Submit” button, the request is executed and the result page is shown, similar to the one below. The output is essentially equal to the output produced by the CLI command **gethysteresis**.

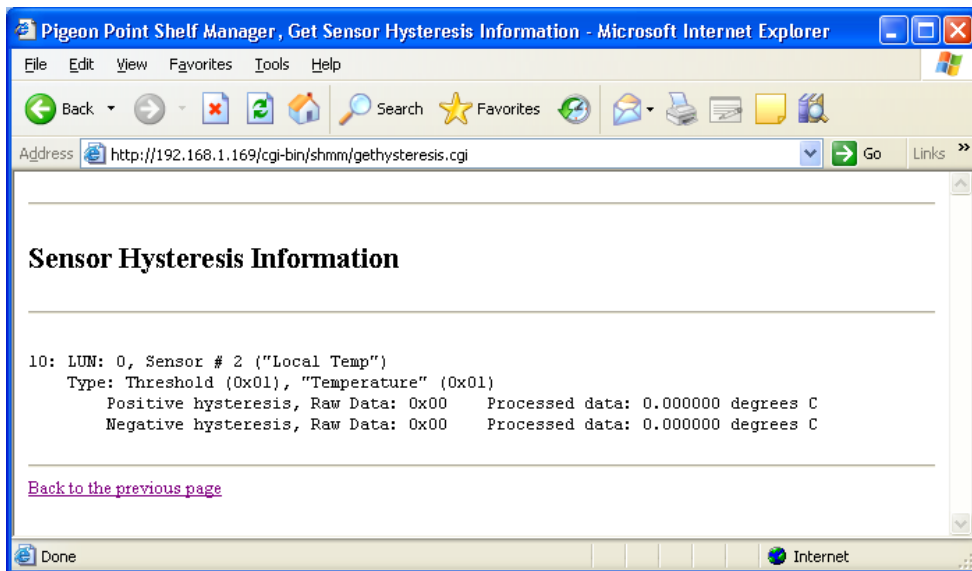


4.15 *Get PEF Configuration Information*

The page “Get PEF Configuration Information” allows the user to retrieve Platform Event Filter (PEF) configuration information.

The user can request the value of one of the defined parameters or of all PEF parameters.

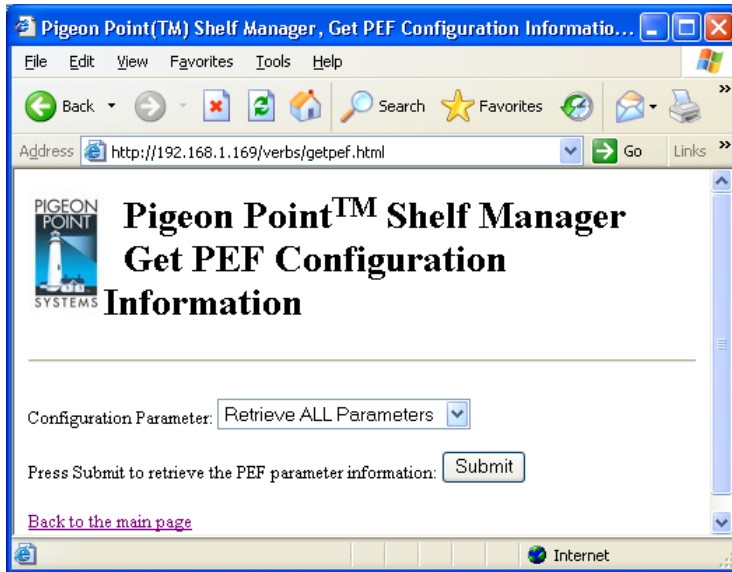

After the user fills in the request information and clicks the “Submit” button, the request is executed and the results page is generated. The results page will look similar to the one below. The output produced by this command is essentially the same as the output produced by the CLI command `getpefconfig`.

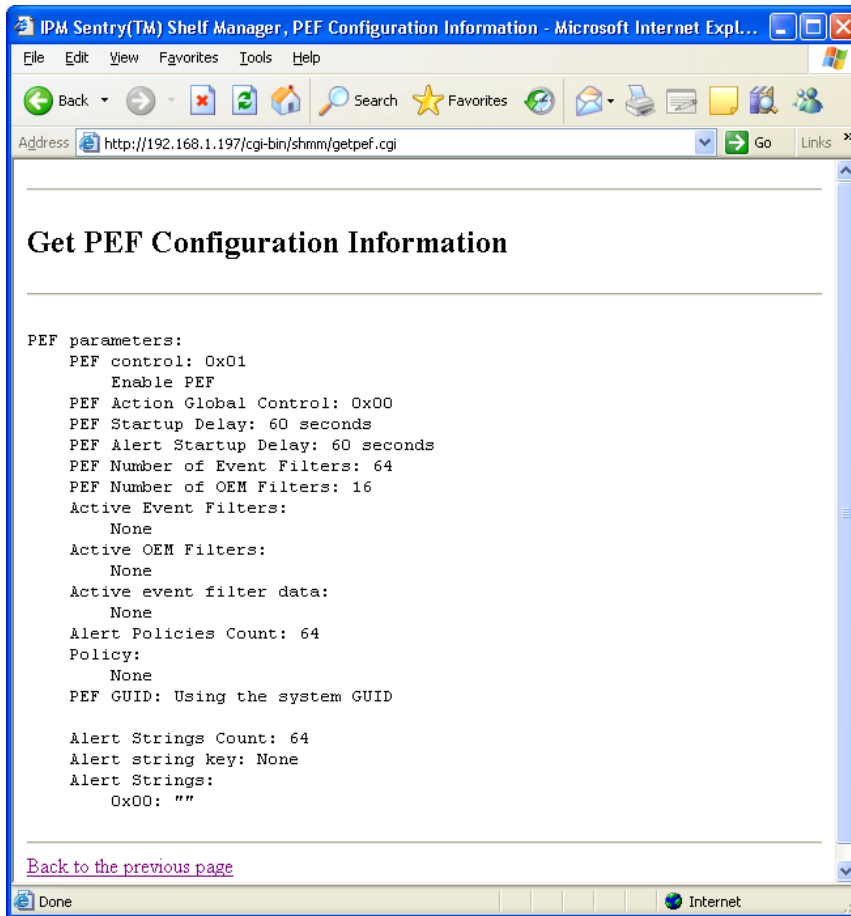

4.16 IPM Controller Information

The page “IPM Controller Information” allows the user to specify the IPM controller address and verbosity mode for the IPM controller information request.


The address field may be left blank; in that case, information about all known IPM controllers is provided.

The screenshot shows a web browser window titled "Pigeon Point(TM) Shelf Manager, IPM Controller Information - Micr...". The address bar shows "http://192.168.1.169/verbs/ipmc.html". The page content includes the Pigeon Point Systems logo and the title "Pigeon Point™ Shelf Manager IPM Controller Information". Below the title is a form with the following elements:

- A section titled "Choose the request type" with two radio buttons: "Standard" (selected) and "By Site Type / Number".
- A "Board" dropdown menu.
- An "IPMB Address:" text input field.
- A "Site Number:" text input field.
- A section titled "Choose verbosity level:" with two radio buttons: "Verbose Mode" and "Ordinary Mode" (selected).
- A "Submit" button.
- A link labeled "Back to the main page".

The browser's status bar at the bottom shows "Done" and "Internet".

After the user fills in the desired fields and clicks the “Submit” button, the request is executed and a results page is shown, similar to the one below. The output is essentially equal to the output produced by the CLI command **ipmc**.

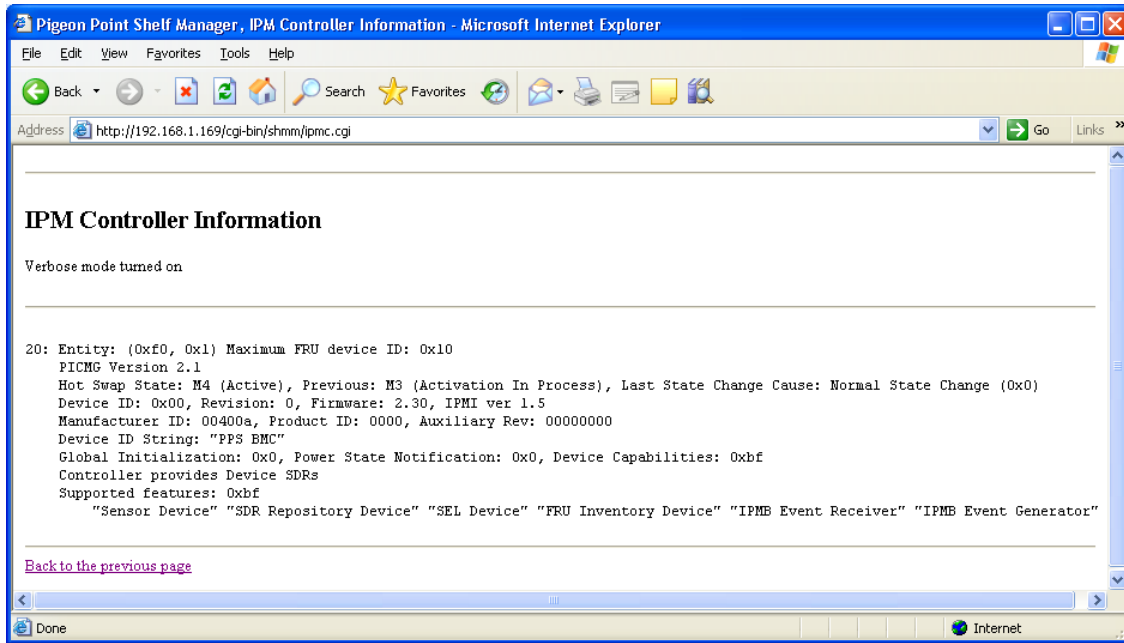

Note:

This and many subsequent pages offer an alternate style of request “By Site Type/Number”, which allows the user to specify the site type and site number as the address of the target shelf object. Currently all available site types are supported only in CompactPCI systems; in AdvancedTCA systems, only the site type “Board” is supported. The HTML user interface does not prohibit the user from choosing a site type that is unsupported on the target shelf; in that case, an error message will be returned by the service provider in the target shelf.

4.17 *Parsed FRU Data*


The page “Parsed FRU Data” allows the user to get a parsed version of the FRU data information. The user should specify the IPM controller address, FRU device ID or site type and the site number. Also, the user can change the verbosity level and request the data in raw format (as a hexadecimal dump).

The screenshot shows a web browser window titled "Pigeon Point(TM) Shelf Manager, Parsed FRU Data - Microsoft Inte...". The address bar shows "http://192.168.1.169/verbs/fruinfo.html". The page content includes the Pigeon Point Systems logo and the title "Pigeon Point™ Shelf Manager Parsed FRU Data". Below the title is a form with the following elements:

- A section titled "Choose the request type" with two radio buttons: "Standard" (selected) and "By Site Type / Number".
- Input fields for "IPMB Address:" and "Board:" (a dropdown menu).
- Input fields for "FRU ID:" and "Site Number:".
- A section titled "Choose verbosity level:" with two radio buttons: "Verbose Mode" and "Ordinary Mode" (selected).
- A section titled "Do you want to receive data in raw hexadecimal mode ?:" with two radio buttons: "Yes" and "No" (selected).
- A "Submit" button.
- A link labeled "Back to the main page".

The browser's status bar at the bottom shows "Done" and "Internet".

After the user specifies all necessary information and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. This command is essentially equal to the CLI command **fruinfo**.

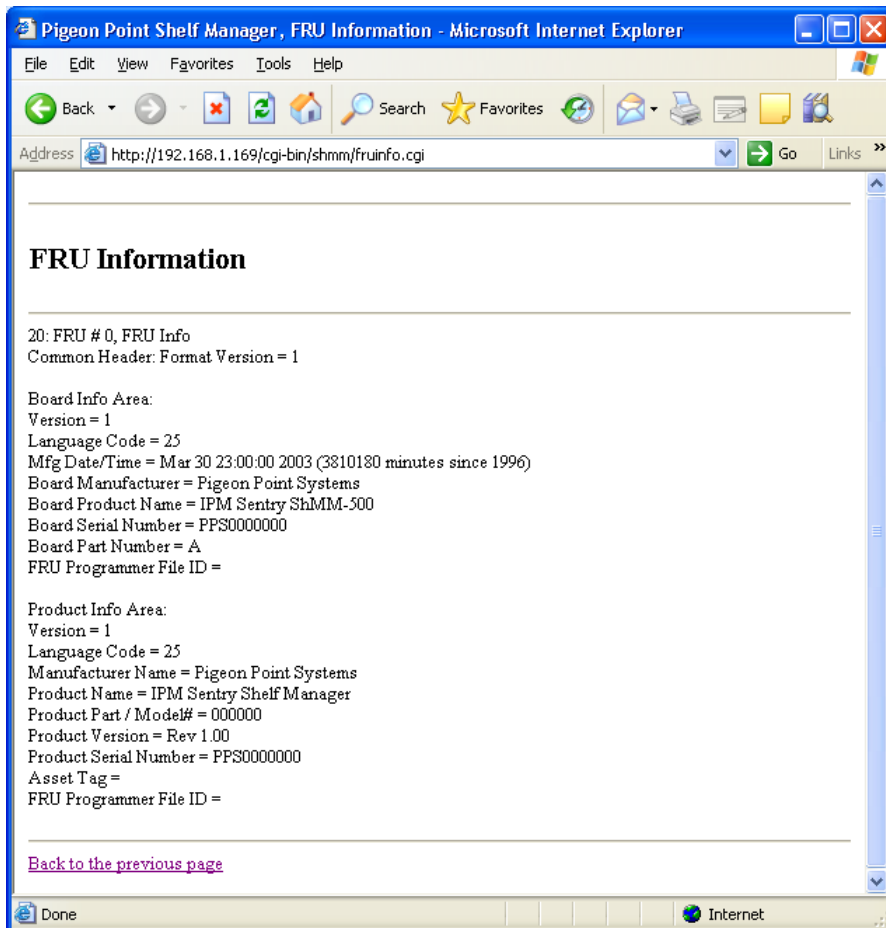

4.18 Raw FRU Data


The page “Raw FRU Data” allows the user to get the FRU data information in raw form. The user can specify the IPM controller address, FRU device ID or site type and the facility level. If none of the parameters or only the IPM controller address is specified, this page shows the FRU Inventory Ares Info on each FRU in the shelf or associated with that IPM controller.

The screenshot shows a web browser window titled "Pigeon Point(TM) Shelf Manager, Raw FRU Data - Microsoft Internet Explorer". The address bar shows "http://192.168.1.169/verbs/frudata.html". The page content includes the Pigeon Point Systems logo and the title "Pigeon Point™ Shelf Manager Raw FRU Data". Below the title is a form with the following elements:

- A section titled "Choose the request type" with two radio buttons: "Standard" (selected) and "By Site Type / Number".
- Input fields for "IPMB Address:" and "Board:" (a dropdown menu).
- Input fields for "FRU ID:" and "Site Number:".
- A "Block / Byte Number:" input field.
- A "Bytes to write:" input field.
- A section titled "Choose verbosity level:" with two radio buttons: "Verbose Mode" and "Ordinary Mode" (selected).
- A "Submit" button with the text "Press Submit to retrieve the FRU information:" above it.
- A link labeled "Back to the main page" at the bottom.


The browser's status bar at the bottom shows "Done" and "Internet".

After the user specifies all necessary information and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. This command is essentially equal to the CLI command **frudata**.

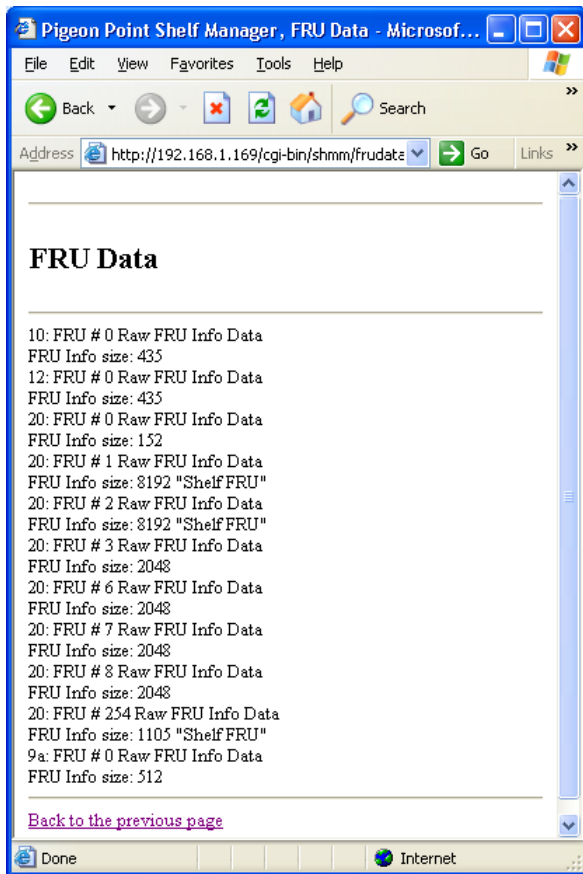


4.19 Reset Board

The page “Reset Board” allows the user to request a reset action for a board in a specific physical slot. The target slot number must be chosen from the list.

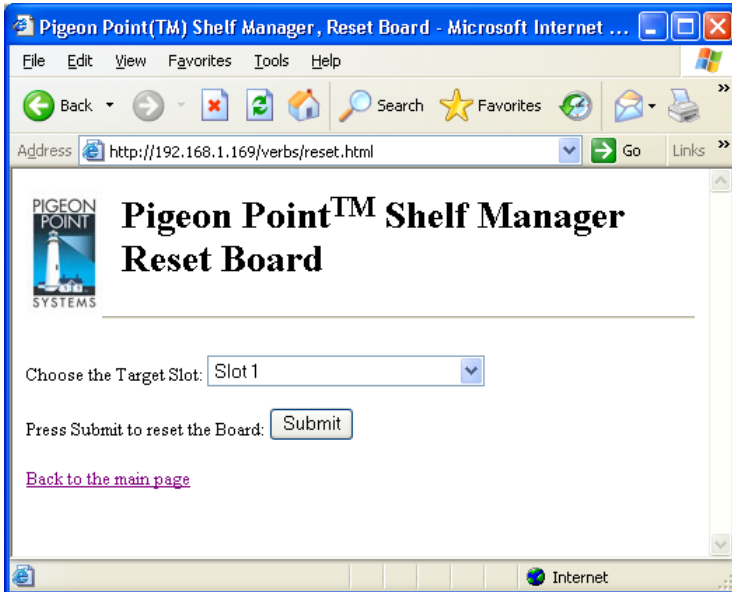

After the user chooses the target slot number and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. This command is essentially equal to the CLI command **boardreset**.

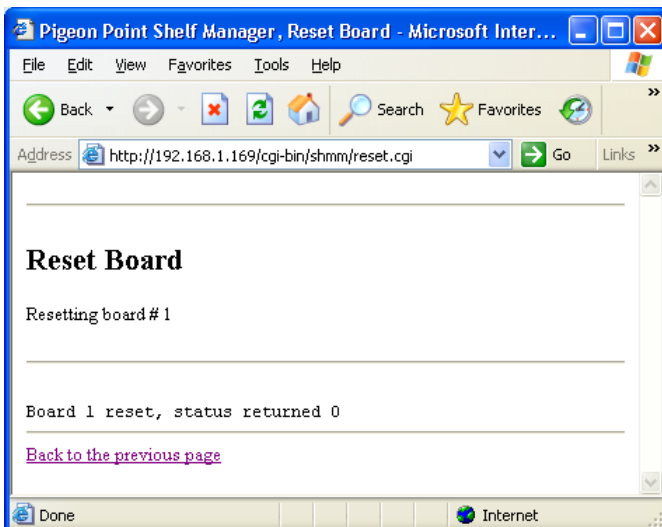

4.20 Sensor Data


The page “Sensor Data” allows the user to specify the IPM controller address and the sensor number or name for the sensor data request. Some of the fields may be left blank; in that case:

- if all of the fields are left blank, data from all known sensors on all IPM controllers is provided.
- if only the IPM controller address is specified, data from all sensors of the specified IPM controller is provided.

In the field “Sensor Name or LUN:Sensor #”, the user can identify the target sensor by specifying the sensor name or specifying the sensor LUN and sensor number.

In the last case, the LUN is optional; if specified, it is separated from the sensor number with a colon. If the user specifies only the sensor number, information is returned about known sensors with the specified sensor number on all LUNs. Valid values for the LUN are 0, 1 and 3. (LUN 2 is reserved.)

After the user fills in the desired fields and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. The output is essentially equal to the output produced by the CLI command **sensordata**.

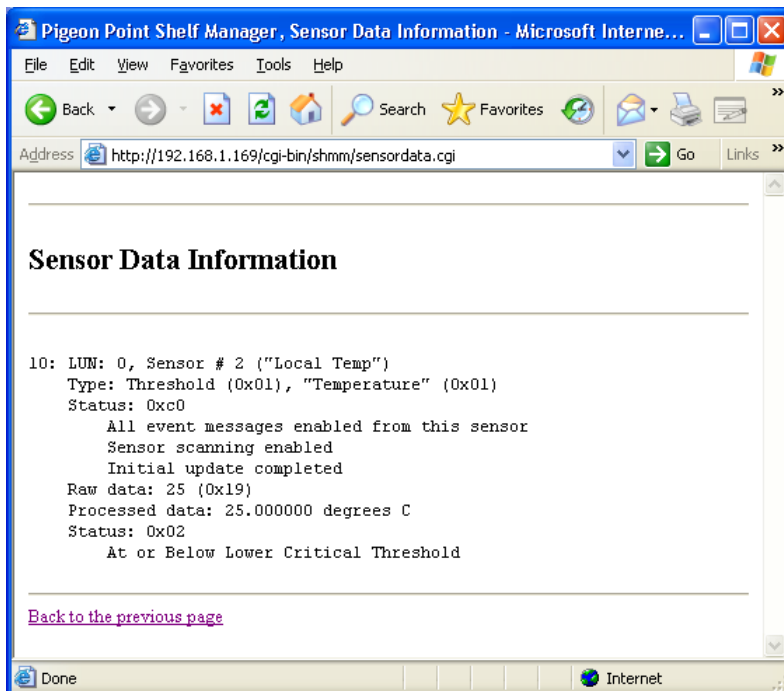

4.21 Sensor Information

The page “Sensor Information” allows the user to specify the IPM controller address, sensor number or name, and verbosity mode for the sensor information request. Some of the fields may be left blank; in that case:

- if all of the fields are left blank, information about all known sensors on all IPM controllers is provided
- if only the IPM controller address is specified, information about all sensors of the specified IPM controller is provided.

In the field “Sensor Name or LUN:Sensor #”, the user can identify the target sensor by specifying the sensor name or specifying the sensor LUN and sensor number.


The screenshot shows a web browser window titled "Pigeon Point(TM) Shelf Manager, Sensor Information - Microsoft In...". The address bar shows "http://192.168.1.169/verbs/sensor.html". The page content includes the Pigeon Point Systems logo and the title "Pigeon Point™ Shelf Manager Sensor Information". Below the title is a form with the following elements:

- A section titled "Choose the request type" with two radio buttons: "Standard" (selected) and "By Site Type / Number".
- Below "By Site Type / Number" is a "Board" dropdown menu and a "Site Number" text input field.
- An "IPMB Address" text input field.
- A "Sensor Name or LUN:Sensor #" text input field.
- A section titled "Choose verbosity level:" with two radio buttons: "Verbose Mode" and "Ordinary Mode" (selected).
- A "Submit" button with the text "Press Submit to retrieve the Sensor information:" above it.
- A link labeled "Back to the main page" at the bottom.

The browser's status bar at the bottom shows "Done" and "Internet".


In the last case, the LUN is optional; if specified, it is separated from the sensor number with a colon. If the user specifies only the sensor number, information is returned about known sensors with the specified sensor number on all LUNs. Valid values for the LUN are 0, 1 and 3. (LUN 2 is reserved.)

After the user fills in the desired fields and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. The output is essentially equal to the output produced by the CLI command **sensor**.

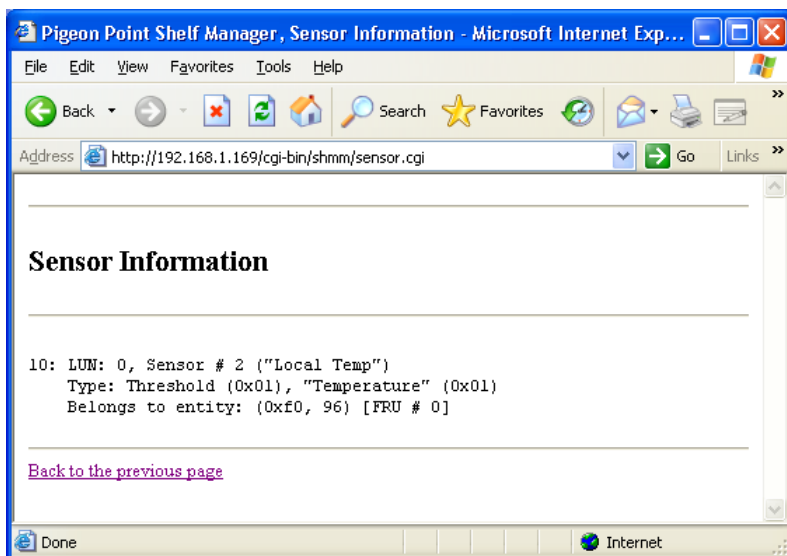


4.22 Session Information

The page “Session Information” allows the user to obtain information about active RMCP sessions.

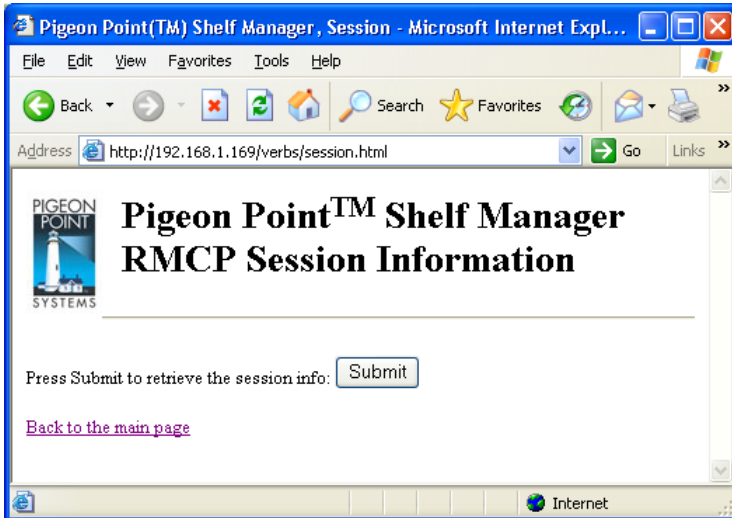

After the user clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. The output is essentially equal to the output produced by the CLI command **session**.

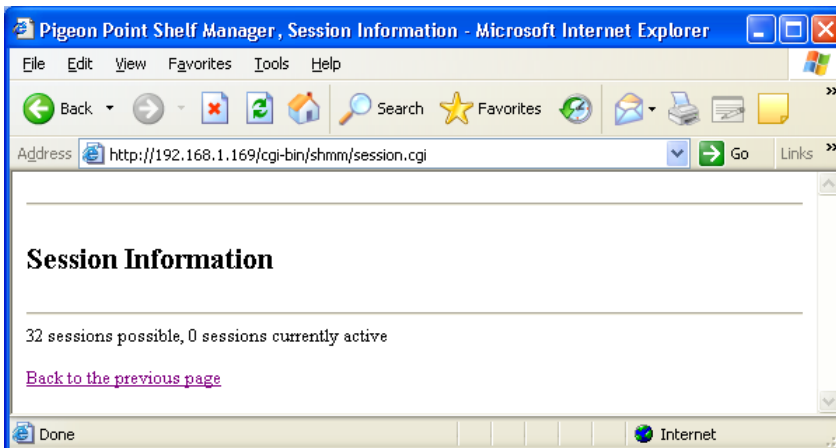

4.23 Set Fan Level

The page “Set Fan Level” allows the user to specify the IPM controller address and the FRU ID to set the fan level of the specified fan. Alternatively, using the radio button “Set For All Fans”, the user can set the requested fan level for all known fans in the shelf.

The screenshot shows a web browser window titled "Pigeon Point(TM) Shelf Manager, Set Fan Level - Microsoft Internet Explorer". The address bar shows "http://192.168.1.169/verbs/setfanlevel.html". The page content includes the Pigeon Point Systems logo and the title "Pigeon Point™ Shelf Manager Set Fan Level". Below the title is a form with the heading "Choose the request type". The form contains three radio buttons: "Standard" (selected), "By Site Type / Number", and "Set For All Fans". Below the radio buttons are input fields for "IPMB Address:", "Fan Tray" (a dropdown menu), "FRU ID:", and "Site Number:". There is also a "State:" input field. At the bottom of the form is a "Submit" button. Below the form is a link "Back to the main page". The browser status bar shows "Done" and "Internet".

After the user fills in all fields and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. This command is essentially equal to the CLI command **setfanlevel**.

The screenshot shows a web browser window titled "Pigeon Point Shelf Manager, Set Fan Level - Microsoft Internet Explorer". The address bar shows "http://192.168.1.169/cgi-bin/shmm/setfanlevel.cgi". The page content includes the title "Set Fan Level". Below the title is a line of text: "20: FRU # 3 Set Fan Level to: 1". Below this text is a link "Back to the previous page". The browser status bar shows "Done" and "Internet".

4.24 Set FRU LED State

The page “Set FRU LED State” allows the user to set the state of a specific LED or all LEDs for the given FRU. Either the IPMB address of an IPM controller and FRU device ID or a Site Type and Site Number can be specified. The “LED ID” field must be filled with either an LED ID (a numerical value) or **ALL**. In the latter case, the specified operation applies to all LEDs.

One of the following operations must be chosen:

- ON – turn on the LED
- OFF – turn off the LED
- LOCAL – revert to local control of the LED
- BLINK – cause the LED to blink, repeatedly turning it on for a period of time specified in “On Time” field (in milliseconds) and then turning it off for a period of time specified in “Off Time” field (in milliseconds)
- TEST – run a lamp test for a period of time specified in “On Time” field (in milliseconds).
- For the TEST operation a value in the “On Time” field must be less than 12800 ms (12.8 sec); for the BLINK operation, values in both the “On Time” and “Off Time” fields must be within 10 – 2500 ms range.

The screenshot shows a web browser window titled "Pigeon Point(TM) Shelf Manager, Set FRU LED State - Microsoft Int...". The address bar shows "http://192.168.1.169/verbs/setfruledstate.html". The page header includes the Pigeon Point Systems logo and the title "Pigeon Point™ Shelf Manager Set FRU LED State".

The main form is titled "Choose the request type" and contains the following fields:


- ☒ Standard
- ☐ By Site Type / Number
- IPMB Address:
- Board:
- FRU #:
- Site Number:
- LED ID:
- Operation:
- LED Color:
- On time:
- Off time:

At the bottom of the form, there is a "Submit" button and a link "Back to the main page".

The optional parameter “LED Color” specifies a color, via a symbolic name. If the parameter is not specified, the default LED color is used. The possible values of “LED Color” are below:

- BLUE
- RED
- GREEN
- AMBER
- ORANGE
- WHITE
- NONE


After the user fills in fields and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. This command is essentially equal to the CLI command **setfru ledstate**.

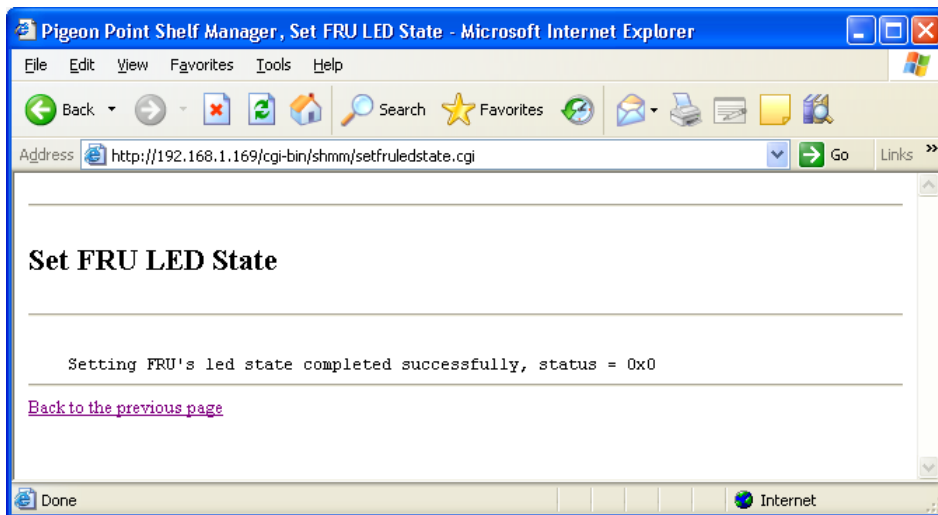

4.25 Set IPMB State

The page “Set IPMB State” allows the user to enable/disable an IPMB link on the target IPM controller. The field “IPMB Address” must contain an IPMB address of the target IPM controller.

The field “Bus” defines the bus (either IPMB-A or IPMB-B) to be enabled/disabled. The field “Action” defines the operation to be performed: “enable” – to enable link, “disable” – to disable link. In a bused environment, or in a radial environment if the target IPM controller is not an IPMB hub, the field “Radial IPMB link# (1-95)” must be left empty.

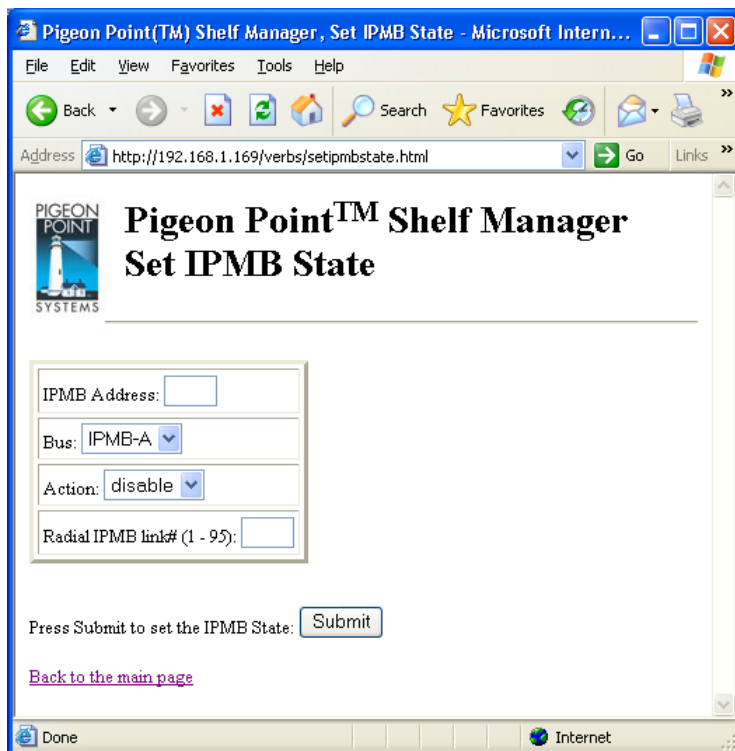


The screenshot shows a web browser window titled "Pigeon Point(TM) Shelf Manager, Set IPMB State - Microsoft Intern...". The address bar shows "http://192.168.1.169/verbs/setipmbstate.html". The page content includes the Pigeon Point Systems logo and the title "Pigeon Point™ Shelf Manager Set IPMB State". Below the title is a form with the following fields:

- IPMB Address:
- Bus:
- Action:
- Radial IPMB link# (1 - 95):

Below the form is a "Submit" button and a link "Back to the main page". The browser status bar at the bottom shows "Done" and "Internet".

After the user fills in the request information and clicks the “Submit” button, the request is executed and the results page is generated similar to the one below.

The output produced by this command is essentially the same as the output produced by the CLI command **setipmbstate**.

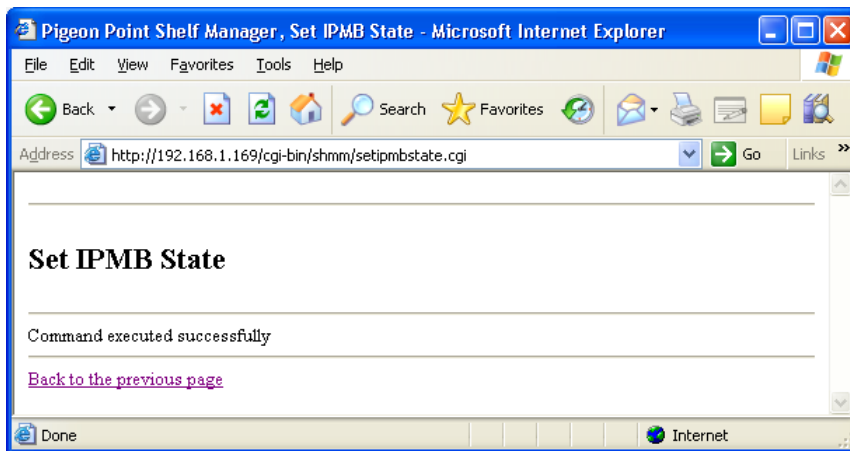


4.26 Set LAN Configuration Information

The page “Set LAN Configuration Information” allows the user to set a value of one of the LAN configuration parameters for the specified channel. The user should identify the field to be modified and the new value, via the following actions:

- choose the target channel
- choose one of the settable parameters from the drop-down configuration parameter list
- choose the set selector (item number) if applicable
- specify the parameter value according to the format for the selected parameter.

The screenshot shows a Microsoft Internet Explorer browser window with the title "Pigeon Point(TM) Shelf Manager, Set LAN Configuration Information". The address bar displays "http://192.168.1.169/verbs/setlanconfig.html". The page content includes the Pigeon Point Systems logo and the title "Pigeon Point™ Shelf Manager Set LAN Configuration Information". Below the title, there are several form fields: "Target Channel:" with a dropdown menu showing "LAN (1)", "Configuration Parameter to set:" with a dropdown menu showing "Authentication Type Enables", "Set selector (if necessary):" with an empty text box, and "Enter the parameter value:" with a large text area. At the bottom, there is a "Submit" button and a link "Back to the main page". The browser's status bar at the bottom shows "Done" and "Internet".

After the user specifies all necessary information and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. This command is essentially equal to the CLI command **setlanconfig**.

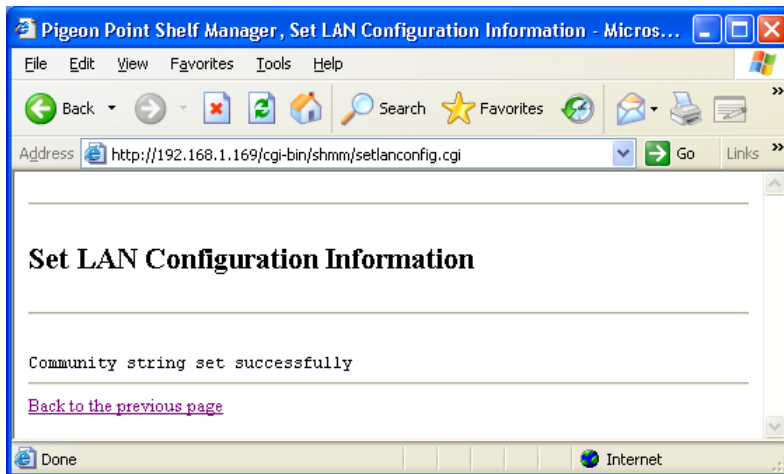

4.27 Set PEF Configuration Information

The page “Set PEF Configuration Information” allows the user to set a value of one of the PEF (Platform Event Filter) configuration parameters.

The user should identify the field to be modified and the new value, via the following actions:


- choose one of the settable parameters from the drop-down list
- choose the set selector (item number) if applicable
- specify the parameter value according to the format for the selected configuration parameter.
The formats are described in the CLI command section for **setpefconfig**.

The screenshot shows a web browser window titled "Pigeon Point(TM) Shelf Manager, Set PEF Configuration Information - Microsoft Internet Explorer". The address bar shows "http://192.168.1.169/verbs/setpef.html". The page content includes the Pigeon Point Systems logo, the title "Pigeon Point™ Shelf Manager Set PEF Configuration Information", and a form with the following fields:

- Configuration Parameter: A drop-down menu with "PEF control" selected.
- Set selector (if necessary): An empty text input field.
- Enter the parameter value: A large empty text input field.
- Press Submit to set the PEF parameter information: A "Submit" button.
- A link: [Back to the main page](#)

After the user specifies all necessary information and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below.

This command is essentially equal to the CLI command **setpefconfig**.

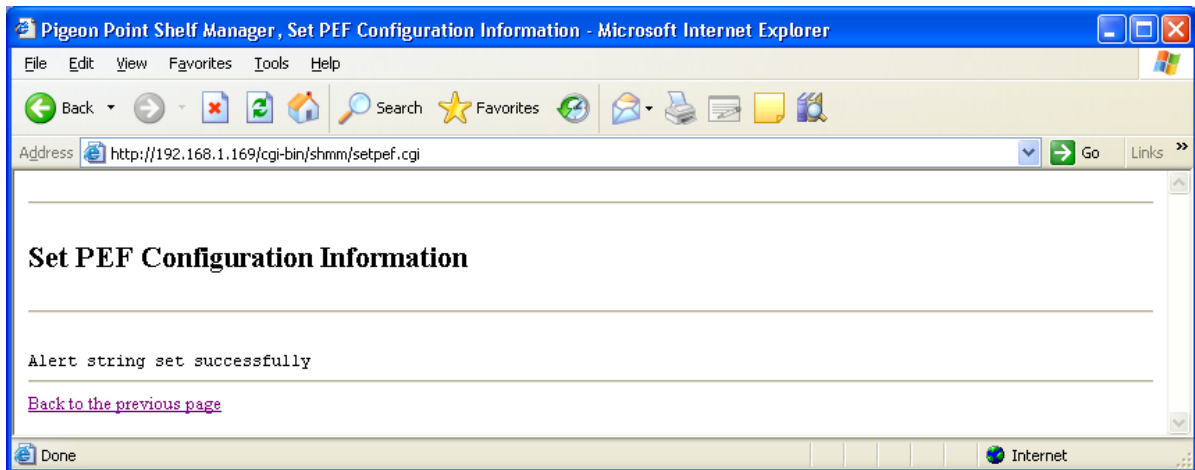

4.28 Set Sensor Event Enable

The page “Set Sensor Event Enable” allows the user to change the event enable mask for the specified sensor. The sensor is specified by the IPMB address of the owning IPM controller and the sensor name or number. Alternatively, the board number or dedicated Shelf Manager number can be used to designate the target IPM controller.

The user is allowed to qualify the sensor number with the Logical Unit Number (LUN) if the target controller supports sensors on multiple LUNs. If the LUN is omitted, the request is applied to the sensor with the specified sensor number on the lowest LUN.

The screenshot shows a web browser window titled "Pigeon Point(TM) Shelf Manager, Set Sensor Event Enable Mask - Microsoft In...". The address bar shows the URL "http://192.168.1.169/verbs/setsensoreventenable.html". The page header includes the Pigeon Point Systems logo and the title "Pigeon Point™ Shelf Manager Set Sensor Event Enable Mask".

The main form is titled "Choose the request type" and contains the following fields:


- ☒ Standard
- ☐ By Site Type / Number
- IPMB Address:
- Board:
- Site Number:
- Sensor Name or LUN:Sensor #:
- Global Mask:
- Assertion Events Mask:
- Deassertion Events Mask:

Below the form, there is a "Submit" button and a link "Back to the main page". The browser status bar at the bottom shows "Done" and "Internet".

For example, if the request specifies sensor 3 without explicit LUN qualification, and the target controller exposes sensor 3 on LUN 1 and another sensor 3 on LUN 3, the action is applied to the sensor 3 on LUN 1.

Sensor names are not qualified with LUN numbers, since it is assumed that sensor names will normally be unique within the controller. To qualify a sensor number with the LUN the user should concatenate the LUN, ‘,’ and the sensor number.

After the user fills in the request information and clicks the “Submit” button, the request is executed and the results page is generated, similar to the one below. The output produced by this command is essentially the same as the output produced by the CLI command **setsensoreventenable**.

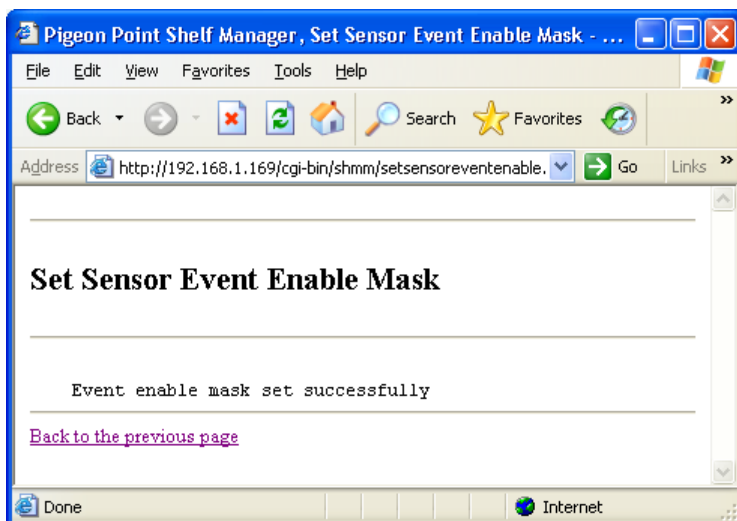

4.29 Set Sensor Thresholds

The page “Set Sensor Thresholds” allows the user to specify the IPM controller address and the sensor number or name for the threshold information request. All fields must be filled in. The new threshold value supplied by the user should be the raw byte value.

The screenshot shows a web browser window titled "Pigeon Point(TM) Shelf Manager, Set Sensor Threshold - Microsoft Internet E...". The address bar shows the URL "http://192.168.1.169/verbs/setthreshold.html". The page content includes the Pigeon Point Systems logo and the title "Pigeon Point™ Shelf Manager Set Sensor Threshold".


The form contains the following elements:

- Choose the request type:** Two radio buttons: "Standard" (selected) and "By Site Type / Number".
- IPMB Address:** A text input field.
- Board:** A dropdown menu.
- Site Number:** A text input field.
- Sensor Name or LUN:Sensor #:** A text input field.
- Threshold Type:** A list of radio buttons:
 - Upper Non Critical Threshold
 - Upper Critical Threshold (selected)
 - Upper Non Recoverable Threshold
 - Lower Non Critical Threshold
 - Lower Critical Threshold
 - Lower Non Recoverable Threshold
- Threshold value (raw):** A text input field.
- Submit:** A button labeled "Submit".
- Back to the main page:** A link.

The browser's status bar at the bottom shows "Done" and "Internet".

In the field “Sensor Name or LUN:Sensor #”, the user can identify the target sensor by specifying the sensor name or specifying the sensor LUN and sensor number. In the last case, the LUN is optional; if specified, it is separated from the sensor number with a colon. Valid values for the LUN are 0, 1 and 3. (LUN 2 is reserved.)

If the user specifies only the sensor number, the target sensor will be the sensor with the specified sensor number on the lowest LUN. For example, if the target IPM controller exposes sensors with the number 3 on LUNs 1 and 3, specifying sensor number 3 causes the command to affect sensor 3 on LUN 1.

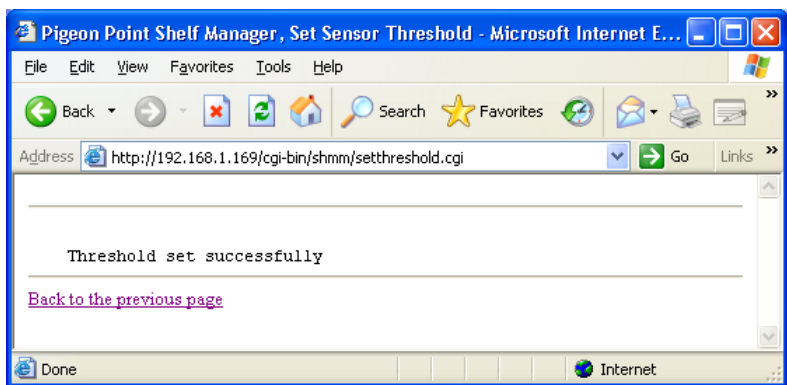

After the user fills in all fields and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. This command is essentially equal to the CLI command **setthreshold**.

4.30 Set Sensor Hysteresis


The page “Set Sensor Hysteresis” allows the user to set value for the positive-going and negative-going hystereses of the specified sensor. The user should identify the IPM controller address and the sensor number or name and the hysteresis to be set. All fields must be filled in. The new hysteresis value supplied by the user should be a raw byte value.

The screenshot shows a web browser window titled "Pigeon Point(TM) Shelf Manager, Set Sensor Hysteresis - Microsoft Internet E...". The address bar shows "http://192.168.1.169/verbs/sethysteresis.html". The page content includes the Pigeon Point Systems logo and the title "Pigeon Point™ Shelf Manager Set Sensor Hysteresis". Below the title is a form with the following elements:

- A section titled "Choose the request type" with two radio buttons: "Standard" (selected) and "By Site Type / Number".
- Below "Standard" are two text input fields: "IPMB Address:" and "Sensor Name or LUN:Sensor#:". There is also a "Board" dropdown menu and a "Site Number:" text input field.
- Below "By Site Type / Number" is a "Threshold Type:" section with two radio buttons: "Positive Hysteresis" (selected) and "Negative Hysteresis".
- A "Hysteresis value (raw):" text input field.
- A "Submit" button.
- A link "Back to the main page" at the bottom.

The browser's status bar at the bottom shows "Done" and "Internet".

After the user fills in all fields and clicks the “Submit” button, the request is executed and the result page is shown, similar to the one below. This command is essentially equal to the CLI command **sethysteresis**.

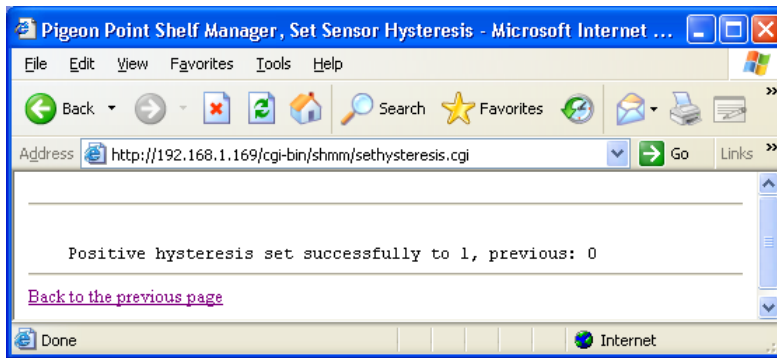

4.31 Shelf Information

The page “Shelf Information” allows the user to request information items from the Shelf FRU Information, plus some current operating parameters of the shelf. Currently, four information types are provided:

- Cooling State
- Address Table
- Power Distribution
- Power Management.

Pigeon Point™ Shelf Manager
Shelf Information

Choose the request type

☒ Cooling State

☐ Address Table

☐ Power Management

☐ Power Distribution

☐ PCI Connectivity

☐ HA Connectivity

☐ H110 Connectivity

☐ Point-to-Point Connectivity

☐ MaxCurrent Feed #: Amps

☐ MinVoltage Feed #: Volts

☐ Activation

☒ Standard Hardware Address: FRU ID:

☐ By Site Type / Number Board Site Number:

Enable

After the user chooses the information type and clicks the “Submit” button, the request is executed and the results page is shown.

The output is essentially equal to the output produced by the CLI command **shelf** command with a corresponding subcommand. The output page for the information type “Address Table” is shown below.

Shelf Information: Address Table


```

PICMG Address Table Record (ID=0x10)
  Version = 0
  Shelf Address      = 0x1C
  Address Table Entries# = 25
    Hw Addr: 08 (10), Site # 1, Type: "Dedicated ShMC" 03
    Hw Addr: 09 (12), Site # 2, Type: "Dedicated ShMC" 03
    Hw Addr: 10 (20), Site # 1, Type: "OEM" c0
    Hw Addr: 10 (20), Site # 1, Type: "Shelf FRU Information" 02
    Hw Addr: 10 (20), Site # 2, Type: "Shelf FRU Information" 02
    Hw Addr: 10 (20), Site # 1, Type: "Fan Tray" 04
    Hw Addr: 10 (20), Site # 2, Type: "Fan Tray" 04
    Hw Addr: 10 (20), Site # 3, Type: "Fan Tray" 04
    Hw Addr: 10 (20), Site # 1, Type: "Power Entry" 01
    Hw Addr: 10 (20), Site # 2, Type: "Power Entry" 01
    Hw Addr: 10 (20), Site # 1, Type: "Alarm" 06
    Hw Addr: 41 (82), Site # 7, Type: "AdvancedTCA Board" 00
    Hw Addr: 42 (84), Site # 8, Type: "AdvancedTCA Board" 00
    Hw Addr: 43 (86), Site # 6, Type: "AdvancedTCA Board" 00
    Hw Addr: 44 (88), Site # 9, Type: "AdvancedTCA Board" 00
    Hw Addr: 45 (8a), Site # 5, Type: "AdvancedTCA Board" 00
    Hw Addr: 46 (8c), Site # 10, Type: "AdvancedTCA Board" 00
    Hw Addr: 47 (8e), Site # 4, Type: "AdvancedTCA Board" 00
    Hw Addr: 48 (90), Site # 11, Type: "AdvancedTCA Board" 00
    Hw Addr: 49 (92), Site # 3, Type: "AdvancedTCA Board" 00
    Hw Addr: 4a (94), Site # 12, Type: "AdvancedTCA Board" 00
    Hw Addr: 4b (96), Site # 2, Type: "AdvancedTCA Board" 00
    Hw Addr: 4c (98), Site # 13, Type: "AdvancedTCA Board" 00
    Hw Addr: 4d (9a), Site # 1, Type: "AdvancedTCA Board" 00
    Hw Addr: 4e (9c), Site # 14, Type: "AdvancedTCA Board" 00
  
```


[Back to the previous page](#)

4.32 Switchover

The page “Switchover” allows the user to initiate a switchover from Active to Backup Shelf Manager.

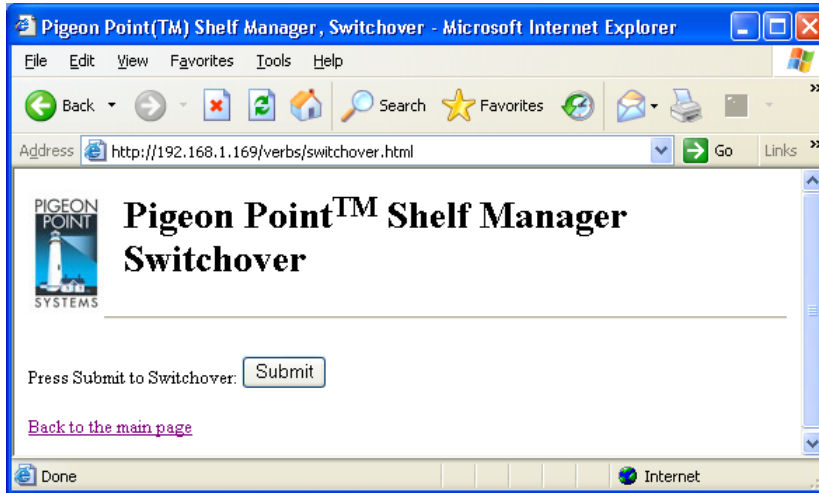

After the user clicks the “Submit” button, the request is executed and the following results page is shown. The output is essentially equal to the output produced by the CLI command **switchover**. Alternatively, the browser may report on an error because the Shelf Manager shuts down before the boa demon produces the results page.

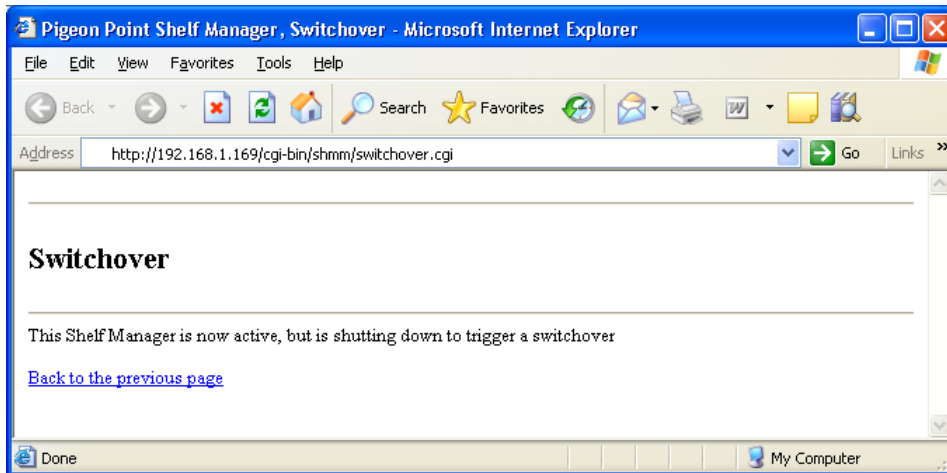

4.33 System Event Log

The page “System Event Log” allows the user to specify parameters for the System Event Log (SEL) information request or clear the event log.

To retrieve system event log information, choose the upper radio option “Get Items from SEL”.

Some of the fields may be left blank; in that case:

- if the IPM controller address is left blank, the SEL is accessed on the Shelf Manager (IPMB address 20h).
- if the parameter “Number of last items to get” is omitted, the entire SEL is retrieved.

To clear the system event log, choose the middle radio option. The IPM controller address may be left blank; in that case, the SEL on the Shelf Manager (IPMB address 20h) is cleared.

To retrieve information about the system event log, choose the lower radio option. The IPM controller address may be left blank; in that case, the information about the SEL on the ShMC (IPMB address 20h) is provided.

The screenshot shows a web browser window titled "Pigeon Point(TM) Shelf Manager, System Event Log - Microsoft Internet Explo...". The address bar shows "http://192.168.1.169/verbs/sel.html". The page content includes a logo for "PIGEON POINT SYSTEMS" and the title "Pigeon Point™ Shelf Manager System Event Log". Below the title is a form with the following elements:


- Choose the request type:**
 - ☒ Standard
 - ☐ By Site Type / Number
- IPMB Address:**
- Board:**
- Site Number:**
- ☒ Get Items from SEL
- Number of last items to get:**
- ☐ Clear SEL
- ☐ Get SEL Info

Below the form, there is a section for "Choose verbosity level:" with two radio buttons:


- ☐ Verbose Mode
- ☒ Ordinary Mode

At the bottom, there is a "Submit" button and a link "Back to the main page". The browser status bar at the bottom shows "Done" and "Internet".

After the user chooses the upper radio option and fills in desired fields and clicks the “Submit” button, the request is executed and the results page is shown, similar to the one below. The output is essentially equal to the output produced by the CLI command **sel**.

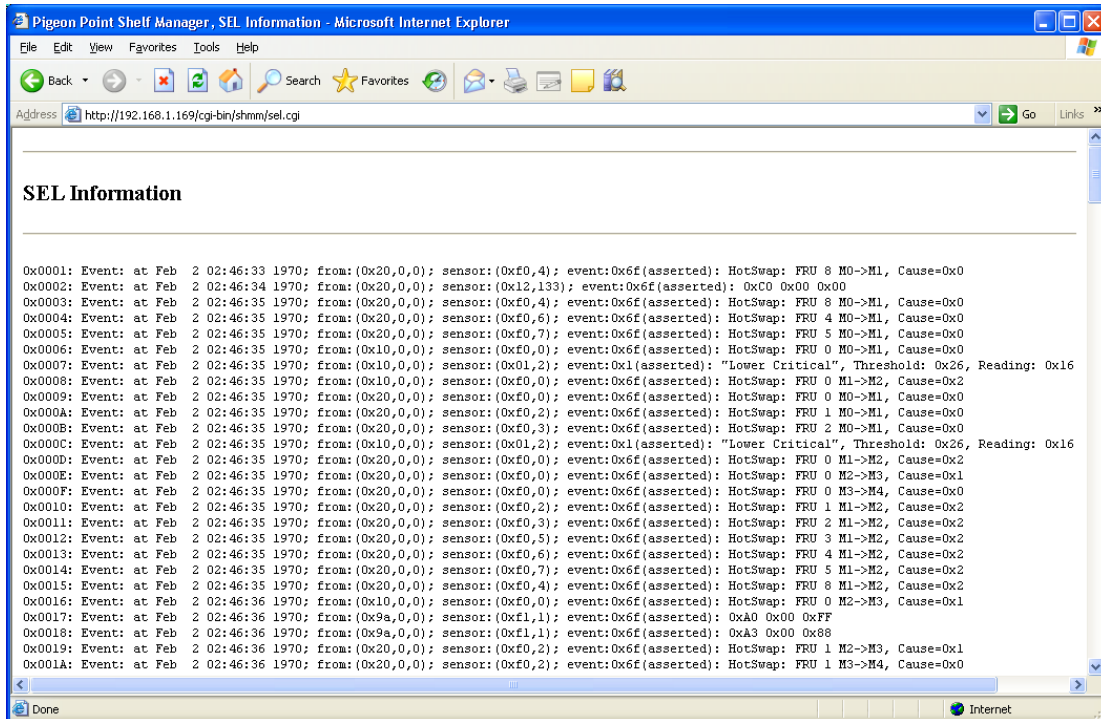


After the user chooses the middle radio option and clicks the “Submit” button, the request to clear SEL is executed and the results page is shown, similar to the one below. This command is essentially equal to the CLI command **sel clear**.

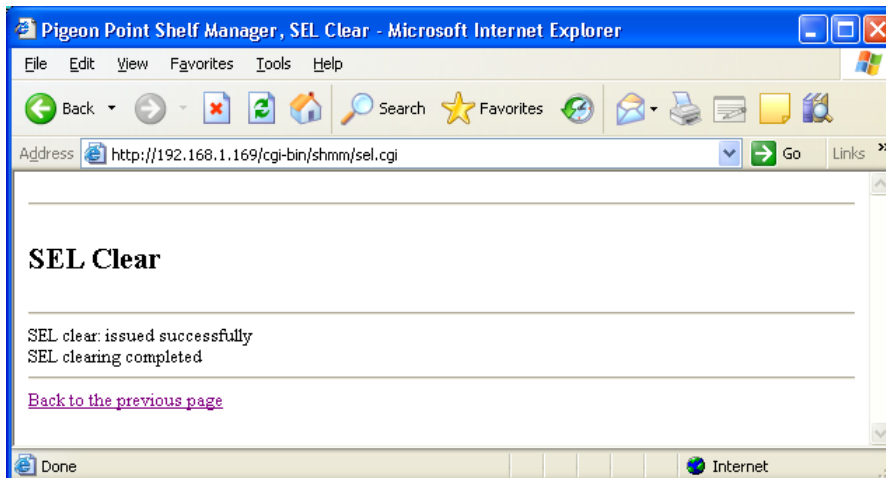


After the user chooses the lower radio option and clicks the “Submit” button, the request to get information about SEL is executed and the results page is shown, similar to the one below.

This command is essentially equal to the CLI command `sel info`. The fields in the lower form may be left blank.

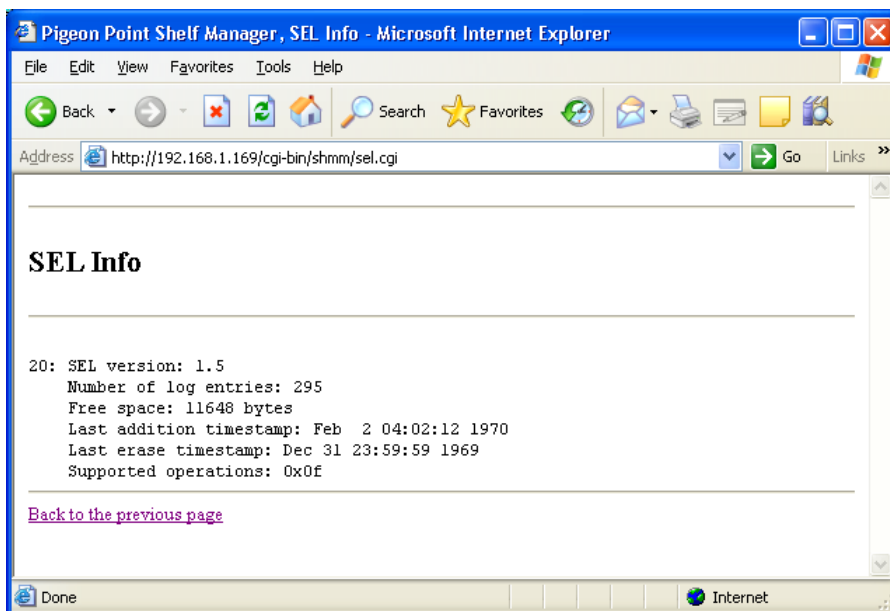


4.34 Unhealthy System Components

The page “Unhealthy System Components” allows the user to request information about unhealthy system components. To request information, the user should press the “Submit” button.

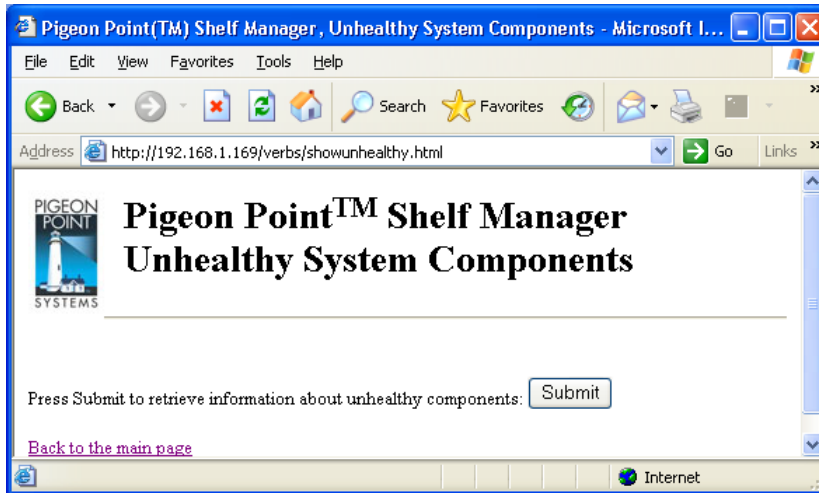


After the user clicks the “Submit” button, the request is executed and the results page is shown.

Usually this page will be empty, but may show some unhealthy components as in the example below. The output is essentially equal to the output produced by the CLI command **showunhealthy**.

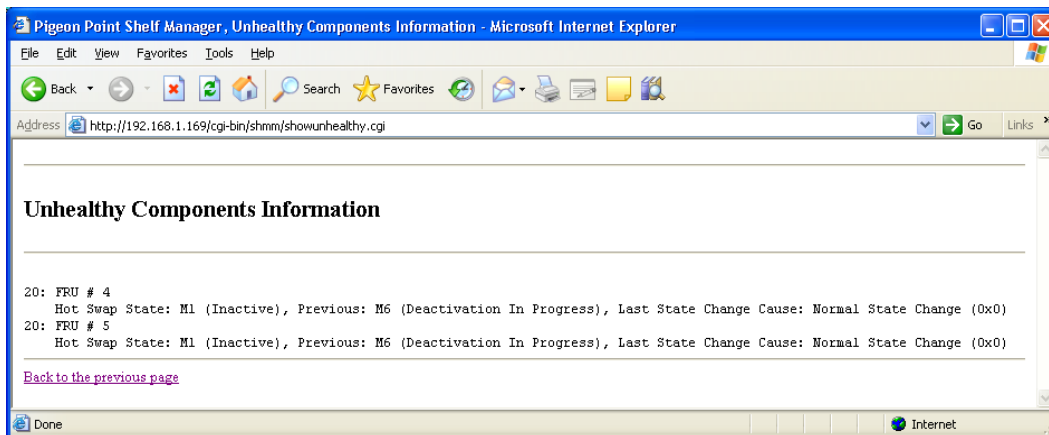


4.35 Version

The page “Version” allows the user to request information about the software version of the Pigeon Point Shelf Manager.

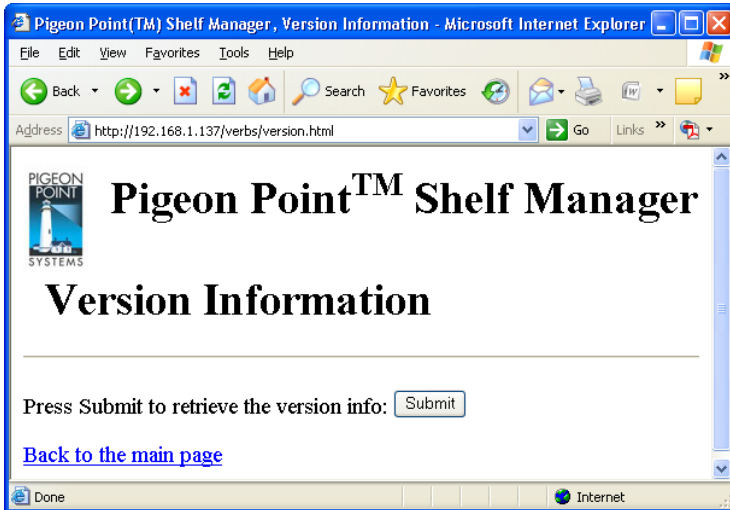

After the user clicks the “Submit” button, the request is executed and a results page similar to the following one is shown. The output is essentially equal to the output produced by the CLI command `version`.

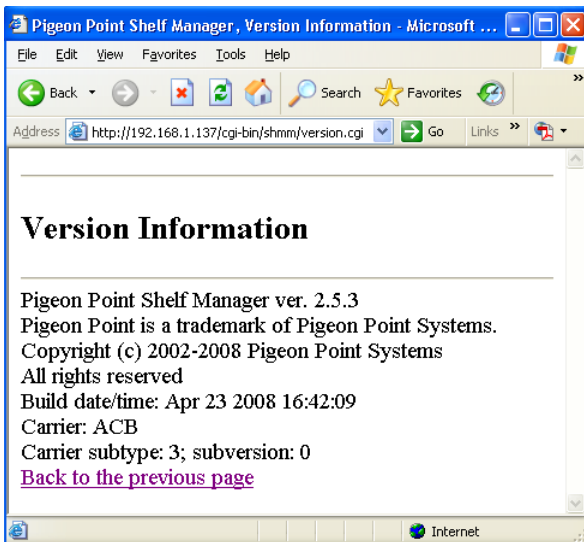

5 Simple Network Management Protocol (SNMP)

The Pigeon Point Shelf Manager supports a Simple Network Management Protocol (SNMP) interface to the shelf configuration and control variables. The following groups of variables are supported by this interface:

- IPM Controllers
- FRU Devices
- Sensors
- Boards
- Shelf/shelves
- System Event Log
- LAN Configuration Parameters
- PEF Configuration Parameters

According to SNMP rules, the variables from these groups are represented via a hierarchical data model, each variable identified via an object identifier (OID). These object identifiers have a common root OID:

```
iso(1).org(3).dod(6).internet(1).private(4).enterprises(1).pps(16394).products(2).chassis-management(1).ipm-sentry-shelf-manager(1)
```

16394 is a unique private Pigeon Point Systems enterprise number obtained from IANA. The root OID in the remainder of this section is denoted as **<ROOT_OID>**.

The structure of the branches of the SNMP variables tree is described in the following subsections. The definition of SNMP variables provided by the Shelf Manager is contained in a Management Information Base (MIB) file. This file should be installed on the management system (the one that interacts with the Shelf Manager over the network). It depends on the SNMP client software how the MIB file should be installed on the management system; usually this file must be placed in a special location on the management system and compiled with a MIB compiler.

The Shelf Manager SNMP interface provides two groups of MIB variables: Basic and Advanced. The Basic MIB variables provide user-friendly access to the information that can be retrieved from the Pigeon Point Shelf Manager. It ensures that all objects are indexed naturally for the user. Also, information in the Basic MIB variables is processed to be more readable and easily understandable for a user who is inexperienced with the details of IPMI.

The Advanced MIB variables assume that the user is experienced enough to use the indexing by IPMB address and FRU ID which are natural for the objects described in the IPMI 1.5.1 and PICMG 3.0 specifications. Accessing the variables described in the Advanced MIB variables is more simple and robust than accessing the Basic MIB variables, but the variables are delivered to the user in non-processed format.

It is worth mentioning that in certain cases, using the Advanced MIB variables, information can be retrieved even though an “object unavailable” error is reported when using Basic MIB variables. This happens because the information is internally handled differently: in most cases the Basic MIB variables access Shelf FRU Information that can be unavailable, corrupted or contain incomplete information. Access to Advanced MIB variables in most cases does not require retrieving data from the Shelf FRU: information that is cached internally in the Shelf Manager is used instead. The user can use both Basic and Advanced MIB variables simultaneously.

In redundant configurations, the external IP address is always maintained by the active Shelf Manager and is switched over to the backup Shelf Manager when the general switchover takes place. Therefore, if the client uses the SNMP interface with the external IP address of the Shelf Manager in redundant configurations, it always communicates to the active Shelf Manager.

The backup Shelf Manager can however be accessed via SNMP, if it exposes a private IP address. In that case, Basic MIB variables are not supported; in the Advanced MIB variable tree, only the Shelf variables (see 5.2.6) are supported.

Using the existing U-Boot variable `ipaddr`, each ShMM (both active and backup) can be assigned its own IP address for the Ethernet adapter “eth0”, which will be available immediately after Monterey Linux starts on a given ShMM. On the active ShMM, this IP addresses will coexist with the RMCP address on Ethernet adapter 0.

On the backup Shelf Manager, this ShMM-specific IP address will be preserved across switchovers. That is, both active and backup ShMMs are always accessible via these ShMM-specific addresses, but the RMCP address is always served by the active Shelf Manager. Please see the Pigeon Point Shelf Manager User Guide for additional background on this topic.

It should be mentioned that access to some SNMP variables may require FRU data read or write operations to be invoked. In some cases an entire FRU Info section (Board Info for example) is retrieved as part of this process, and access to such variables may take a rather long time. However, once retrieved, FRU information is cached and any further access to this data will use the cache, and will be faster.

5.1 Basic MIB Variables

5.1.1 Board Variables

The variables defined in this section contain information about the CompactPCI boards in 2.x systems or ATCA boards in ATCA systems. This information is provided in the form of an SNMP table. Each entry in this table provides information about a single board. Entries are indexed by a Physical Slot number, which is equal to the site number. This group of variables is uses the prefix **board-basic** to distinguish them from the board variables in described in the Advanced MIB Variables section.

CompactPCI board-basic information variables have the following OID:

`<ROOT_OID>.32.1.<var>.<boardnum>`

Here **<var>** is the index of a particular variable in the table entry describing a particular board slot. The variable indices are defined in the table below. **<boardnum>** is the Physical Board number.

Table 13 Board Variable Indices

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
board-basic-slot-number	1	INTEGER	Read-only	Table entry index, equal to <boardnum>
board-basic-present	2	INTEGER	Read-only	1 – if board is present in the slot, 0 – otherwise.
board-basic-healthy	3	INTEGER	Read-only	1 – if board is present and healthy, 0 – otherwise.
board-basic-reset	4	INTEGER	Read-write	When reading: 1 – if board is in the reset state, 0 – otherwise. Writing 1 to this variable triggers a reset of the specified board.
board-basic-powered	5	INTEGER	Read-write	When reading: 1 – if board is the powered state, 0 – otherwise, -1 – if information is unavailable. Writing to this variable powers the specified board ON (if value=1) or OFF (if value=0). The variable currently returns an accurate value only on CompactPCI shelves where a radial BD_SEL# signal directly corresponds to the state of backend power for the CompactPCI board.

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
board-basic-slave-address	6	INTEGER	Read-only	8-bit Slave address of the IPM controller representing this board on IPMB. If the unit in question is not currently installed, then return -1. If the unit in question is installed, but does not have an active/working IPM controller, return 32 (20h). If the unit is installed and has an IPM controller, return the IPM controller's slave address.
board-basic-fru-device-id	7	INTEGER	Read-only	The FRU Device ID of the board. If the unit in question is not currently installed, then return -1. If the unit in question is installed, but does not have an active/working IPM controller, return the control FRU ID. The control FRU ID is used in conjunction with the BMC IPMI address (20h), and represents the board to the BMC so that it can be managed via the IPMI interface. This is applicable to CompactPCI systems only. If the unit is installed and has an IPM controller, returns 0.

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
board-basic-fruinfo-product-area-present	8	INTEGER	Read-only	1 – if the product area is present within the board FRU Information, 0 – otherwise.
board-basic-fruinfo-product-manufacturer	9	DisplayString	Read-only	Returns the product manufacturer from the board FRU Information or “N/A”
board-basic-fruinfo-product-name	10	DisplayString	Read-only	Returns the product name from the board FRU Information or “N/A”
board-basic-fruinfo-product-part-model-number	11	DisplayString	Read-only	Returns the product part model number from the board FRU Information or “N/A”
board-basic-fruinfo-product-version-number	12	DisplayString	Read-only	Returns the product version from the board FRU Information or “N/A”
board-basic-fruinfo-product-serial-number	13	DisplayString	Read-only	Returns the product serial number from the board FRU Information or “N/A”
board-basic-fruinfo-board-area-present	14	INTEGER	Read-only	1 – if the board area is present within the board FRU Information, 0 – otherwise.
board-basic-fruinfo-board-manufacturer	15	DisplayString	Read-only	Returns the board manufacturer from the board FRU Information or “N/A”
board-basic-fruinfo-board-product-name	16	DisplayString	Read-only	Returns the board product name from the board FRU Information or “N/A”
board-basic-fruinfo-board-serial-number	17	DisplayString	Read-only	Returns the board serial number from the board FRU Information or “N/A”

For example, to check the powered state of the board in slot 8, use the following OID:
 <ROOT_OID>.32.1.5.8

5.1.2 Fan Tray Variables

The variables defined in this section contain information about the Fan Trays in the system. This information is provided in the form of an SNMP table. Each entry in this table provides information about a single Fan Tray. Entries are indexed by a physical Fan Tray number which is equal to Fan Tray site number.

Fan Tray information variables have the following OID:
<ROOT_OID>.33.1.<var>.<fantraynum>

Here **<var>** is the index of a particular variable in the table entry describing a particular Fan Tray slot. The variable indices are defined in the table below. **<fantraynum>** is the Physical Fan Tray number.

Table 14 Basic Fan Tray Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
fantray-slot-number	1	INTEGER	Read-only	Table entry index, equal to <fantraynum>
fantray-present	2	INTEGER	Read-only	1 – if fan tray is present in the slot, 0 – otherwise.
fantray-healthy	3	INTEGER	Read-only	1 – if fan tray is present and healthy, 0 – otherwise.
fantray-health-led	4	INTEGER	Read-write	When reading: the led state is returned (0 = off, 1 = on). Writing to this variable turns the led on (value=1) or off (value=0). This variable is available in 2.x systems only. In ATCA systems it always is equal to -1.

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
fantray-slave-address	5	INTEGER	Read-only	The 8-bit Slave address of the IPM controller representing this Fan Tray on IPMB. If the unit in question is not currently installed, then return -1. If the unit in question is installed, but does not have an active/working IPM controller, return 32 (20h). If the unit is installed and has an IPM controller, return the IPM controller's slave address.
fantray-fru-device-id	6	INTEGER	Read-only	The FRU Device ID of the fan tray. If the unit in question is not currently installed, then return -1. If the unit in question is installed, but does not have an active/working IPM controller, return the control FRU ID. The control FRU ID is used in conjunction with the BMC IPMI address (20h), and represents the fan to BMC so that the fan tray can be managed via the IPMI interface. This is applicable to CompactPCI systems only.
fantray-fruinfo-product-area-present	7	INTEGER	Read-only	1 – if the product area is present within the fan tray FRU Information, 0 – otherwise.
fantray-fruinfo-product-manufacturer	8	DisplayString	Read-only	Returns the product manufacturer from the fan tray FRU Information, or "N/A"
fantray-fruinfo-product-name	9	DisplayString	Read-only	Returns the product name from the fan tray FRU Information, or "N/A"

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
fantray-fruinfo-product-part-model-number	10	DisplayString	Read-only	Returns the product part model number from the fan tray FRU Information, or "N/A"
fantray-fruinfo-product-version-number	11	DisplayString	Read-only	Returns the product version from the fan tray FRU Information, or "N/A"
fantray-fruinfo-product-serial-number	12	DisplayString	Read-only	Returns the product serial number from the fan tray FRU Information, or "N/A"
fantray-fruinfo-board-area-present	13	INTEGER	Read-only	1 – if the board area is present within the fan tray FRU Information, 0 – otherwise.
fantray-fruinfo-board-manufacturer	14	DisplayString	Read-only	Returns the board manufacturer from the fan tray FRU Information, or "N/A"
fantray-fruinfo-board-product-name	15	DisplayString	Read-only	Returns the board product name from the fan tray FRU Information, or "N/A"
fantray-fruinfo-board-serial-number	16	DisplayString	Read-only	Returns the board serial number from the fan tray FRU Information, or "N/A"
fantray-fruinfo-board-part-number	17	DisplayString	Read-only	Returns the board part number from the fan tray FRU Information, or "N/A"
fantray-fruinfo-board-manufacture-time	18	INTEGER	Read-only	Returns the board manufacturing time: the number of seconds since 00:00:00, January 1, 1970, Coordinated Universal Time (UTC); -1 if the corresponding field is not present in the fan tray FRU information

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
fantray-fan-level	19	OCTET STRING (SIZE(1..3))	Read-write	Returns Override Fan Level, Local Control Fan Level, Local Control Enable State as reported by the controller in a "Get Fan Level" response on reading. Local Control Fan Level and Local Control Enable State are optional fields. When writing, byte values for Fan Level and optional Local Control Enable State should be supplied as in a "Set Fan Level" command request.

For example, to check the led state of the Fan Tray # 8, use the following OID:
<ROOT_OID>.33.1.4.8

5.1.3 Power Supply Variables

The variables defined in this section contain information about the Power Supplies in the system. This information is provided in the form of an SNMP table. Each entry in this table provides information about a single Power Supply. Entries are indexed by a physical Power Supply number which is equal to site number.

Power Supply information variables have the following OID:
<ROOT_OID>.34.1.<var>.<powersupplynum>

Here **<var>** is the index of a particular variable in the table entry describing a particular Power Supply slot. The variable indices are defined in the table below. **<powersupplynum>** is the Physical Power Supply number.

If a variable defined in this section is available in non-2.x systems, then it contains information about a Power Entry Module in the system.

The following variables are defined for each power supply slot:

Table 15 Basic Power Supply Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
powersupply-slot-number	1	INTEGER	Read-only	Table entry index, equal to <powersupplynum> .
powersupply-degrade	2	INTEGER	Read-only	1 – if power supply is in the Degraded state, 0 – otherwise. This variable is available in 2.x systems only.
powersupply-fail	3	INTEGER	Read-only	1 – if power supply is in the Failed state, 0 – otherwise. This variable is available in 2.x systems only.
powersupply-inhibit	4	INTEGER	Read-write	1 – if power supply is in the Inhibited state, 0 – otherwise. Writing a value to this field inhibits the power supply (if value=1) or re-enables it (if value=0). This variable is available in 2.x systems only.

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
powersupply-healthy	5	INTEGER	Read-only	1 – if power supply is healthy, 0 – otherwise.
powersupply-slave-address	6	INTEGER	Read-only	The 8-bit Slave address of the IPM controller representing this Power supply on IPMB. If the unit in question is not currently installed, then return -1. If the unit in question is installed, but does not have an active/working IPM controller, return 32 (20h). If the unit is installed and has an IPM controller, return the IPM controller's slave address.
powersupply-fru-device-id	7	INTEGER	Read-only	The FRU Device ID of the power supply. If the unit in question is not currently installed, then return -1. If the unit in question is installed, but does not have an active/working IPM controller, returns the control FRU ID. The control FRU ID is used in conjunction with the BMC IPMI address (20h), and represents the power supply to the BMC so that the power supply can be managed via the IPMI interface. This is applicable to CompactPCI systems only.
powersupply-fruinfo-product-area-present	8	INTEGER	Read-only	1 – if the product area is present within the power supply FRU Information, 0 – otherwise.

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
powersupply-fruinfo-product-manufacturer	9	DisplayString	Read-only	Returns the product manufacturer from the power supply FRU Information, or "N/A"
powersupply-fruinfo-product-name	10	DisplayString	Read-only	Returns the product name from the power supply FRU Information, or "N/A"
powersupply-fruinfo-product-part-model-number	11	DisplayString	Read-only	Returns the product part model number from the power supply FRU Information, or "N/A"
powersupply-fruinfo-product-version-number	12	DisplayString	Read-only	Returns the product version from the power supply FRU Information, or "N/A"
powersupply-fruinfo-product-serial-number	13	DisplayString	Read-only	Returns the product serial number from the power supply FRU Information, or "N/A"
powersupply-fruinfo-board-area-present	14	INTEGER	Read-only	1 – if the board area is present within the power supply FRU Information, 0 – otherwise.
powersupply-fruinfo-board-manufacturer	15	DisplayString	Read-only	Returns the board manufacturer from the power supply FRU Information, or "N/A"
powersupply-fruinfo-board-product-name	16	DisplayString	Read-only	Returns the board product name from the power supply FRU Information, or "N/A"
powersupply-fruinfo-board-serial-number	17	DisplayString	Read-only	Returns the board serial number from the power supply FRU Information, or "N/A"
powersupply-fruinfo-board-part-number	18	DisplayString	Read-only	Returns the board part number from the power supply FRU Information, or "N/A"

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
powersupply-fruinfo-board-manufacture-time	19	INTEGER	Read-only	Returns the board manufacturing time: the number of seconds since 00:00:00, January 1, 1970, Coordinated Universal Time (UTC); -1 if the corresponding field is not present in the power supply FRU information

For example, to check the degrade state of the Power Supply # 3, use the following OID:
<ROOT_OID>.34.1.2.3

5.1.4 Shelf Manager Variables

The variables defined in this section contain information about the Shelf Managers in the system. This information is provided in the form of an SNMP table. Each entry in this table provides information about a single Shelf Manager. Entries are indexed by a physical Shelf Manager number, which is equal to the site number.

Shelf Manager information variables have the following OID:
<ROOT_OID>.35.1.<var>.<shelfmanagernum>

Here **<var>** is the index of a particular variable in the table entry describing a particular Shelf manager slot. The variable indices are defined in the table below. **<shelfmanagernum>** is the Physical Shelf Manager number.

Table 16 Basic Shelf Manager Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
shelf-manager-slot-number	1	INTEGER	Read-only	Table entry index, equal to <shelfmanagernum>
shelf-manager-ipmc-slave-address	2	INTEGER	Read-only	The 8-bit Slave address of the IPM controller representing this Shelf Manager on IPMB.
shelf-manager-present	3	INTEGER	Read-only	1 – if Shelf Manager is present in the slot, 0 – otherwise.
shelf-manager-healthy	4	INTEGER	Read-only	1 – if Shelf Manager is healthy, 0 – otherwise.

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
shelf-manager-active	5	INTEGER	Read-write	1 – if Shelf Manager is active, 0 – otherwise. Writing 0 to this field triggers a reboot of the Shelf Manager, causing a switchover to the other Shelf Manager
shelf-manager-reset	6	INTEGER	Read-write	1 – if Shelf Manager is in the reset state, 0 – otherwise. Writing 1 to this field triggers a reset of the target Shelf Manager if the other Shelf Manager is present (works similar to the IPMI “Cold Reset” command)
shelf-manager-fruinfo-product-area-present	7	INTEGER	Read-only	1 – if the product area is present within the Shelf Manager FRU Information, 0 – otherwise.
shelf-manager-fruinfo-product-manufacturer	8	DisplayString	Read-only	Returns the product manufacturer from the Shelf Manager FRU Information, or “N/A”
shelf-manager-fruinfo-product-name	9	DisplayString	Read-only	Returns the product name from the Shelf Manager FRU Information, or “N/A”
shelf-manager-fruinfo-product-part-model-number	10	DisplayString	Read-only	Returns the product part model number from the Shelf Manager FRU Information, or “N/A”
shelf-manager-fruinfo-product-version-number	11	DisplayString	Read-only	Returns the product version from the Shelf Manager FRU Information, or “N/A”

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
shelf-manager-fruinfo-product-serial-number	12	DisplayString	Read-only	Returns the product serial number from the Shelf Manager FRU Information, or "N/A"
shelf-manager-fruinfo-board-area-present	13	INTEGER	Read-only	1 – if the board area is present within the Shelf Manager FRU Information, 0 – otherwise.
shelf-manager-fruinfo-board-manufacturer	14	DisplayString	Read-only	Returns the board manufacturer from the Shelf Manager FRU Information, or "N/A"
shelf-manager-fruinfo-board-product-name	15	DisplayString	Read-only	Returns the board product name from the Shelf Manager FRU Information, or "N/A"
shelf-manager-fruinfo-board-serial-number	16	DisplayString	Read-only	Returns the board serial number from the Shelf Manager FRU Information, or "N/A"
shelf-manager-fruinfo-board-part-number	17	DisplayString	Read-only	Returns the board part number from the Shelf Manager FRU Information, or "N/A"
shelf-manager-fruinfo-board-manufacture-time	18	INTEGER	Read-only	Returns the board manufacturing time: the number of seconds since 00:00:00, January 1, 1970, Coordinated Universal Time (UTC); -1 if the corresponding field is not present in the Shelf Manager FRU information

For example, to check the slave address of the Shelf Manager # 2, use the following OID:
`<ROOT_OID>.35.1.2.2`

5.1.5 Chassis Variables

The variables defined in this section contain information about the Chassis (Shelf). This information is provided in the form of an SNMP branch. Each entry in this table provides information about a single Chassis. Entries are indexed by a physical Chassis number.

Chassis information variables have the following OID:

<ROOT_OID>.36.<var>

Here **<var>** is the index of a particular variable in the table entry.

Table 17 Basic Chassis Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
chassis-id	1	DisplayString	Read-write	Read/ Write Shelf Address
chassis-type	2	INTEGER	Read-only	The 8-bit Chassis Type from the Shelf FRU Information
chassis-part-number	3	DisplayString	Read-only	Chassis Part Number from the Shelf FRU Information
chassis-serial-number	4	DisplayString	Read-only	Chassis Serial Number from the Shelf FRU Information
chassis-product-area-present	5	INTEGER	Read-only	1 – if the product area is present within the Shelf FRU Information, 0 – otherwise.
chassis-product-manufacturer	6	DisplayString	Read-only	Returns the product manufacturer from the Shelf FRU Information or “N/A”
chassis-product-name	7	DisplayString	Read-only	Returns the product name from the Shelf FRU Information or “N/A”
chassis-product-part-model-number	8	DisplayString	Read-only	Returns the product part model number from the Shelf FRU Information or “N/A”
chassis-product-version-number	9	DisplayString	Read-only	Returns the product version from the Shelf FRU Information or “N/A”
chassis-product-serial-number	10	DisplayString	Read-only	Returns the product serial number from the Shelf FRU Information or “N/A”

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
chassis-board-area-present	11	INTEGER	Read-only	1 – if the board area is present within the Shelf FRU Information, 0 – otherwise.
chassis-board-manufacturer	12	DisplayString	Read-only	Returns the board manufacturer from the Shelf FRU Information or "N/A"
chassis-board-product-name	13	DisplayString	Read-only	Returns the board product name from the Shelf FRU Information or "N/A"
chassis-board-serial-number	14	DisplayString	Read-only	Returns the board serial number from the Shelf FRU Information or "N/A"
chassis-board-part-number	15	DisplayString	Read-only	Returns the board part number from the Shelf FRU Information or "N/A"
chassis-board-manufacture-time	16	INTEGER	Read-only	Returns the board manufacturing time: the number of seconds since 00:00:00, January 1, 1970, Coordinated Universal Time (UTC); -1 if the corresponding field is not present in the Shelf FRU information

For example, to check the chassis type use the following OID:
<ROOT_OID>.36.2.0

5.1.6 Event Variables

The variables defined in this section contain information about the SEL entries in the system. This information is provided in the form of an SNMP table. Each entry in this table provides information about a single SEL entry.

SEL entry information variables have the following OID:

<ROOT_OID>.37.1.<var>.<selentrynum>

Here **<var>** is the index of a particular variable in the table entry describing a particular SEL entry. The variable indices are defined in the table below. **<selentrynum>** is the sel entry number.

Table 18 Basic Event Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
event-index	1	INTEGER	Read-only	Table entry index, equal to <selentrynum>
event-delete	2	INTEGER	Read-write	Returns 0 on reading, Writing 1 causes the current SEL entry to be deleted.
event-timestamp	3	INTEGER	Read-only	Timestamp of the SEL entry
event-class	4	INTEGER	Read-only	Event class other (0), temperature (1), voltage (2), current (3), fan (4), HotSwap ('F0'H), PowerState ('E1'H)

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
event-type	5	INTEGER	Read-only	Event type other (0), aboveUpperNonRecoverable(1), aboveUpperCritical (2), aboveUpperNonCritical (3), belowLowerNonRecoverable(4), belowLowerCritical (5), belowLowerNonCritical (6), inserted (7), activated (8), communicationLost (9), communicationRestored (10), deactivated (11), extracted (12), powerDegrade (13), powerFail (14), powerInhibit (15)
event-asserted	6	INTEGER	Read-only	Event assertion state deasserted (0), asserted (1)
event-origin-site-type	7	INTEGER	Read-only	Origin site type
event-origin-site-number	8	INTEGER	Read-only	Origin site number
event-origins-slave-address	9	INTEGER	Read-only	Origin IPMB address
event-origin-fru-id	10	INTEGER	Read-only	Origin FRU Device ID
event-origin-sensor-number	11	INTEGER	Read-only	Origin sensor number

For example, to check the timestamp of the Record ID 10 in the SEL (which may or may not exist on an actual shelf at a given point in time), use the following OID:

<ROOT_OID>.37.1.3.10

The order in which the SEL entries are returned corresponds to the Record ID order in the SEL. This ensures that the index of each of the arrays (represented by **event-index**) increases monotonically for each “Get Next” operation. The resulting order of SEL entries may not correspond to the order in which corresponding events have been placed into the SEL; the **event-timestamp** variable can be used to reconstruct the order in which the events have been placed into the SEL.

5.1.7 Shelf Manager Status Variables

The variables defined in this section contain information about the Shelf Manager status.

Shelf Manager Status variables have the following OID:

<ROOT_OID>.38.<var>

Here **<var>** is the index of a particular variable in the table entry.

Table 19 Basic Shelf Manager Status Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
rmcp-interface-status	1	INTEGER	Read-only	0 – RMCP interface is down, 1 – RMCP interface is up
shelf-fru-found-status	2	INTEGER	Read-only	0 – Shelf FRU is not found, 1- Shelf FRU is found
active-status	3	INTEGER	Read-only	0 - the current ShMM is Backup, 1 – the current ShMM is Active

For example, to check the status of RMCP interface, use the following OID:

<ROOT_OID>.38.1.0

5.1.8 Shelf Manager Version Variables

The variables defined in this section contain information about the Shelf Manager version.

Shelf Manager Version variables have the following OID:

<ROOT_OID>.39.<var>

Here **<var>** is the index of a particular variable in the table entry.

Table 20 Basic Shelf Manager Version Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
major-version	1	INTEGER	Read-only	Returns Shelf Manager major version
minor-version	2	INTEGER	Read-only	Returns Shelf Manager minor version
carrier-type	3	DisplayString	Read-only	Returns carrier type
carrier-subtype	4	INTEGER	Read-only	Returns carrier subtype

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
carrier-subversion	5	INTEGER	Read-only	Returns carrier subversion

For example, to get the Shelf Manager Major version, use the following OID:
<ROOT_OID>.39.1.0

5.1.9 *TELCO Alarm Variables*

The variables defined in this section contain information about the state of the TELCO alarms.

TELCO alarm variables have the following OID:
<ROOT_OID>.40.<var>

Here **<var>** is the index of a particular variable in the table entry.

Table 21 Basic TELCO Alarm Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
minor-alarm	1	INTEGER	Read-write	Reflects the state of the Minor Alarm: 1 means “set”, 0 means “cleared”. Writing 1 to this variable sets the Minor Alarm; writing 0 to this variable clears the Minor Alarm.
major-alarm	2	INTEGER	Read-write	Reflects the state of the Major Alarm: 1 means “set”, 0 means “cleared”. Writing 1 to this variable sets the Major Alarm; writing 0 to this variable clears the Major Alarm.
critical-alarm	3	INTEGER	Read-write	Reflects the state of the Critical Alarm: 1 means “set”, 0 means “cleared”. Writing 1 to this variable sets the Critical Alarm; writing 0 to this variable clears the Critical Alarm.
alarm-cutoff	4	INTEGER	Read-only	Reflects the state of the Alarm Cutoff: 1 means “set”, 0 means “cleared”.

For example, to get the state of the Minor Alarm, use the following OID:
<ROOT_OID>.40.1.0

5.2 Advanced MIB Variables

5.2.1 IPM Controller Variables

The variables defined in this section contain information about the IPM controllers in the shelf. This information is provided in the form of an SNMP table. Each entry in this table provides information about a single IPM controller. Entries are indexed by an 8-bit address of the IPM Controller on the IPMB.

IPM controller information variables have the following OID:

<ROOT_OID>.1.1.<var>.<addr>

Here **<var>** is the index of a particular variable in the table entry describing a particular IPM controller. The variable indices are defined in the table below. **<addr>** is the 8-bit IPMB address of the IPM controller.

Table 22 Advanced IPM Controller Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
ipm-controller-index	1	INTEGER	Read-only	Table entry index, equal to <addr>
ipm-controller-sdr-version	2	INTEGER	Read-only	SDR Version of the Management Controller Device Locator Record for this controller
ipm-controller-picmg-version	3	INTEGER	Read-only	PICMG Extension Version as reported by the controller in a "Get PICMG Properties" reply
ipm-controller-slave-address	4	INTEGER	Read-only	Device Slave Address as defined in the Management Controller Device Locator Record for this controller
ipm-controller-channel-number	5	INTEGER	Read-only	Channel Number as defined in the Management Controller Device Locator Record for this controller
ipm-controller-power-state-notification	6	INTEGER	Read-only	Power State Notification as defined in the Management Controller Device Locator Record for this controller

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
ipm-controller-global-initialization	7	INTEGER	Read-only	Global Initialization as defined in the Management Controller Device Locator Record for this controller
ipm-controller-capabilities	8	INTEGER	Read-only	Device Capabilities as defined in the Management Controller Device Locator Record for this controller
ipm-controller-id-string	9	DisplayString (SIZE(0..255))	Read-only	Device ID String as defined in the Management Controller Device Locator Record for this controller
ipm-controller-maximum-fru	10	INTEGER	Read-only	Max FRU Device ID as reported by the controller in "Get PICMG Properties" reply
ipm-controller-own-fru-id	11	INTEGER	Read-only	FRU Device ID for IPM Controller as reported by the controller in "Get PICMG Properties" reply

For example, to get the Device ID String of the IPM Controller at IPMB address 20h = 32₁₀ (that is, the Shelf Manager itself), use the following OID:
<ROOT_OID>.1.1.9.32

5.2.2 FRU Device Variables

The variables defined in this section contain information about the FRU devices in the shelf. This information is provided in the form of an SNMP table. Each entry in this table provides information about a single FRU. The table lists all FRUs for which FRU Device Locator Records (SDR Type 11h) or Management Controller Device Locator Records (SDR Type 12h) are present in the SDR Repository.

FRU device information variables have the following OID:

<ROOT_OID>.2.1.<var>.<ipmb_addr>.<fru_id>

Here **<var>** is the index of a particular variable in the table entry describing a particular FRU device. The variable indices are defined in the table below. **<ipmb_addr>** is the IPMB address of IPM controller and **<fru_id>** is the number of the FRU device on this IPM controller.

Table 23 Advanced FRU Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
fru-device-index	1	INTEGER	Read-only	Table entry index, equal to ((<ipmb_addr> << 16) <fru_id>)
fru-device-sdr-version	2	INTEGER	Read-only	SDR Version of the FRU Device or Management Controller Device Locator Record for this FRU. If the record is absent, this field is read as -1.
fru-device-slave-address	3	INTEGER	Read-only	Device Slave Address as defined in the FRU Device or Management Controller Device Locator Record for this FRU
fru-device-fru-device-id	4	INTEGER	Read-only	FRU Device ID as defined in the FRU Device Locator Record for this FRU, or 0 for Management Controller devices
fru-device-channel-number	5	INTEGER	Read-only	Channel Number as defined in the FRU Device or Management Controller Device Locator Record for this FRU or -1 if the record is absent.

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
fru-device-device-type	6	INTEGER	Read-only	For FRUs with FRU Device ID different from zero: Device Type as defined in the FRU Device Locator Record for this FRU. Since the Management Controller Device Locator Record doesn't provide the Device Type information, for Management Controller devices (FRU #0), this field is set to FRU Inventory Device (10h). If the record is absent, this field is read as -1.
fru-device-device-type-modifier	7	INTEGER	Read-only	For FRUs with FRU Device ID different from zero: Device Type Modifier as defined in the FRU Device Locator Record for this FRU. Since the Management Controller Device Locator Record doesn't provide the Device Type information, for Management Controller devices (FRU #0), this field is set to Unspecified (FFh). If the record is absent, this field is read as -1.
fru-device-fru-entity-id	8	INTEGER	Read-only	(FRU) Entity ID as defined in the FRU Device or Management Controller Device Locator Record for this FRU. If the record is absent, this field is read as -1.
fru-device-fru-entity-instance	9	INTEGER	Read-only	(FRU) Entity Instance as defined in the FRU Device or Management Controller Device Locator Record for this FRU. If the record is absent, this field is read as -1.
fru-device-id-string	10	DisplayString (SIZE(0..255))	Read-only	Device ID String as defined in the FRU Device or Management Controller Device Locator Record for this FRU. If the record is absent, this field is read as "N/A".

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
fru-device-hot-swap-state	11	INTEGER	Read-only	Current PICMG 3.0 FRU state (M1...M7) for this FRU. If this variable is equal to n, that means that the FRU is in state Mn.
fru-device-activated	12	INTEGER	Read-write	<p>When reading: 1 means that the FRU device is active (that is, in state M4), 0 is returned otherwise.</p> <p>Writing 1 to this variable triggers sending the “Set FRU Activation (Activate FRU)” command to this FRU, if the FRU is in state M2 or M5, and sending “Set FRU Activation Policy (Clear Locked)” command if the FRU is in state M1.</p> <p>Writing 0 to this variable triggers sending the “Set FRU Activation (Deactivate FRU)” command to this FRU, if the FRU is in state M2, M3, M4, or M5, and sending “Set FRU Activation Policy (Set Locked)” command if the FRU is in state M1 or M6.</p>

For example, to get the Device ID String of the FRU 0 of IPM controller at IPMB address 20h = 32₁₀ (Shelf Manager), use the following OID:
<ROOT_OID>.2.1.10.32.0

5.2.3 Sensor Variables

The variables defined in this section contain information about the sensors in the shelf. This information is provided in the form of an SNMP table. Each entry in this table provides information about a single sensor. The table lists all sensors for which Full Sensor Records (SDR Type 01h) or Compact Sensor Records (SDR Type 02h) exist in the shelf.

FRU device information variables have the following OID:

<ROOT_OID>.3.1.<var>.<ipmb_addr>.<seqnum>

Here **<var>** is the index of a particular variable in the table entry describing a particular sensor. The variable indices are defined in the table below. **<ipmb_addr>.<seqnum>** is a compound index where **<ipmb_addr>** is the IPMB address of an IPM controller and **<seqnum>** is the sequential number of the sensor on this IPM controller. This sequential number is not necessarily equal to the sensor number, if the target IPM controller defines sensors on multiple LUNs.

Table 24 Advanced Sensor Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
sensor-index	1	INTEGER	Read-only	Table entry index, equal to ((<ipmb_addr> << 16) <seqnum>)
sensor-sdr-version	2	INTEGER	Read-only	SDR Version of the Sensor Record
sensor-record-type	3	INTEGER	Read-only	Record Type of the Sensor Record: 01h – for Full Sensor Records, 02h – for Compact Sensor Records
sensor-owner-id	4	INTEGER	Read-only	Sensor Owner ID as defined in the Sensor Record
sensor-owner-lun	5	INTEGER	Read-only	Sensor Owner LUN as defined in the Sensor Record
sensor-number	6	INTEGER	Read-only	Sensor Number as defined in the Sensor Record
sensor-entity-instance	7	INTEGER	Read-only	Entity Instance as defined in the Sensor Record
sensor-entity-id	8	INTEGER	Read-only	Entity ID as defined in the Sensor Record
sensor-initialization	9	INTEGER	Read-only	Sensor Initialization as defined in the Sensor Record
sensor-capabilities	10	INTEGER	Read-only	Sensor Capabilities as defined in the Sensor Record

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
sensor-type	11	INTEGER	Read-only	Sensor Type as defined in the Sensor Record
sensor-event	12	INTEGER	Read-only	Event/Reading Type Code as defined in the Sensor Record
sensor-assertion-event-mask	13	INTEGER	Read-only	Assertion Event Mask / Lower Threshold Reading Mask as defined in the Sensor Record
sensor-deassertion-event-mask	14	INTEGER	Read-only	Deassertion Event Mask / Upper Threshold Reading Mask as defined in the Sensor Record
sensor-mask	15	INTEGER	Read-only	Discrete Reading Mask / Settable Threshold Mask, Readable Threshold Mask as defined in the Sensor Record
sensor-unit1	16	INTEGER	Read-only	Sensor Units 1 as defined in the Sensor Record
sensor-unit2	17	INTEGER	Read-only	Sensor Units 2 – Base Unit as defined in the Sensor Record
sensor-unit3	18	INTEGER	Read-only	Sensor Units 3 – Modifier Unit as defined in the Sensor Record
sensor-linearization	19	INTEGER	Read-only	Linearization as defined in the Sensor Record. Valid only for Full Sensor Records. Read as 0 for Compact Sensor Records.
sensor-M	20	INTEGER	Read-only	M sensor reading conversion parameter as defined in the Sensor Record. Valid only for Full Sensor Records. Read as 1 for Compact Sensor Records.
sensor-tolerance	21	INTEGER	Read-only	Tolerance sensor reading conversion parameter as defined in the Sensor Record. Valid only for Full Sensor Records. Read as 0 for Compact Sensor Records.
sensor-B	22	INTEGER	Read-only	B sensor reading conversion parameter as defined in the Sensor Record. Valid only for Full Sensor Records. Read as 0 for Compact Sensor Records.

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
sensor-accuracy	23	INTEGER	Read-only	Accuracy sensor reading conversion parameter as defined in the Sensor Record. Valid only for Full Sensor Records. Read as 1 for Compact Sensor Records.
sensor-accuracy-exp	24	INTEGER	Read-only	Accuracy exp sensor reading conversion parameter as defined in the Sensor Record. Valid only for Full Sensor Records. Read as 0 for Compact Sensor Records.
sensor-R-exp	25	INTEGER	Read-only	R exp sensor reading conversion parameter as defined in the Sensor Record. Valid only for Full Sensor Records. Read as 0 for Compact Sensor Records.
sensor-B-exp	26	INTEGER	Read-only	B exp sensor reading conversion parameter as defined in the Sensor Record. Valid only for Full Sensor Records. Read as 0 for Compact Sensor Records.
sensor-characteristic-flags	27	INTEGER	Read-only	Analog characteristic flags as defined in the Sensor Record. Valid only for Full Sensor Records. Read as 0 for Compact Sensor Records.
sensor-reading	28	INTEGER	Read-only	Current sensor reading in raw form.
sensor-processed-reading	29	DisplayString (SIZE(0..255))	Read-only	Current sensor reading processed according to reading conversion formula for this sensor.
sensor-nominal-reading	30	INTEGER	Read-only	Nominal Reading as defined in the Sensor Record. Valid only for Full Sensor Records. Read as 0 for Compact Sensor Records.

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
sensor-nominal-maximum	31	INTEGER	Read-only	Normal Maximum as defined in the Sensor Record. Valid only for Full Sensor Records. Read as 0 for Compact Sensor Records.
sensor-nominal-minimum	32	INTEGER	Read-only	Normal Minimum as defined in the Sensor Record. Valid only for Full Sensor Records. Read as 0 for Compact Sensor Records.
sensor-maximum-reading	33	INTEGER	Read-only	Sensor Maximum Reading as defined in the Sensor Record. Valid only for Full Sensor Records. Read as 0 for Compact Sensor Records.
sensor-minimum-reading	34	INTEGER	Read-only	Sensor Minimum Reading as defined in the Sensor Record. Valid only for Full Sensor Records. Read as 0 for Compact Sensor Records.
sensor-upper-non-recoverable-threshold	35	INTEGER	Read-write	Current value of the Upper non-recoverable Threshold for the specified sensor
sensor-upper-critical-threshold	36	INTEGER	Read-write	Current value of the Upper critical Threshold for the specified sensor.
sensor-upper-non-critical-threshold	37	INTEGER	Read-write	Current value of the Upper non-critical Threshold for the specified sensor.
sensor-lower-non-recoverable-threshold	38	INTEGER	Read-write	Current value of the Lower non-recoverable Threshold for the specified sensor.
sensor-lower-critical-threshold	39	INTEGER	Read-write	Current value of the Lower critical Threshold for the specified sensor..
sensor-lower-non-critical-threshold	40	INTEGER	Read-write	Current value of the Lower non-critical Threshold for the specified sensor.

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
sensor-positive-going-threshold-hysteresis	41	INTEGER	Read-write	Current value of the Positive-going Threshold Hysteresis for the specified sensor.
sensor-negative-going-threshold-hysteresis	42	INTEGER	Read-write	Current value of the Negative-going Threshold Hysteresis for the specified sensor.
sensor-id-string	43	DisplayString (SIZE(0..255))	Read-only	ID String as defined in the Sensor Record.
sensor-entire-sensor-data	44	OCTET STRING (SIZE(0..128))	Read-only	Entire contents of the SDR: 48..64 bytes for Full Sensor Record, 32..48 bytes for Compact Sensor Record

For example, to get the ID String of the second sensor on the IPM controller at IPMB address 20h = 32₁₀ (Shelf Manager), use the following OID:
<ROOT_OID>.3.1.43.32.2

5.2.4 Board Variables

The variables defined in this section contain information about the AdvancedTCA Board slots in the system. This information is provided in the form of an SNMP table. Each entry in this table provides information about a single board slot. Entries are indexed by a Physical Slot number.

The semantics of the board variables below are different between the ATCA context and the PICMG 2.x (CompactPCI) context. Therefore, the description for each of these variables essentially contains of the two parts, prefixed by “AdvancedTCA:” and “CompactPCI:” respectively.

Board information variables have the following OID:

<ROOT_OID>.4.1.<var>.<slotnum>

Here **<var>** is the index of a particular variable in the table entry describing a particular board slot. The variable indices are defined in the table below. **<slotnum>** is the Physical Slot number.

Table 25 Advanced Board Slot Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
board-index	1	INTEGER	Read-only	Table entry index, equal to <slotnum>
board-present	2	INTEGER	Read-only	Both ATCA and CompactPCI: 1 – if a board is present in the slot, 0 – otherwise.
board-healthy	3	INTEGER	Read-only	AdvancedTCA: 1 – if a board is present and healthy, 0 – if the board is either not present, or not healthy. Unhealthy board is a board in state M1 or M7. CompactPCI: This variable reflects the state of the HEALTHY# signal for the slot: 1 – the board is healthy 0 – the board is not healthy

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
board-reset	4	INTEGER	Read-write	<p>AdvancedTCA: When reading: 1 – if the board is not present (in state M0), 0 – otherwise. Writing 1 to this variable triggers sending the “FRU Control (Cold Reset)” command to the IPM Controller of this board. Writing 0 to this variable is ignored.</p> <p>CompactPCI: When reading, reflects the reset state of the board: 1 – in reset 0 – not in reset. Writing 1 to this variable triggers a reset of the board by pulsing the BD_SEL# signal for the slot; writing 0 to this variable is ignored.</p>
board-slave-address	5	INTEGER	Read-only	Both ATCA and CompactPCI: The 8-bit Slave address of the IPM Controller representing this board on IPMB, according to the address table in the Shelf FRU Information.
board-fru-device-id	6	INTEGER	Read-only	Both ATCA and CompactPCI: The FRU Device ID for the board, according to the address table in the Shelf FRU Information.

For example, to check the presence of the board in slot 8, use the following OID:
<ROOT_OID>.4.1.2.8

5.2.5 System Event Log Variables

The variables defined in this section contain information about the System Event Log (SEL). This information is provided in the form of an SNMP table. Each entry in this table provides information about a single System Event Log record. Table entries are indexed by a SEL Record ID.

SEL information variables have the following OID:

<ROOT_OID>.5.1.<var>.<recid>

Here **<var>** is the index of a particular variable in the table entry describing a particular SEL record. The variable indices are defined in the table below. **<recid>** is the 16-bit SEL Record ID: 1...FFFEh.

Table 26 Advanced System Log Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
sel-index	1	INTEGER	Read-only	Table entry index, equal to <recid>
sel-contents	2	OCTET STRING (SIZE(0..128))	Read-only	Contents of the SEL entry

For example, to get the contents of the SEL entry with Record ID 3001, use the following OID:

<ROOT_OID>.5.1.2.3001

5.2.6 Shelf Variables

The variables defined in this section contain information about the shelf in general. This information is provided in the form of an SNMP table. Each entry in this table provides information about a single shelf. Table entries are indexed by shelf numbers. The current release of the Shelf Manager software supports only one shelf per Shelf Manager. The table index is intended to allow for future extensions, but for this revision it must be set to 1.

Shelf information variables have the following OID:
<ROOT_OID>.6.1.<var>.<shelfid>

Here **<var>** is the index of a particular variable in the table entry describing a particular shelf. The variable indices are defined in the table below. **<shelfid>** is the shelf number. For this release **<shelfid>** must be set to 1.

Table 27 Advanced Shelf Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
shelf-index	1	INTEGER	Read-only	Table entry index, equal to <shelfid>
shelf-healthy	2	INTEGER	Read-only	1 – if the shelf doesn't have unhealthy components, 0 – if there exist unhealthy components in the shelf.

For example, to get the health status of the entire shelf, use the following OID:
<ROOT_OID>.6.1.2.1

5.2.7 LAN Configuration Variables

The variables defined in this section contain LAN configuration information. This information is provided in the form of an SNMP table. Each entry in this table provides information about a single configuration variable. Table entries are further indexed by IPMI channel numbers. The current release of the Shelf Manager supports only one LAN channel – IPMI channel #1.

Shelf information variables have the following OID:

<ROOT_OID>.7.1.<var>.<channel>

Here **<var>** is the index of a particular variable in the table entry describing a particular LAN channel configuration. The variable indices are defined in the table below. **<channel>** is the IPMI channel number. For this release only one LAN channel with number 1 is supported. The current release also has a fixed number of supported destinations – 16. Thus the SNMP variables for the Destination Type and Destination Addresses parameters are implemented as fixed-sized arrays.

Table 28 Advanced LAN Channel Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
lan-configuration-index	1	INTEGER	Read-only	Table entry index, equal to <channel>
lan-configuration-set-in-progress	2	INTEGER	Read-only	Set In Progress parameter for the LAN channel
lan-configuration-authentication-type-support	3	INTEGER	Read-only	Authentication Type Support parameter for the LAN channel
lan-configuration-authentication-type-enable	4	OCTET STRING (SIZE(5))	Read-write	Authentication Type Enables parameter for the LAN channel
lan-configuration-ip-address	5	IpAddress	Read-write	IP Address parameter for the LAN channel
lan-configuration-ip-address-source	6	INTEGER	Read-only	IP Address Source parameter for the LAN channel

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
lan-configuration-mac-address	7	OCTET STRING (SIZE(6))	Read-write	MAC Address parameter for the LAN channel
lan-configuration-subnet-mask	8	IpAddress	Read-write	Subnet Mask parameter for the LAN channel
lan-configuration-ipv4-header-parameters	9	OCTET STRING (SIZE(3))	Read-write	IPv4 Header Parameters parameter for the LAN channel
lan-configuration-primary-rmcp-port-number	10	INTEGER	Read-write	Primary RMCP Port Number parameter for the LAN channel
lan-configuration-secondary-rmcp-port-number	11	INTEGER	Read-write	Secondary RMCP Port Number parameter for the LAN channel
lan-configuration-bmc-generated-arp-control	12	INTEGER	Read-write	BMC-generated ARP control parameter for the LAN channel
lan-configuration-gratuitous-arp-interval	13	INTEGER	Read-write	Gratuitous ARP interval parameter for the LAN channel
lan-configuration-default-gateway-address	14	IpAddress	Read-write	Default Gateway Address parameter for the LAN channel
lan-configuration-default-gateway-mac-address	15	OCTET STRING (SIZE(6))	Read-write	Default Gateway MAC Address parameter for the LAN channel
lan-configuration-backup-gateway-address	16	IpAddress	Read-write	Backup Gateway Address parameter for the LAN channel

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
lan-configuration-backup-gateway-mac-address	17	OCTET STRING (SIZE(6))	Read-write	Backup Gateway MAC Address parameter for the LAN channel
lan-configuration-community-string	18	DisplayString (SIZE(0..255))	Read-write	Community String parameter for the LAN channel
lan-configuration-number-of-destinations	19	INTEGER	Read-only	Number Of Destinations parameter for the LAN channel
lan-configuration-destination-type-0	20	OCTET STRING (SIZE(3))	Read-write	Destination Type with Destination selector 0 for the LAN channel, excluding the Set Selector byte
lan-configuration-destination-type-1	21	OCTET STRING (SIZE(3))	Read-write	Destination Type with Destination selector 1 for the LAN channel, excluding the Set Selector byte
...
lan-configuration-destination-type-15	35	OCTET STRING (SIZE(3))	Read-write	Destination Type with Destination selector 15 for the LAN channel, excluding the Set Selector byte
lan-configuration-destination-address-0	36	OCTET STRING (SIZE(1 12))	Read-write	Destination Addresses with Destination selector 0 for the LAN channel, excluding the Set Selector byte
lan-configuration-destination-address-1	37	OCTET STRING (SIZE(1 12))	Read-write	Destination Addresses with Destination selector 1 for the LAN channel, excluding the Set Selector byte
...
lan-configuration-destination-address-15	51	OCTET STRING (SIZE(1 12))	Read-write	Destination Addresses with Destination selector 15 for the LAN channel, excluding the Set Selector byte

For example, to get the IP address of channel #1, use the following OID:

<ROOT_OID>.7.1.5.1

5.2.8 PEF Configuration Variables

The variables defined in this section contain PEF configuration information. This information is provided as several scalar SNMP variables and several SNMP tables.

The following scalar variables are defined for PEF configuration. They have OIDs of the following form:

<ROOT_OID>.<var>.0

Here **<var>** is the index of a particular variable in the table entry describing a particular PEF configuration. The variable indices are defined in the table below.

Table 29 Advanced PEF Configuration Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
pef-configuration-set-in-progress	8	INTEGER	Read-only	Set In Progress parameter
pef-configuration-control	9	INTEGER	Read-write	PEF Control parameter
pef-configuration-action-global-control	10	INTEGER	Read-write	PEF Action global control parameter
pef-configuration-startup-delay	11	INTEGER	Read-write	PEF Startup Delay parameter
pef-configuration-alert-startup-delay	12	INTEGER	Read-write	PEF Alert Startup Delay parameter
pef-configuration-number-of-event-filters	13	INTEGER	Read-only	Number of Event Filters parameter
pef-configuration-number-of-alert-policy-entries	15	INTEGER	Read-only	Number of Alert Policy Entries parameter
pef-configuration-system-guid	17	OCTET STRING (SIZE(16))	Read-write	System GUID parameter, excluding the "Used to fill in the GUID field in a PET Trap" byte.
pef-configuration-number-of-alert-strings	18	INTEGER	Read-only	Number of Alert Strings parameter

For example, to get the PEF Startup Delay parameter, use the following OID:
<ROOT_OID>.11.0

A separate SNMP table is defined for PEF Event Filters. Each entry in this table provides information about a single PEF Event Filter. Table entries are indexed by filter numbers. The table entry with index 1 corresponds to filter number #0, table entry 2 – to filter number #1, etc.

PEF Event Filters variables have the following OID:

<ROOT_OID>.14.1.<var>.<filter>

Here **<var>** is the index of a particular variable in the table entry describing a particular PEF Event Filter. The variable indices are defined in the table below. **<filter>** is the filter number plus 1. Event Filter numbers start with 1; thus table entry with index 1 is not populated.

Table 30 PEF Event Filter Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
pef-configuration-set-in-progress	8	INTEGER	Read-only	Set In Progress parameter
pef-configuration-control	9	INTEGER	Read-write	PEF Control parameter

For example, to get the PEF Event Filter Data #8, use the following OID:

<ROOT_OID>.14.1.2.9

A separate SNMP table is defined for PEF Alert Policies. Each entry in this table provides information about a single PEF Alert Policy. Table entries are indexed by policy numbers. The table entry with index 1 corresponds to alert policy #0, table entry 2 – to alert policy #1, etc.

PEF Alert Policy variables have the following OID:

<ROOT_OID>.16.1.<var>.<policy>

Here **<var>** is the index of a particular variable in the table entry describing a particular PEF Alert Policy. The variable indices are defined in the table below. **<policy>** is the policy number plus 1. Alert Policy numbers start with 1; thus table entry with index 1 is not populated.

Table 31 PEF Alert Policy Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
pef-configuration-event-filter-index	1	INTEGER	Read-only	Table entry index, equal to <filter>

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
pef-configuration-event-filter-data	2	OCTET STRING (SIZE(20))	Read-write	Event Filter Table entry data, excluding the Set Selector byte

For example, to get the PEF Configuration Alert Policy Data #8, use the following OID:
<ROOT_OID>.16.1.2.9

A separate SNMP table is defined for PEF Alert Strings. Each entry in this table provides information about a single PEF Alert String. Table entries are indexed by string numbers. The table entry with index 1 corresponds to alert string #0, table entry 2 – to alert string #1, etc.

PEF Alert String variables have the following OID:
<ROOT_OID>.19.1.<var>.<strnum>

Here **<var>** is the index of a particular variable in the table entry describing a particular PEF Alert String. The variable indices are defined in the table below. **<strnum>** is the alert string number plus 1.

Table 32 PEF Alert String Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
pef-configuration-alert-string-index	1	INTEGER	Read-only	Table entry index, equal to <strnum>
pef-configuration-alert-string-key	2	OCTET STRING (SIZE(2))	Read-write	Alert String Keys entry data, excluding the Set Selector byte
pef-configuration-alert-string	3	DisplayString	Read-write	Alert Strings entry data, excluding the Set Selector byte

For example, to get the PEF Configuration Alert String Key for string #8, use the following OID:
<ROOT_OID>.19.1.2.9

5.2.9 FRU Information Variables

The variables defined in this section contain information about the FRU Information in the shelf. This information is provided in the form of an SNMP table. Each entry in this table provides information about a single block of information for the designated FRU. The table lists all blocks of FRUs for which FRU Device Locator Records (SDR Type 11h) or Management Controller Device Locator Records (SDR Type 12h) are present in the SDR Repository.

FRU device information variables have the following OID:

<ROOT_OID>.20.1.<var>.<ipmb addr>.<fru_id>.<block number>

Here **<var>** is the index of a particular variable in the table entry describing a particular FRU device. The variable indices are defined in the table below. **<ipmb addr>** and **<fru_id>** are the corresponding values of the specified FRU, **<block number>** is the 32-byte block offset within the FRU Info.

Table 33 FRU Info Block Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
fru-info-index	1	INTEGER	Read-only	Index = (<ipmb addr> << 24) (<fru_id> << 16) <block number>
fru-info-data	2	OctetString (SIZE(1..32))	Read-only	A block of data
fru-info-data-wo	3	OctetString (SIZE(1..32))	Write-only	Write any number of bytes up to 32. Due to limitations in the current version of the SNMP agent, <block number> is interpreted as a byte offset.

For example, to get first 32 bytes (block number 0) of the FRU Information of FRU #254 at IPMB address 20h, use the following OID:

<ROOT_OID>.20.1.2.32.254.0

5.2.10 FRU Device by Site Variables

The variables defined in this section contain information about the FRU devices in the shelf. This information is provided in the form of an SNMP table. Each entry in this table provides information about a single FRU. The table lists all FRUs for which FRU Device Locator Records (SDR Type 11h) or Management Controller Device Locator Records (SDR Type 12h) are present in the SDR Repository.

FRU device information variables have the following OID:

<ROOT_OID>.21.1.<var>.<site type>.<site number>

Here **<var>** is the index of a particular variable in the table entry describing a particular FRU device. The variable indices are defined in the table below. **<site type>** and **<site number>** are the corresponding values of the specified FRU.

Table 34 Advanced FRU Device Variables

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
fru-device-by-site-index	1	INTEGER	Read-only	Table entry index, equal to (<site type> << 16) <site number>
fru-device-by-site-sdr-version	2	INTEGER	Read-only	SDR Version of the FRU Device or Management Controller Device Locator Record for this FRU. If the record is absent, this field is read as -1.
fru-device-by-site-slave-address	3	INTEGER	Read-only	Device Slave Address as defined in the FRU Device or Management Controller Device Locator Record for this FRU
fru-device-by-site-fru-device-id	4	INTEGER	Read-only	FRU Device ID as defined in the FRU Device Locator Record for this FRU, or 0 for Management Controller devices. If the record is absent, this field is read as -1.
fru-device-by-site-channel-number	5	INTEGER	Read-only	Channel Number as defined in the FRU Device or Management Controller Device Locator Record for this FRU. If the record is absent, this field is read as -1.

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
fru-device-by-site-device-type	6	INTEGER	Read-only	For FRUs with FRU Device ID different from zero: Device Type as defined in the FRU Device Locator Record for this FRU. Since the Management Controller Device Locator Record doesn't provide the Device Type information, for Management Controller devices (FRU #0), this field is set to FRU Inventory Device (10h). If the record is absent, this field is read as -1.
fru-device-by-site-device-type-modifier	7	INTEGER	Read-only	For FRUs with FRU Device ID different from zero: Device Type Modifier as defined in the FRU Device Locator Record for this FRU. Since the Management Controller Device Locator Record doesn't provide the Device Type information, for Management Controller devices (FRU #0), this field is set to Unspecified (FFh). If the record is absent, this field is read as -1.
fru-device-by-site-fru-entity-id	8	INTEGER	Read-only	(FRU) Entity ID as defined in the FRU Device or Management Controller Device Locator Record for this FRU. If the record is absent, this field is read as -1.
fru-device-by-site-fru-entity-instance	9	INTEGER	Read-only	(FRU) Entity Instance as defined in the FRU Device or Management Controller Device Locator Record for this FRU. If the record is absent, this field is read as -1.
fru-device-by-site-id-string	10	DisplayString (SIZE(0..255))	Read-only	Device ID String as defined in the FRU Device or Management Controller Device Locator Record for this FRU. If the record is absent, this field is read as "N/A"

VARIABLE	INDEX	TYPE	ACCESS MODE	DESCRIPTION
fru-device-by-site-hot-swap-state	11	INTEGER	Read-only	Current PICMG 3.0 FRU state (M1...M7) for this FRU. If this variable is equal to n, that means that the FRU is in state Mn.
fru-device-by-site-activated	12	INTEGER	Read-write	<p>When reading: 1 means that the FRU device is active (that is, in state M4), 0 is returned otherwise.</p> <p>Writing 1 to this variable triggers sending the "Set FRU Activation (Activate FRU)" command to this FRU, if the FRU is in state M2 or M5, and sending "Set FRU Activation Policy (Clear Locked)" command if the FRU is in state M1.</p> <p>Writing 0 to this variable triggers sending the "Set FRU Activation (Deactivate FRU)" command to this FRU, if the FRU is in state M2, M3, M4, or M5, and sending "Set FRU Activation Policy (Set Locked)" command if the FRU is in state M1 or M6.</p>

For example, to get the Device ID String of the site type 2, site number 1, use the following OID:
<ROOT_OID>.21.1.10.2.1

5.3 Accessing the Shelf Manager via SNMP

5.3.1 SNMPv2c

Any SNMP client implementation should be able to access the Shelf Manager defined variables. One specific choice that we've used successfully is the net-snmp 5.0.6 package from: <http://net-snmp.sourceforge.net/>. This package would be installed on the management computer (running Linux kernel 2.4.2 and higher). It provides some basic management tools. To access the Pigeon Point SNMP agent, the **snmpget** and **snmpwalk** commands can be used.

To install the MIB file on the management system, follow the instructions supplied with the package.

After that, use the **snmpget** and **snmpwalk** commands to access selected variables. For example, to retrieve the variable controller-sdr-version for the controller 20h (BMC), use the following command:

```
snmpget -v 2c <Pigeon Point ipaddr> -c public
.iso.3.6.1.4.1.16394.2.1.1.1.2.32
```

The output will be similar to the following:

```
PPS-SENTRY-MIB::ipm-controller-sdr-version.32 = INTEGER: 81
```

To retrieve the entire pps-sentry variables subtree, use the following command:

```
snmpwalk -v 2c <Pigeon Point ipaddr> -c public
.iso.3.6.1.4.1.16394.2.1.1
```

The output will usually contain about 3000 strings for two IPM controllers with about 20 sensors on each of them.

This example assumes that SNMP v2c is used.

5.3.2 SNMPv3

In order to provide SNMPv3 functionality the SNMP agent should be properly configured. An example snmpd.conf file is provided below. It should exist in the **/etc** directory. This example shows how to configure: user: overlord and password: possessor, which has read-write rights and SNMPv3 access to the SNMP-agent. In order to access the SNMP agent in SNMPv3 mode, use the following commands.

To read a variable:

```
snmpget -v 3 -u <user name> -l authNoPriv -a MD5 -A <user password>
<Pigeon Point IP address> <variable OID with index>
```

To set a variable (for read-write variables only):

```
snmpset -v 3 -u <user name> -l authNoPriv -a MD5 -A <user password>
<Pigeon Point IP address> <variable OID with index> <variable value>
```

For example, to retrieve the variable controller-sdr-version for the controller 20h (Shelf Manager), use the following command:

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor <Pigeon
Point ipaddr> .iso.3.6.1.4.1.16394.2.1.1.1.1.2.32
```

Here is an example configuration file for the ucd-snmp agent:

```
#####
#####
#
# EXAMPLE.conf:
#   An example configuration file for configuring the ucd-snmp snmpd
#   agent.
#
#####
#####
#
# This file is intended to only be an example.  If, however, you want
# to use it, it should be placed in /usr/local/share/snmp/snmpd.conf.
# When the snmpd agent starts up, this is where it will look for it.
#
# Note: This file is automatically generated from EXAMPLE.conf.def.
# Do NOT read the EXAMPLE.conf.def file! Instead, after you have run
# configure & make, and then make sure you read the EXAMPLE.conf file
# instead, as it will tailor itself to your configuration.

# All lines beginning with a '#' are comments and are intended for you
# to read.  All other lines are configuration commands for the agent.

#
# PLEASE: read the snmpd.conf(5) manual page as well!
#

#####
#####
# Access Control
#####

# YOU SHOULD CHANGE THE "COMMUNITY" TOKEN BELOW TO A NEW KEYWORD ONLY
# KNOWN AT YOUR SITE.  YOU *MUST* CHANGE THE NETWORK TOKEN BELOW TO
# SOMETHING REFLECTING YOUR LOCAL NETWORK ADDRESS SPACE.

# By far, the most common question I get about the agent is "why won't
# it work?", when really it should be "how do I configure the agent to
# allow me to access it?"
#
# By default, the agent responds to the "public" community for read
# only access, if run out of the box without any configuration file in
# place.  The following examples show you other ways of configuring
# the agent so that you can change the community names, and give
# yourself write access as well.
#
```

```

# The following lines change the access permissions of the agent so
# that the COMMUNITY string provides read-only access to your entire
# NETWORK (EG: 10.10.10.0/24), and read/write access to only the
# localhost (127.0.0.1, not its real ipaddress).
#
# For more information, read the FAQ as well as the snmpd.conf(5)
# manual page.

####
# First, map the community name (COMMUNITY) into a security name
# (local and mynetwork, depending on where the request is coming
# from):

rwuser overlord

#          sec.name  source          community
com2sec local      localhost      public
com2sec mynetwork  172.16.2.0/24      public

####
# Second, map the security names into group names:

#          sec.model  sec.name
group MyRWGroup v1      local
group MyRWGroup v2c     local
group MyRWGroup usm     local
group MyROGroup v1      mynetwork
group MyROGroup v2c     mynetwork
group MyROGroup usm     mynetwork

####
# Third, create a view for us to let the groups have rights to:

#          incl/excl subtree          mask
view all    included  .1              80

####
# Finally, grant the 2 groups access to the 1 view with different
# write permissions:

#          context  sec.model  sec.level  match  read  write  notif
access MyROGroup  " "      any      noauth    exact  all   none   none
access MyRWGroup  " "      any      noauth    exact  all   all    none

# -----
-----

engineID "Love_me_tender_lo"
createUser overlord MD5 possessor DES

#####
#####
# System contact information
#

# It is also possible to set the sysContact and sysLocation system
# variables through the snmpd.conf file:

```



```
syslocation PPS experimental facility
syscontact PPS <support@pigeonpoint.com>
```

```
# Example output of snmpwalk:
# % snmpwalk -v 1 localhost public system
# system.sysDescr.0 = "SunOS name sun4c"
# system.sysObjectID.0 = OID: enterprises.ucdavis.ucdSnmpAgent.sunos4
# system.sysUpTime.0 = Timeticks: (595637548) 68 days, 22:32:55
# system.sysContact.0 = "Me <me@somewhere.org>"
# system.sysName.0 = "name"
# system.sysLocation.0 = "Right here, right now."
# system.sysServices.0 = 72
```

```
# -----
-----
```

```
#####
#####
```

```
# Process checks.
#
# The following are examples of how to use the agent to check for
# processes running on the host. The syntax looks something like:
#
# proc NAME [MAX=0] [MIN=0]
#
# NAME: the name of the process to check for. It must match
# exactly (ie, http will not find httpd processes).
# MAX: the maximum number allowed to be running. Defaults to 0.
# MIN: the minimum number to be running. Defaults to 0.
```

```
#
# Examples:
#
```

```
# Make sure mountd is running
#proc mountd
```

```
# Make sure there are no more than 4 ntalkds running, but 0 is ok too.
#proc ntalkd 4
```

```
# Make sure at least one sendmail, but less than or equal to 10 are
running.
#proc sendmail 10 1
```

```
# -----
-----
```

Here the demo script is provided that shows how to access the writeable variables.

```
#!/bin/bash
# fru activation
```

```

snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.2.1.12.32.0
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.2.1.12.32.0 i 2

# emulated temp
# unr
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.35.156.2
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.35.156.2 i 100
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.35.156.2
# uc
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.36.156.2
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.36.156.2 i 100
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.36.156.2
# unc
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.37.156.2
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.37.156.2 i 100
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.37.156.2
# lnr
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.38.156.2
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.38.156.2 i 100
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.38.156.2
# lc
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.39.156.2
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.39.156.2 i 100
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.39.156.2
# lnc
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.40.156.2
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.40.156.2 i 100
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.40.156.2

#board reset
#1-16: 86 = 3
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.4.1.4.3
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.4.1.4.3 i 1

```

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.4.1.4.3
```

auth port enabled

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.4.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.4.1 x "00 11 11 11 00"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.4.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.4.1 x "00 15 15 15 00"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.4.1
```

IP addr

dangerous, may shutdown network interface

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.5.1
#snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor
172.16.2.203 .iso.3.6.1.4.1.16394.2.1.1.7.1.5.1 x "C0 A0 B0 D0"
#snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor
172.16.2.203 .iso.3.6.1.4.1.16394.2.1.1.7.1.5.1
```

MAC address

dangerous, may shutdown network interface

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.7.1
```

Subnet Mask

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.8.1
```

IPv4

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.9.1
```

Primary RMCP port 623

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.10.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.10.1 i 10623
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.10.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.10.1 i 623
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.10.1
```

Secondary RMCP port 624

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.11.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.11.1 i 824
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.11.1
```

```
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.11.1 i 624
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.11.1
```

BMC Generated ARP Control

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.12.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.12.1 i 1
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.12.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.12.1 i 2
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.12.1
```

ARP Interval

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.13.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.13.1 i 25
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.13.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.13.1 i 4
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.13.1
```

Gateway IP

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.14.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.14.1 x "C0 C0 C0 C0"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.14.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.14.1 x "00 00 00 00"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.14.1
```

Gateway MAC

does not work :(

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.15.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.15.1 x "DE AD CA FE DE AD"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.15.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.15.1 x ""
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.15.1
```

Backup IP

absent check on length

```

snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.16.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.16.1 x "C0 B0 A0 90"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.16.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.16.1 x ""
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.16.1

# Backup MAC
# does not work :(
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.17.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.17.1 x "DE AD CA FE DE AD"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.17.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.17.1 x ""
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.17.1

# Community
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.18.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.18.1 x "DE AD CA FE DE AD"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.18.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.18.1 s "public"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.18.1

# Destination type
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.20.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.20.1 x "05 BB CC"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.20.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.20.1 x "00 00 00"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.20.1

snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.33.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.33.1 x "07 08 44"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.33.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.33.1 x "00 00 00"

```

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.33.1
```

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.35
```

Destination Address

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.36.1
```

```
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.36.1 x "11 22 33 44 55 66 77 88 99 AA BB
CC FF"
```

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.36.1
```

```
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.36.1 x ""
```

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.36.1
```

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.43.1
```

```
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.43.1 x "D1 D2 D3 D4 D5 D6 D7 D8 D9 AA BB
CC DD"
```

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.43.1
```

```
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.43.1 x ""
```

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.7.1.43.1
```

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.3.1.51
```

PEF Control

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.9.0
```

```
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.9.0 i 7
```

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.9.0
```

```
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.9.0 i 0
```

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.9.0
```

Action control

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.10.0
```

```
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.10.0 i 7
```

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.10.0
```

```
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.10.0 i 0
```

```
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.10.0
```

```

# Startup Delaty
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.11.0
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.11.0 i 15
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.11.0
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.11.0 i 60
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.11.0

# Alert Startup Delay
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.12.0
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.12.0 i 23
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.12.0
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.12.0 i 60
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.12.0

#event filter table data

# Event filter table data
# 2-64
#
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.14.1.2.5
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.14.1.2.5 x "80 3F 33 44 55 66 77 88 11 22 33
44 55 66 77 88 99 99 99 99"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.14.1.2.5
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.14.1.2.5 x ""
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.14.1.2.5

snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.14.1.2.8
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.14.1.2.8 x "FF FF 33 44 55 66 77 88 11 22 33
44 55 66 77 88 99 99 99 99"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.14.1.2.8
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.14.1.2.8 x ""
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.14.1.2.8

# Alert policy table data
# 2-64

```

```

snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.16.1.2.2
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.16.1.2.2 x "FF FF FF"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.16.1.2.2
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.16.1.2.2 x ""
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.16.1.2.2

```

```

snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.16.1.2.9 x "FF 11 35"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.16.1.2.9

```

Alert string table key

1-64

```

snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.19.1.2.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.19.1.2.1 x "FF FF"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.19.1.2.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.19.1.2.1 x ""
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.19.1.2.1

```

Alert string table string

1-64

```

snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.19.1.3.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.19.1.3.1 s "Test Alert String"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.19.1.3.1
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.19.1.3.1 s ""
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.19.1.3.1

```

```

snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.19.1.3.9
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.19.1.3.9 s "@Cry"
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.19.1.3.9
snmpset -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.19.1.3.9 s ""
snmpget -v 3 -u overlord -l authNoPriv -a MD5 -A possessor 172.16.2.203
.iso.3.6.1.4.1.16394.2.1.1.19.1.3.9

```


This example assumes that SNMP v3 is used.

6 RMCP Interface

The IPMI specification defines a LAN Interface to the chassis or shelf, represented in the Pigeon Point context by the Shelf Manager. This interface is based on the RMCP (Remote Management Control Protocol). RMCP messages provide encapsulation for IPMI commands and responses adding special headers. On the transport level, RMCP messages are transferred across the network as UDP packets. AdvancedTCA requires that Shelf Managers support the IPMI LAN Interface and RMCP as part of the System Manager Interface.

The RMCP interface supports multi-session IPMI mode, allowing multiple users to work with the Shelf Manager simultaneously, while still being isolated from each other. User and message authentication and privilege levels are supported for RMCP sessions.

The Pigeon Point Shelf Manager fully supports the RMCP interface for the System Manager's interactions with the shelf in accordance with the IPMI specification v.1.5.1. Refer to chapter 12 of that specification for detailed information about the RMCP interface.

6.1 Supported IPMI Commands

The following table shows the IPMI commands implemented by the Shelf Manager. Due to security considerations, the treatment of a given command may be different, depending on whether it is received over the RMCP interface or on IPMB-0.

Table 35 IPMI Commands Implemented by the Shelf Manager

COMMAND	NetFn	CMD	ARRIVING FROM RMCP INTERFACE	ARRIVING FROM IPM CONTROLLER
Get Device ID	App	01h	Supported	Supported
Cold Reset	App	02h	Supported	Supported
Warm Reset	App	03h	Not supported	Not supported
Get Self Test Results	App	04h	Supported	Supported
Manufacturing Test On	App	05h	Not supported	Not supported
Set ACPI Power State	App	06h	Supported	Supported
Get ACPI Power State	App	07h	Supported	Supported
Get Device GUID	App	08h	Supported	Supported
Reset Watchdog Timer	App	22h	Supported	Supported
Set Watchdog Timer	App	24h	Supported	Supported
Get Watchdog Timer	App	25h	Supported	Supported
Set BMC Global Enables	App	2Eh	Supported	Supported
Get BMC Global Enables	App	2Fh	Supported	Supported
Clear Message Flags	App	30h	Supported	Supported

COMMAND	NETFN	CMD	ARRIVING FROM RMCP INTERFACE	ARRIVING FROM IPM CONTROLLER
Get Message Flags	App	31h	Supported	Supported
Enable Message Channel Receive	App	32h	Not supported	Not supported
Get Message	App	33h	Not supported	Not supported
Send Message	App	34h	Supported	Supported
Read Event Message Buffer	App	35h	Not supported	Not supported
Get BT Interface Capabilities	App	36h	Not supported	Not supported
Get System GUID	App	37h	Supported	Supported
Get Channel Authentication Capabilities	App	38h	Supported	Supported(*)
Get Session Challenge	App	39h	Supported	Not supported
Activate Session	App	3Ah	Supported	Not supported
Set Session Privilege Level	App	3Bh	Supported	Not supported
Close Session	App	3Ch	Supported	Not supported
Get Session Info	App	3Dh	Supported	Supported(*)
Get AuthCode	App	3Fh	Supported	Supported(*)
Set Channel Access	App	40h	Supported	Supported(*)
Get Channel Access	App	41h	Supported	Supported(*)
Get Channel Info	App	42h	Supported	Supported(*)
Set User Access	App	43h	Supported	Supported(*)
Get User Access	App	44h	Supported	Supported(*)
Set User Name	App	45h	Supported	Supported(*)
Get User Name	App	46h	Supported	Supported(*)
Set User Password	App	47h	Supported	Supported(*)
Activate Payload	App	48h	Not supported	Not supported
Deactivate Payload	App	49h	Not supported	Not supported
Get Payload Activation Status	App	4Ah	Not supported	Not supported
Get Payload Instance Info	App	4Bh	Not supported	Not supported
Set User Payload Access	App	4Ch	Not supported	Not supported
Get User Payload Access	App	4Dh	Not supported	Not supported
Get Channel Payload Support	App	4Eh	Not supported	Not supported
Get Channel Payload Version	App	4Fh	Not supported	Not supported

COMMAND	NETFn	CMD	ARRIVING FROM RMCP INTERFACE	ARRIVING FROM IPM CONTROLLER
Get Channel OEM Payload Info	App	50h	Not supported	Not supported
Master Write-Read	App	52h	Not supported	Not supported
Get Channel Cipher Suites	App	54h	Not supported	Not supported
Suspend/Resume Payload Encryption	App	55h	Not supported	Not supported
Set Channel Security Keys	App	56h	Not supported	Not supported
Get System Interface Capabilities	App	57h	Not supported	Not supported
Get Chassis Capabilities	Chassis	00h	Supported	Supported
Get Chassis Status	Chassis	01h	Supported	Supported
Chassis Control	Chassis	02h	Supported	Supported
Chassis Reset	Chassis	03h	Not supported	Not supported
Chassis Identify	Chassis	04h	Not supported	Not supported
Set Chassis Capabilities	Chassis	05h	Supported	Supported
Set Power Restore Policy	Chassis	06h	Not supported	Not supported
Get System Restart Cause	Chassis	07h	Not supported	Not supported
Set System Boot Options	Chassis	08h	Not supported	Not supported
Get System Boot Options	Chassis	09h	Not supported	Not supported
Set Front Panel Button Enables	Chassis	0Ah	Not supported	Not supported
Set Power Cycle Interval	Chassis	0Bh	Not supported	Not supported
Get POH Counter	Chassis	0Fh	Not supported	Not supported
Set LAN Configuration Parameters	Transport	01h	Supported	Supported(*)
Get LAN Configuration Parameters	Transport	02h	Supported	Supported
Suspend BMC ARPs	Transport	03h	Supported	Supported(*)
Get IP/UDP/RMCP statistics	Transport	04h	Not supported	Not supported
Set Serial/Modem Configuration	Transport	10h	Not supported	Not supported
Get Serial/Modem	Transport	11h	Not supported	Not supported

COMMAND	NETFN	CMD	ARRIVING FROM RMCP INTERFACE	ARRIVING FROM IPM CONTROLLER
Configuration				
Set Serial/Modem Mux	Transport	12h	Not supported	Not supported
Get TAP Response Codes	Transport	13h	Not supported	Not supported
Set PPP UDP Proxy Transmit Data	Transport	14h	Not supported	Not supported
Get PPP UDP Proxy Transmit Data	Transport	15h	Not supported	Not supported
Send PPP UDP Proxy Packet	Transport	16h	Not supported	Not supported
Get PPP UDP Proxy Receive Data	Transport	17h	Not supported	Not supported
Serial/Modem Connection Active	Transport	18h	Not supported	Not supported
Callback	Transport	19h	Not supported	Not supported
Set User Callback Options	Transport	1Ah	Supported	Supported(*)
Get User Callback Options	Transport	1Bh	Supported	Supported(*)
SOL Activating	Transport	20h	Not supported	Not supported
Set SOL Configuration Parameters	Transport	21h	Not supported	Not supported
Get SOL Configuration Parameters	Transport	22h	Not supported	Not supported
Get FRU Inventory Area Info	Storage	10h	Supported	Supported
Read FRU Data	Storage	11h	Supported	Supported
Write FRU Data	Storage	12h	Supported	Supported
Get SDR Repository Info	Storage	20h	Supported	Supported
Get SDR Repository Allocation Info	Storage	21h	Not supported	Not supported
Reserve SDR Repository	Storage	22h	Supported	Supported
Get SDR	Storage	23h	Supported	Supported
Add SDR	Storage	24h	Supported	Supported
Partial Add SDR	Storage	25h	Supported	Supported
Delete SDR	Storage	26h	Supported	Supported
Clear SDR Repository	Storage	27h	Supported	Supported
Get SDR Repository Time	Storage	28h	Supported	Supported

COMMAND	NETFN	CMD	ARRIVING FROM RMCP INTERFACE	ARRIVING FROM IPM CONTROLLER
Set SDR Repository Time	Storage	29h	Supported	Supported
Enter SDR Repository Update Mode	Storage	2Ah	Not supported	Not supported
Exit SDR Repository Update Mode	Storage	2Bh	Not supported	Not supported
Run Initialization Agent	Storage	2Ch	Not supported	Not supported
Get SEL Info	Storage	40h	Supported	Supported
Get SEL Allocation Info	Storage	41h	Supported	Supported
Reserve SEL	Storage	42h	Supported	Supported
Get SEL Entry	Storage	43h	Supported	Supported
Add SEL Entry	Storage	44h	Supported	Supported
Partial Add SEL Entry	Storage	45h	Supported	Supported
Delete SEL Entry	Storage	46h	Supported	Supported
Clear SEL	Storage	47hh	Supported	Supported
Get SEL Time	Storage	48h	Supported	Supported
Set SEL Time	Storage	49h	Supported	Supported
Get Auxiliary Log Status	Storage	5Ah	Not supported	Not supported
Set Auxiliary Log Status	Storage	5Bh	Not supported	Not supported
Set Event Receiver	S/E	00h	Supported	Supported
Get Event Receiver	S/E	01h	Supported	Supported
Event Message	S/E	02h	Supported	Supported
Get PEF Capabilities	S/E	10h	Supported	Supported
Arm PEF Postpone Timer	S/E	11h	Supported	Supported
Set PEF Configuration Parameters	S/E	12h	Supported	Supported
Get PEF Configuration Parameters	S/E	13h	Supported	Supported
Set Last Processed Event ID	S/E	14h	Supported	Supported
Get Last Processed Event ID	S/E	15h	Supported	Supported
Alert Immediate	S/E	16h	Supported	Supported
PET Acknowledge	S/E	17h	Supported	Supported
Get Device SDR Info	S/E	20h	Supported	Supported
Get Device SDR	S/E	21h	Supported	Supported

COMMAND	NETFn	CMD	ARRIVING FROM RMCP INTERFACE	ARRIVING FROM IPM CONTROLLER
Reserve Device SDR Repository	S/E	22h	Supported	Supported
Get Sensor Reading Factors	S/E	23h	Supported	Supported
Set Sensor Hysteresis	S/E	24h	Supported	Supported
Get Sensor Hysteresis	S/E	25h	Supported	Supported
Set Sensor Threshold	S/E	26h	Supported	Supported
Get Sensor Threshold	S/E	27h	Supported	Supported
Set Sensor Event Enable	S/E	28h	Supported	Supported
Get Sensor Event Enable	S/E	29h	Supported	Supported
Re-arm Sensor Events	S/E	2Ah	Supported	Supported
Get Sensor Event Status	S/E	2Bh	Supported	Supported
Get Sensor Reading	S/E	2Dh	Supported	Supported
Set Sensor Type	S/E	2Eh	Supported	Supported
Get Sensor Type	S/E	2Fh	Supported	Supported
Get PICMG Properties	PICMG	00h	Supported	Supported
Get Address Info	PICMG	01h	Supported	Supported
Get Shelf Address Info	PICMG	02h	Supported	Supported
Set Shelf Address Info	PICMG	03h	Supported	Supported
FRU Control	PICMG	04h	Supported	Supported
Get FRU LED Properties	PICMG	05h	Supported	Supported
Get LED Color Capabilities	PICMG	06h	Supported	Supported
Set FRU LED State	PICMG	07h	Supported	Supported
Get FRU LED State	PICMG	08h	Supported	Supported
Set IPMB State	PICMG	09h	Supported	Supported
Set FRU Activation Policy	PICMG	0Ah	Supported	Supported
Get FRU Activation Policy	PICMG	0Bh	Supported	Supported
Set FRU Activation	PICMG	0Ch	Supported	Supported
Get Device Locator Record ID	PICMG	0Dh	Supported	Supported

COMMAND	NetFn	CMD	ARRIVING FROM RMCP INTERFACE	ARRIVING FROM IPM CONTROLLER
Set Port State	PICMG	0Eh	Supported	Supported
Get Port State	PICMG	0Fh	Supported	Supported
Compute Power Properties	PICMG	10h	Supported	Supported
Set Power Level	PICMG	11h	Supported	Supported
Get Power Level	PICMG	12h	Supported	Supported
Renegotiate Power	PICMG	13h	Not supported	Supported
Get Fan Speed Properties	PICMG	14h	Supported	Supported
Set Fan Level	PICMG	15h	Supported	Supported
Get Fan Level	PICMG	16h	Supported	Supported
Bused Resource	PICMG	17h	Not supported	Supported
Get IPMB Link Info	PICMG	18h	Supported	Supported
Get Shelf Power Allocation	PICMG	19h	Supported	Supported
Get Shelf Manager IPMB Address	PICMG	1Bh	Supported	Supported
Set Fan Policy	PICMG	1Ch	Not supported	Not supported
Get Fan Policy	PICMG	1Dh	Not supported	Not supported
FRU Control Capabilities	PICMG	1Eh	Supported	Supported
FRU Inventory Device Lock Control	PICMG	1Fh	Supported	Supported
FRU Inventory Device Write	PICMG	20h	Supported	Supported
Get Shelf Manager IP Addresses	PICMG	21h	Supported	Supported

Note: Commands in the table above that are marked by (*) are supported from the IPMB-0 side only if the configuration parameter **ALLOW_ALL_COMMANDS_FROM_IPMB** is set to **TRUE**.

The command “Get Self Test Results” returns the results of the POST tests performed by the Monterey Linux U-Boot at the startup of the ShMM. If all tests have passed, the status code 0x55 is returned. If any tests have failed, the device-specific failure code 0x59 is returned. The third byte contains the following bit mask in that case:

- [7:5] Reserved
- [4] 1b = Ethernet test failed
- [3] 1b = UART test failed
- [2] 1b = U-Boot CRC test failed
- [1] 1b = I2C test failed
- [0] 1b = Memory test failed.

6.2 *Pigeon Point Extension Commands and Sensors*

In addition to the specification-defined IPMI commands listed above, the Shelf Manager implements several Pigeon-Point-defined IPMI commands and sensors for the convenience of the System Manager.

The first set of mechanisms provides an alternative for TELCO alarm control to the PEF-based mechanism. The mechanisms consist of one sensor and two Pigeon Point extension commands. The commands can be issued by the System Manager over the RMCP interface and implement the following functionality:

- set/clear specified TELCO alarms (both the set and clear operations are performed atomically within the same command)
- get the number of the TELCO alarm sensor. This sensor can then be used to read the current state of TELCO alarms in an IPMI-compliant way.

Some ShMM carriers support general purpose digital output pins that are intended to be accessible by the System Manager and other external applications. There is no explicit support for such entities in the IPMI specification, so a second set of Pigeon Point extension commands is provided to allow the System Manager to work with such digital outputs.

The commands can be issued by the System Manager over the RMCP interface and provide the following functionality:

- query the properties and number of available digital outputs;
- get the current state of digital outputs;
- set/clear digital outputs.

Currently, these commands are implemented for selected carriers on some FRUs of the Shelf Manager (IPMB address 20h). However, in future they may be implemented on other IPM controllers/FRUs.

Another set of Pigeon Point extensions provide additional functionality, currently including the following:

- Reading the contents of a Shelf FRU Info multirecord
- Notifying the Shelf Manager about an extracted FRU;
- Initiating a Shelf Manager switchover;
- Subscribing for event notifications.

The commands in this set are implemented as OEM Group commands (Network Function Code 2Eh) and require that the first three bytes of the request and response be the Pigeon Point Systems IANA: (0Ah, 40h, 00h).

A final set of Pigeon Point extensions serves to improve the performance of Pigeon Point OpenHPI, when operating with the Pigeon Point Shelf Manager. The Pigeon Point Shelf Manager implements an internal cache of the Device SDR Repository for every known IPM controller. The Shelf

Manager uses that cache for internal needs and initially did not provide an external interface to access it. The Shelf Manager periodically checks the consistency of this cache. A set of Pigeon Point OEM commands provides an external interface to this cache, including the following functions:

- Getting information about the cached Device SDR Repository;
- Obtaining an SDR from the cached Device SDR Repository.
- Reserving the cached Device SDR Repository.

6.2.1 TELCO Alarm Sensor

This discrete sensor has sensor type DFh, event/reading type 6Fh (sensor-specific discrete) and is implemented on LUN 0 of the Shelf Manager IPM controller (20h). The following offsets are defined for the sensor:

- 0 – Minor Alarm active,
- 1 – Major Alarm active,
- 2 – Critical Alarm active,
- 3 – Alarm Cutoff active.

6.2.2 Set/Clear TELCO Alarms

This extension command is implemented by the Shelf Manager IPM controller (address 20h).

Network Function Code (NetFN): 3Eh

Command Code: D0h

Table 36 Set/Clear TELCO Alarms Command

	BYTE	DATA FIELD
Request Data	1	<i>Set Alarm Mask</i> A bit field that defines which alarm to set. [7:3] Reserved [2] Set Critical Alarm [1] Set Major Alarm [0] Set Minor Alarm
	2	<i>Clear Alarm Mask</i> A bit field that defines which alarm to clear. [7:3] Reserved [2] Clear Critical Alarm [1] Clear Major Alarm [0] Clear Minor Alarm
Response Data	1	<i>Completion Code</i>

6.2.3 Get TELCO Alarm Sensor Number

This extension command is implemented by the Shelf Manager IPM controller (address 20h). It allows the caller to obtain the sensor number for the TELCO Alarm sensor, after which the caller can read the state of TELCO Alarms in an IPMI-compliant way.

Network Function Code (NetFN): 3Eh
Command Code: D1h

Table 37 Get TELCO Alarm Sensor Number Command

	BYTE	DATA FIELD
Request Data	-	
Response Data	1	<i>Completion Code</i>
	2	<i>Sensor Number.</i> Identifies the TELCO alarm sensor.

6.2.4 Query Digital Output Properties

This extension command returns the number of available digital outputs.

Network Function Code (NetFN): 3Eh
Command Code: D4h

Table 38 Query Digital Output Properties Command

	BYTE	DATA FIELD
Request Data	1	<i>FRU Device ID.</i> Indicates an individual FRU device to query.
Response Data	1	<i>Completion Code</i>
	2	<i>Digital Output Count.</i> The number of digital outputs supported by this FRU.

6.2.5 Get Digital Outputs

This extension command allows the caller to query the current state of selected digital outputs. The state of each digital output is represented with one bit, so one byte represents the state of 8 digital outputs. All digital outputs are logically divided into groups, with each group containing 8 digital outputs and fitting in one byte. Group 0 comprises digital outputs 0-7, group 1 comprises digital outputs 8-15, etc.

The caller specifies the starting and ending group numbers for the digital outputs desired. Both numbers are optional; the default for the starting group number is 0, the default for the ending group number is the last group. Omitting both parameters causes retrieval of the state of all available digital outputs.

Network Function Code (NetFN): 3Eh
Command Code: D3h

Table 39 Get Digital Outputs Command

	BYTE	DATA FIELD
Request Data	1	<i>FRU Device ID.</i> Indicates an individual FRU device to query.
	(2)	<i>Starting group ID.</i> This parameter is optional; it defaults to 0.

	(3)	<i>Ending group ID.</i> This parameter is optional; it defaults to the last group.
Response Data	1	<i>Completion Code.</i>
	2	<i>Data byte 1.</i> The state of digital outputs for the first requested group

	N	<i>Data byte N-1.</i> The state of digital outputs for the last requested group.

6.2.6 Set/Clear Digital Outputs

This extension command allows the caller to simultaneously set/clear the current state of digital outputs from the selected group. The state of each digital output is represented with one bit, so one byte represents the state of 8 digital outputs. All digital outputs are logically divided into groups, with each group containing 8 digital outputs and fitting in one byte. Group 0 comprises digital outputs 0-7, group 1 comprises digital outputs 8-15, etc.

The specified digital outputs within the group are set/cleared atomically with one operation.

Network Function Code (NetFN): 3Eh

Command Code: D2h

Table 40 Set/Clear Digital Outputs Command

	BYTE	DATA FIELD
Request Data	1	<i>FRU Device ID.</i> Indicates an individual FRU device to access.
	2	<i>Group ID.</i> Indicates the group of digital outputs to be set /cleared.
	3	<i>Digital Outputs Set Mask Bits.</i> A bit mask of digital outputs to be set within the group specified. [7] – 1b = set digital output 7 in the group specified [6] – 1b = set digital output 6 in the group specified [5] – 1b = set digital output 5 in the group specified [4] – 1b = set digital output 4 in the group specified [3] – 1b = set digital output 3 in the group specified [2] – 1b = set digital output 2 in the group specified [1] – 1b = set digital output 1 in the group specified [0] – 1b = set digital output 0 in the group specified

	4	<i>Digital Outputs Clear Mask Bits.</i> A bit mask of digital outputs to be cleared within the group specified. [7] – 1b = clear digital output 7 in the group specified [6] – 1b = clear digital output 6 in the group specified [5] – 1b = clear digital output 5 in the group specified [4] – 1b = clear digital output 4 in the group specified [3] – 1b = clear digital output 3 in the group specified [2] – 1b = clear digital output 2 in the group specified [1] – 1b = clear digital output 1 in the group specified [0] – 1b = clear digital output 0 in the group specified
Response Data	1	<i>Completion Code.</i>

6.2.7 Get Shelf FRU Record Data

Using this Pigeon Point extension command, a specified range of bytes can be retrieved from any multirecord in the Shelf FRU Information. This command can be applied to any PICMG-defined or OEM-defined record from the Shelf FRU Information, including the Address Table Record (PICMG Record ID = 10h), Shelf Power Distribution Record (PICMG Record ID = 11h), etc.

The type of the record to be retrieved is specified by the Manufacturer IANA and manufacturer-specific record type. The 0-based record number can be used to distinguish different instances of the same type of record. (There may be several records of the same type in the Shelf FRU Information.)

The number of bytes read by this command is limited by the size of an IPMB packet and must be 20 bytes or fewer.

Network Function Code (NetFN): 2Eh

Command Code: 1h

Table 41 Get Shelf FRU Record Data Command

	BYTE	DATA FIELD
Request Data	1	<i>PPS IANA Low Byte.</i> A value 0Ah shall be used.
	2	<i>PPS IANA Middle Byte.</i> A value 40h shall be used.
	3	<i>PPS IANA High Byte.</i> A value 00h shall be used.
	4	<i>Record Manufacturer IANA Low Byte.</i>
	5	<i>Record Manufacturer IANA Middle Byte.</i>
	6	<i>Record Manufacturer IANA High Byte.</i>
	7	<i>Record Type.</i>
	8	<i>Record Number.</i> This field specifies the number of the record to be accessed. The record numbers are 0-based.
	9	<i>Offset.</i> This field specifies the offset from the beginning of the record in bytes.
	10	<i>Byte Count.</i> This field specifies the number of bytes to be read.
Response Data	1	<i>Completion Code</i>
	2	<i>PPS IANA Low Byte.</i> A value 0Ah shall be used.
	3	<i>PPS IANA Middle Byte.</i> A value 40h shall be used.
	4	<i>PPS IANA High Byte.</i> A value 00h shall be used.
	5	<i>Count read.</i> Indicates the number of bytes in the <i>Data</i> field.
	6:N+5	<i>Data.</i> This variable length field contains data retrieved from the record. N is specified in the <i>Count read</i> byte.

For example, to retrieve the first 10 bytes of the first Address Table record in the Shelf FRU Information, use the following parameters:

Record Manufacturer IANA Low Byte = 5Ah (PICMG)
Record Manufacturer IANA Middle Byte = 31h (PICMG)
Record Manufacturer IANA High Byte = 00h (PICMG)
Record type = 10h (Address Table)
Record Number = 00h (first record)
Offset = 00h
Byte Count = Ah (10 bytes)

6.2.8 Notify Shelf Manager About an Extracted FRU

This Pigeon Point extension command is sent to the logical Shelf Manager (20h) and informs the Shelf Manager that the specified FRU (which is typically in the communication lost (M7) state) is not in the shelf any more and can be moved to state M0, and have all its resources released. If the FRU Device ID is 0, the command applies to all FRUs represented by the specified IPM controller. This command is similar in effects to the CLI command **setextracted**.

Unless the “forced mode” is specified, the Shelf Manager verifies that the target FRU is indeed in the “Communication Lost” (M7) state; if not, the completion code D5 (Command Not Supported in Present State) is returned.

Network Function Code (NetFN): 2Eh
Command Code: 2h

Table 42 Notify Shelf Manager About an Extracted FRU Command

	BYTE	DATA FIELD
Request Data	1	<i>PPS IANA Low Byte</i> . A value 0Ah shall be used.
	2	<i>PPS IANA Middle Byte</i> . A value 40h shall be used.
	3	<i>PPS IANA High Byte</i> . A value 00h shall be used.
	4	<i>IPMB Address</i> . Indicates IPMB address of the target IPM Controller
	5	<i>Target FRU Device ID</i> . Indicates the FRU Device ID that is targeted by this command.
	(6)	<i>Flags</i> . An optional bit field: [7:1] Reserved; shall be set to 0 [0] <i>Forced Mode</i> . This bit is set to 1b if “forced mode” is to be used; in this mode the Shelf Manager does not check that the target FRU is indeed in state M7.
Response Data	1	<i>Completion Code</i>
	2	<i>PPS IANA Low Byte</i> . A value 0Ah shall be used.
	3	<i>PPS IANA Middle Byte</i> . A value 40h shall be used.
	4	<i>PPS IANA High Byte</i> . A value 00h shall be used.

6.2.9 Initiate Shelf Manager Switchover

This Pigeon Point extension command can be targeted to the logical Shelf Manager address (20h) or alternatively to the physical address for either the active or backup Shelf Managers. It initiates a switchover from the active to the backup Shelf Manager. If a switchover cannot be performed (for instance, if there is no backup Shelf Manager available), the completion code D5 (Command Not Supported in Present State) is returned.

Network Function Code (NetFN): 2Eh
Command Code: 3h

Table 43 Initiate Shelf Manager Switchover Command

	BYTE	DATA FIELD
Request Data	1	<i>PPS IANA Low Byte.</i> A value 0Ah shall be used.
	2	<i>PPS IANA Middle Byte.</i> A value 40h shall be used.
	3	<i>PPS IANA High Byte.</i> A value 00h shall be used.
	4	<i>Flags.</i> [7:1] Reserved. Shall be set to 0b. [0] Active Reboot Mode. If this command is sent to the active Shelf Manager and this bit is set to 1, the Shelf Manager reboots its ShMM; if this bit is set to 0, the Shelf Manager exits without rebooting the ShMM. This bit is not applicable if the command is sent to the Backup Shelf Manager.
Response Data	1	<i>Completion Code</i>
	2	<i>PPS IANA Low Byte.</i> A value 0Ah shall be used.
	3	<i>PPS IANA Middle Byte.</i> A value 40h shall be used.
	4	<i>PPS IANA High Byte.</i> A value 00h shall be used.

6.2.10 Subscribe for Event Notifications

This Pigeon Point extension command can be used by an RMCP client to subscribe or unsubscribe for event notification on the current RMCP session. This command should be targeted to the logical Shelf Manager address (20h). It either subscribes or unsubscribes for event notification on the current session, depending on the value of the parameter *Flags*. If a session is subscribed for notifications, each time a new entry is placed in the SEL, a notification in the form of an Add SEL Entry request is sent to the RMCP client over this session. The client should confirm the notification by sending an Add SEL Entry response, according to the normal IPMI rules. The subscription is automatically terminated when the corresponding session is closed.

Network Function Code (NetFN): 2Eh

Command Code: 4h

Table 44 Subscribe for Event Notifications Command

	BYTE	DATA FIELD
Request Data	1	<i>PPS IANA Low Byte.</i> A value 0Ah shall be used.
	2	<i>PPS IANA Middle Byte.</i> A value 40h shall be used.
	3	<i>PPS IANA High Byte.</i> A value 00h shall be used.
	4	<i>Flags.</i> A bit field that specifies the action [0]: 1b = subscribe for event notifications on the current session; 0b = unsubscribe [7:1] Reserved. Shall be set to 0.
Response Data	1	<i>Completion Code</i>
	2	<i>PPS IANA Low Byte.</i> A value 0Ah shall be used.
	3	<i>PPS IANA Middle Byte.</i> A value 40h shall be used.
	4	<i>PPS IANA High Byte.</i> A value 00h shall be used.

6.2.11 Set Shelf FRU Record Data

Using this Pigeon Point extension command, a specified range of bytes can be written into any multirecord in the Shelf FRU Information. This command can be applied to any PICMG-defined or OEM-defined record in the Shelf FRU Information, including the Address Table Record (PICMG Record ID = 10h), Shelf Power Distribution Record (PICMG Record ID = 11h), etc.

The type of the record to be written is specified by the Manufacturer IANA and manufacturer-specific record type. The 0-based record number can be used to distinguish different instances of the same type of record. (There may be several records of the same type in the Shelf FRU Information.)

The implementation of the command takes care of updating the checksum of the target record so that the checksum stays correct.

The number of bytes to be written by this command is limited by the size of IPMB packet and must be 15 bytes or fewer. This number is specified by the parameter “Byte Count” and must be equal to the actual number of data bytes in the command. If the actual number of data bytes in a command does not correspond to the value of the parameter “Byte Count”, the command is rejected.

Network Function Code (NetFN): 2Eh

Command Code: 05h

IANA: 00400Ah (Assigned to PPS)

Table 45 Set Shelf FRU Record Data Command

	BYTE	DATA FIELD
Request Data	1	<i>PPS IANA Low Byte</i>
	2	<i>PPS IANA Middle Byte.</i>
	3	<i>PPS IANA High Byte.</i>
	4	<i>Record Manufacturer IANA Low Byte</i>
	5	<i>Record Manufacturer IANA Middle Byte</i>
	6	<i>Record Manufacturer IANA High Byte</i>
	7	<i>Record Type</i>
	8	<i>Record Number.</i> This field specifies the number of the record to be accessed. The record numbers are 0-based.
	9	<i>Offset.</i> This field specifies the offset from the beginning of the record in bytes.
	10	<i>Byte Count.</i> This field specifies the number of bytes to be written.
	11:N+10	<i>Data.</i> This variable length field contains data to be written into the record.
Response Data	1	<i>Completion Code</i>
	2	<i>PPS IANA Low Byte</i>
	3	<i>PPS IANA Middle Byte.</i>
	4	<i>PPS IANA High Byte</i>
	5	<i>Count written.</i> Indicates the number of bytes written to the record.

For example, to set the first 9 bytes of the first Address Table record in the Shelf FRU Information, use the following parameters:

Record Manufacturer IANA Low Byte = 5Ah (PICMG)
Record Manufacturer IANA Middle Byte = 31h (PICMG)
Record Manufacturer IANA High Byte = 00h (PICMG)
Record type = 10h (Address Table)
Record Number = 00h (first record)
Offset = 00h
Byte Count = 09h
Data = 41h 08h 00h 12h 09h 00 43h 0Ah 00 (9 bytes)

6.2.12 Get Cached Device SDR Info

This Pigeon Point extension command can be used by an RMCP client to get information about the device SDRs from a shelf's IPM controllers that the Pigeon Point Shelf Manager caches in its internal data structures during operation. The command request and response data are structured like the corresponding data in the IPMI "Get Device SDR Info" command with minimal changes.

Network Function Code (NetFN): 2Eh

Command Code: 6h

Table 46 Get Cached Device SDR Info

	BYTE	DATA FIELD
Request Data	1	<i>IPMB Address</i> . Indicates IPMB address of an IPM Controller for which a Device SDR Repository is cached.
Response Data	1	<i>Completion Code</i>
	2	<i>Number of sensors in device for LUN this command is addressed to.</i>
	3	<i>Flags:</i> <i>Dynamic population</i> [7]: 0b =static sensor population. The number of sensors handled by this device is fixed, and a query returns records for all sensors. 1b = dynamic sensor population. The device may have its sensor population vary during 'run time' (defined as any time other than when an install operation is in progress) [6:4] Reserved <i>Device LUNs</i> [3]: 1b = LUN 3 has sensors [2]: 1b = LUN 2 has sensors [1]: 1b = LUN 1 has sensors [0]: 1b = LUN 0 has sensors
	4:7	<i>Sensor population change indicator</i> . LS byte first. Four byte timestamp or counter. Updated or incremented each time the sensor population changes. This field is not provided if the flags indicate a static sensor population.

6.2.13 Get Cached Device SDR

This Pigeon Point extension command can be used by an RMCP client to obtain an SDR from the collection of device SDRs from various IPM controllers that the Pigeon Point Shelf Manager caches in its internal data structures during operation. The command request and response data are structured like the corresponding data in the IPMI “Get Device SDR” command with minimal changes.

Network Function Code (NetFN): 2Eh

Command Code: 7h

Table 47 Get Cached Device SDR

	BYTE	DATA FIELD
Request Data	1	<i>IPMB Address</i> . Indicates IPMB address of an IPM Controller for which the Device SDR Repository is cached
	2	<i>Reservation ID Low Byte</i> . Only required for partial reads with non-zero 'Offset into record' field. Use 0000h for Reservation ID otherwise.
	3	<i>Reservation ID High Byte</i> .
	4	<i>Record ID of record to Get. Low Byte</i> . 0000h returns the first record.
	5	<i>Record ID of record to Get. High Byte</i> .
	6	<i>Offset into record</i>
	7	<i>Bytes to read</i> . FFh means read entire record.
Response Data	1	<i>Completion Code</i> . Generic, plus following command specific: 80h = record changed. This status returned if any of the record contents has been altered since the last time the Requester issued the request with 00h for the <i>Offset into record</i> field.
	2	<i>Record ID for the next record. Low Byte</i> .
	3	<i>Record ID for the next record. High Byte</i> .
	4:N+3	<i>Requested bytes from record</i>

6.2.14 Reserve Cached Device SDR Repository

This Pigeon Point extension command can be used by an RMCP client to obtain a *Reservation ID* for the collection of device SDRs from various IPM controllers that the Pigeon Point Shelf Manager caches in its internal data structures during operation. The Reservation ID is a part of the mechanism that is used to notify the requester that a record may have changed during the process of a multi-part read. The command request and response data are structured like the corresponding data in the IPMI “Reserve Device SDR Repository” command with minimal changes.

Network Function Code (NetFN): 2Eh

Command Code: 8h

Table 48 Reserve Cached Device SDR Repository

	BYTE	DATA FIELD
Request Data	1	<i>IPMB Address.</i> Indicates IPMB address of the IPM Controller which Device SDR Repository is cached
Response Data	1	<i>Completion Code</i>
	2	<i>Reservation ID. Low Byte.</i> 0000h reserved.
	3	<i>Reservation ID. High Byte.</i>

6.3 Deactivation Scenarios for the Shelf Manager

The ATCA command “Set FRU Activation (Deactivate)” can be applied to the IPM controllers representing the active Shelf Manager – both the logical Shelf Manager (IPMB address 0x20, FRU 0) and the physical Shelf Manager IPM controller (with IPMB address derived from the hardware address of the active Shelf Manager). As a result of this command, the corresponding IPM controllers are deactivated (brought to state M1) but Shelf Manager functional operation is not affected and no switchover to the backup Shelf Manager is initiated.

Another possibility for the deactivation of the physical IPM controller on the active Shelf Manager is opening the Hot Swap handle on the ShMC. In that case, the physical IPM controller transitions to the state M1 as well

Starting from version 2.5.0, in both of these cases a switchover to the backup Shelf Manager occurs, if the backup Shelf Manager exists and the configuration variable **SWITCHOVER_ON_HANDLE_OPEN** is set to **TRUE** in the Shelf Manager configuration file. Previously, a switchover took place only in the case of deactivation via the Hot Swap handle.

The backup Shelf Manager is not considered available for switchover if it is in state M1 (either due to the handle being opened or due to programmatic deactivation). In this situation, programmatic requests for switchover fail; a switchover only takes place if the active Shelf Manager is physically removed from the shelf.

The scenarios above are not explicitly covered in the AdvancedTCA (PICMG 3.0) specification. The implementation described above became possible only after the deactivation of the physical IPM controller of the active Shelf Manager was excluded from the shelf-wide power down and power cycle operations, that could happen during the normal operation of the shelf, for example in the following cases:

- powering off all FRUs in the shelf as a result of a critical temperature alert;
- receiving the IPMI command “Chassis Control” with the control option “Power Down” or “Power Cycle”.

Performing a switchover in these cases is undesirable and may be even impossible (because the backup Shelf Manager may also be in state M1).

However, starting from release 2.4.1, dedicated Shelf Manager FRUs are not affected by the shelf-wide power down operations mentioned above.

7 Revision History

This section records the major revisions in this document, starting with release 2.1.0 of the Shelf Manager.

7.1 *Release 2.1.0*

- Section 3.2: Adds CLI commands **gethysteresis**, **getipmbstate** to the table that summarizes the CLI commands.
- Section 3.25: Adds the description of the CLI command **gethysteresis**.
- Section 3.26: Adds the description of the CLI commands **getipmbstate**.
- Section 3.49: Adds the description of the CLI command **sethysteresis**.
- Section 3.50: Adds the description of the CLI command **setipmbstate**.
- Section 4: Adds descriptions of Web interface for the CLI commands **gethysteresis**, **sethysteresis**.

7.2 *Release 2.2.0*

- Section 3.2: Augments the table that summarizes the CLI commands to identify those that are available on the Backup Shelf Manager.
- Section 3.24: Adds the description of the CLI command **getfruledstate**.
- Section 3.35: Adds the description of the CLI command **poll**.
- Section 3.48: Adds the description of the CLI command **setfruledstate**.
- Section 3.54: Adds the description of the CLI command **setpowerlevel**.
- Section 5.1.1: Modifies the access mode of the MIB variable **board-basic-powered** from 'read-only' to 'read-write'.

7.3 *Release 2.3.0*

- Overall: implements a change in Shelf Manager product name from 'IPM Sentry' to 'Pigeon Point'.
- Section 3.2: In the table that summarizes the CLI commands, augments the commands available on the Backup Shelf Manager.
- Sections 3.6, 3.20: Introduces a new option **info** for CLI commands **alarm** and **frucontrol**.
- Section 3.32: The CLI command **ipmc** shows information about FRUs in the state M1, if they were known previously to the Shelf Manager. Before the version 2.3, information about such FRUs was not shown by this command.
- Section 3.39: Introduces the CLI command **sendcmd**.
- Section 3.41: Adds the option **-t** for the CLI command **sensordata**. If the option **-t**, is specified, information is displayed only for threshold-based sensors that have at least one of their thresholds crossed.
- Section 3.58.3: Adds the option **-v** (verbosity) for the CLI command **shelf power_management**.

- Section 4: Adds descriptions of Web interface for the CLI commands **alarm**, **getfruledstate**, **getipmbstate**, **getsensoreventenable**, **session**, **setfruledstate**, **setipmbstate**, **setsensoreventenable**.
- Section 4.33: Updates the Web interface for the CLI command **sel**.
- Section 5.1.4: Modifies the descriptions of the MIB variables **shelf-manager-active** and **shelf-manager-reset**.
- Section 6: Adds a table of IPMI commands implemented by the Shelf Manager. This table specifies whether a command is supported if it arrives from RMCP interface or from an IPM controller.
- Section 6.2.6: Corrects the command code for the extension command “Set/Clear Digital Outputs” to D2h.
- Section 6.3: Describes the deactivation scenarios for the active Shelf Manager.

7.4 *Release 2.4.0*

- Sections 3.21, 3.23, 3.38, 3.44, 3.47: Includes descriptions for CLI commands **getbootdev**, **getfanpolicy**, **sendamc**, **setbootdev**, **setfanpolicy**.
- Section 3.48: Corrects the description of the CLI command **setfruledstate**.
- Section 3.59: Updates the **shelfaddress** command description to reflect its use of full ASCII rather than packed ASCII when encoding the characters of a new shelf address string.
- Section 4.24: Corrects the description of the Web interface for the CLI command **setfruledstate**.
- Section 6.2: Adds the description of the extension commands “Notify Shelf Manager About an Extracted FRU”, “Initiate Shelf Manager Switchover”, “Subscribe for Event Notifications”, “Get Shelf FRU Record Data”.

7.5 *Release 2.4.1*

- Section 3.5: Adds a description of the CLI command **airfilterreplaced**.
- Section 3.65: Changes the CLI **version** command output to reflect carrier subtype and version.
- Section 4.35: Changes the Web **version** command output to reflect carrier subtype and version.
- Section 5.1.3 Changes the description of the SNMP MIB variable **powersupply-fail** (see Table 15) to clarify that this variable is only available in PICMG 2.x systems.
- Section 6.2.9: Changes the name of the last bit in “Initiate Shelf Manager Switchover” command (see Table 43) to “Active Reboot Mode”. Note that this change reverses the polarity of this bit.

7.6 *Release 2.4.2*

- Section 3.5: Modifies the description of the CLI command **airfilterreplaced** to reflect the fact that an IPMI event is no longer automatically generated when the expiration date is reached or passed. Another modification reflects the usage of a Pigeon Point defined multirecord to store the dates associated with air filter replacements.

- Section 3.59: Adds a description of the option **-x** to the CLI command **shelfaddress**. This option allows a user to specify the shelf address as a sequence of hexadecimal bytes.

7.7 *Release 2.4.3*

- Section 3.35: Adds a description of the CLI command **networkelementid**.
- Section 3.4.2: Changes the description of the CLI command **activate** to indicate that the IPMI command “FRU Activation Policy (Clear Locked)” is also sent.
- Section 6.2.11: Adds a description of the Pigeon Point extension IPMI command “Set Shelf FRU Record Data”.

7.8 *Release 2.4.4*

- Section 3.12: Changes the description of the CLI command **debuglevel** to reflect that separate debug levels are now supported for system log output and for console output.
- Section 3.31: Modifies the **clia shelf help** example to reflect updates in the help text.

7.9 *Release 2.5.0*

- Sections 3.4, 3.11, 3.14, 3.15, 3.16, 3.17, 3.18, 3.19, 3.20, 3.22, 3.24, 3.45, 3.48, 3.52: Changes the syntax for the following CLI commands: **activate**, **deactivate**, **fans**, **fru**, **frudata**, **frudatar**, **frudataw**, **frucontrol**, **getfanlevel**, **getfruledstate**, **setextracted**, **setfruledstate**, **setlocked**. These commands can now address a specific AMC by its number.
- Section 3.7: Adds the description of the new CLI command **amcportstate**.
- Section 3.11: Changes the description of the CLI command **deactivate** to reflect that programmatic deactivation of the active Shelf Manager now causes a switchover.
- Section 3.20: Adds clarification how the command “FRU Control (Cold Reset)” is implemented on the Shelf Manager.
- Sections 3.25, 3.29, 3.30, 3.40, 3.41: Adds the description of the option **-f <fru_id>** to sensor-related CLI commands **gethysteresis**, **getsensoreventenable**, **getthreshold**, **sensor**, **sensordata**. This option enables the user to select sensors that belong to a specified FRU.
- Section 3.55: Adds substantial detail about the parameters of the command **setsensoreventenable**.
- Section 3.62: Adds a description of the forced switchover (option **-forced**).
- Section 4.11: Adds a description of the new Web interface command “Get Pigeon Point MIB Files”.
- Section 5.1.2: Adds a new read-write MIB variable **fantray-fan-level**. Retrieving and setting of fan levels can be accomplished via this variable.
- Section 5.1.3: Corrects the description of **powersupply-slot-number** variable.
- Section 5.1.7: Adds new MIB variables: **rmcp-interface-status**, **shelf-fru-found-status**, **active-status**. These variables report the Shelf Manager status.
- Section 5.2.9: Corrects the OID example for FRU Information MIB variables.

- Section 6.3: Reflects substantial changes due to the fact that programmatic deactivation of the active Shelf Manager now causes a switchover.

7.10 *Release 2.5.2*

- Section 3.4: Adds information about storing, replacing and deleting HPDL binary data and SDRs in FRU Information
- New section 3.28.19: Describes the new parameter **pet_format** for the command **getpefconfig**.
- Section 3.32: Adds coverage of the additional three-part representation for the firmware revision.
- Section 3.34: Adds information about the command **minfanlevel** in shelves with zoned cooling.
- Section 3.47: Clarifies the purpose of the command **setfanpolicy**.
- New section 3.53.14: Describes the new parameter **pet_format** for the command **setpefconfig**.
- New section 3.55: Describing the command **setsensordata**.
- Section 3.58.3: Adds information about the message that is displayed when some fan trays are not operational.
- Section 3.58.6: Clarifies the description of the **shelf activation** command.
- Section 3.58.7: Clarifies the description of the **shelf deactivation** command. Corrects the example of the execution of the command.
- Section: 4.11: Changes the web “Get Pigeon Point MIB Files” command. A user can choose either of two Pigeon Point MIB files:PPS-SENTRY-MIB or PPS-PET-MIB.
- New section 5.1.8: Describes the SNMP variables that return the version of the Shelf Manager.
- New section 5.1.9: Describes the SNMP variables that access TELCO alarms.
- New sections 6.2.12, 6.2.13, 6.2.14: Describe Pigeon Point OEM commands to access the cached device SDRs in the Shelf Manager.

7.11 *Release 2.5.3*

- Section 4.31: Changed the request web page for the “Shelf Information” command to reflect an implementation modification.